MOTOROLA M68000 FAMILY

Programmer's Reference Manual

(Includes CPU32 Instructions)

TABLE OF CONTENTS

Paragraph Number	Title	Page Number
	Section 1	
	Introduction	
1.1	Integer Unit User Programming Model.	1-2
1.1.1	Data Registers (D7 – D0)	
1.1.2	Address Registers (A7 – A0)	1-2
1.1.3	Program Counter	
1.1.4	Condition Code Register	
1.2	Floating-Point Unit User Programming Model	
1.2.1	Floating-Point Data Registers (FP7 – FP0)	
1.2.2	Floating-Point Control Register (FPCR)	
1.2.2.1	Exception Enable Byte.	
1.2.2.2 1.2.3	Mode Control Byte.	
1.2.3	Floating-Point Status Register (FPSR) Floating-Point Condition Code Byte.	
1.2.3.2	Quotient Byte.	
1.2.3.3	Exception Status Byte.	
1.2.3.4	Accrued Exception Byte.	
1.2.4	Floating-Point Instruction Address Register (FPIAR)	
1.3	Supervisor Programming Model.	
1.3.1	Address Register 7 (A7)	
1.3.2	Status Register	1-10
1.3.3	Vector Base Register (VBR)	
1.3.4	Alternate Function Code Registers (SFC and DFC)	
1.3.5	Acu Status Register (MC68EC030 only)	
1.3.6	Transparent Translation/access Control Registers	1-12
1.3.6.1	Transparent Translation/access Control Register Fields for the M68030	1-12
1.3.6.2	Transparent Translation/access Control Register Fields for the M68040.	1-13
1.4	Integer Data Formats	1-14
1.5	Floating-Point Data Formats	
1.5.1	Packed Decimal Real Format	
1.5.2	Binary Floating-Point Formats	
1.6	Floating-Point Data Types	
1.6.1	Normalized Numbers.	
1.6.2	Denormalized Numbers.	
1.6.3 1.6.4	Zeros	
1.6.5	Infinities	
1.6.6	Data Format and Type Summary	
1.7	Organization of Data in Registers	
1.7.1	Organization of Integer Data Formats in Registers	
MOTOROLA	M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL	ш

©MOTOROLA INC., 1992

TABLE OF CONTENTS (Continued)

Paragraph Number	Title	Page Number
1.7.2	Organization of Integer Data Formats in Memory	1-27
1.7.3	Organization of Fpu Data Formats in Registers and Memory	1-30
	Section 2	
	Addressing Capabilities	
2.1	Instruction Format	2-1
2.2	Effective Addressing Modes	
2.2.1	Data Register Direct Mode	
2.2.2	Address Register Direct Mode	
2.2.3	Address Register Indirect Mode	
2.2.4	Address Register Indirect with Postincrement Mode	
2.2.5	Address Register Indirect with Predecrement Mode	
2.2.6	Address Register Indirect with Displacement Mode	
2.2.7	Address Register Indirect with Index (8-Bit Displacement) Mode	
2.2.8	Address Register Indirect with Index (Base Displacement) Mode	
2.2.9	Memory Indirect Postindexed Mode	
2.2.10	Memory Indirect Preindexed Mode	
2.2.11	Program Counter Indirect with Displacement Mode	
2.2.12	Program Counter Indirect with Index (8-Bit Displacement) Mode	
2.2.13	Program Counter Indirect with Index (Base Displacement) Mode	
2.2.14	Program Counter Memory Indirect Postindexed Mode	
2.2.15	Program Counter Memory Indirect Preindexed Mode	
2.2.16	Absolute Short Addressing Mode	
2.2.17	Absolute Long Addressing Mode	
2.2.18	Immediate Data	
2.3	Effective Addressing Mode Summary	
2.4	Brief Extension Word Format Compatibility	
2.5	Full Extension Addressing Modes	
2.5.1	No Memory Indirect Action Mode	
2.5.2	Memory Indirect Modes	
2.5.2.1	Memory Indirect with Preindex	
2.5.2.2	Memory Indirect with Postindex	
2.5.2.3	Memory Indirect with Index Suppressed	
2.6	Other Data Structures	
2.6.1	System Stack	
2.6.2	Queues	2-29
	Section 3	
	Instruction Set Summary	
3.1	Instruction Summary	3-1
3.1.1	Data Movement Instructions	
3.1.2	Integer Arithmetic Instructions	3-6
iv	M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL	IOTOROLA

TABLE OF CONTENTS (Continued)

Paragraph Number	Title	Page Number					
3.1.3	Logical Instructions	3-8					
3.1.4	Shift and Rotate Instructions	3-8					
3.1.5	Bit Manipulation Instructions	3-10					
3.1.6	Bit Field Instructions						
3.1.7	Binary-Coded Decimal Instructions						
3.1.8	Program Control Instructions						
3.1.9	System Control Instructions.						
3.1.10 3.1.11	Cache Control Instructions (MC68040)						
3.1.11	Multiprocessor Instructions						
3.1.12	Floating-Point Arithmetic Instructions						
3.2	Integer Unit Condition Code Computation						
3.3	Instruction Examples						
3.3.1	Using the Cas and Cas2 Instructions						
3.3.2	Using the Moves Instruction						
3.3.3	Nested Subroutine Calls						
3.3.4	Bit Field Instructions	3-20					
3.3.5	Pipeline Synchronization with the Nop Instruction.						
3.4	Floating-Point Instruction Details	3-21					
3.5	Floating-Point Computational Accuracy	3-23					
3.5.1		ntermediate Result					
3.5.2	Rounding the Result						
3.6	Floating-Point Postprocessing						
3.6.1	Underflow, Round, Overflow						
3.6.2 3.7	Conditional Testing						
	Section 4						
	Integer Instructions						
	Section 5						
	Floating Point Instructions						
	Section 6 Supervisor (Privileged) Instructions						
	Section 7						
	CPU32 Instructions						
	Section 8						
	Instruction Format Summary						
8.1	Instruction Format	8-1					
MOTOROLA	M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL	v					

TABLE OF CONTENTS (Continued)

Paragraph Number	Title	Page Number
8.1.1	Coprocessor ID Field.	8-1
8.1.2	Effective Address Field	8-1
8.1.3	Register/Memory Field	8-1
8.1.4	Source Specifier Field	8-1
8.1.5	Destination Register Field	8-2
8.1.6	Conditional Predicate Field	8-2
8.1.7	Shift and Rotate Instructions	8-2
8.1.7.1	Count Register Field	8-2
8.1.7.2	Register Field.	8-2
8.1.8	Size Field.	8-4
8.1.9	Opmode Field	8-4
8.1.10	Address/Data Field	8-4
8.2	Operation Code Map	8-4

Appendix A

Processor Instruction Summary MC68000, MC68008, MC68010 Processors A-12 M68000, MC68008, and MC68010 Instruction Set A-12 MC68000, MC68008, and MC68010 Instruction Set A-12 MC68000, MC68008, and MC68010 Addressing Modes A-16 MC68000, MC68008, and MC68010 Addressing Modes A-17 MC68020 Processors. A-17 MC68020 Instruction Set A-20 MC68030 Addressing Modes A-20 MC68030 Addressing Modes A-21 MC68030 Addressing Modes A-24 MC68040 Processors. A-25 MC68040 Instruction Set A-26 MC688040 Addressing Modes A-29 MC68881/MC68882 Coprocessors A-30 MC68881/MC68882 Addressing Modes A-31 MC68851 Instruction Set A-31 MC68851 Addressing Modes A-31 Processor Instruction Summary $\begin{array}{c} A.1 \\ A.1.1 \\ A.1.2 \\ A.2 \\ A.2.1 \\ A.2.2 \\ A.3 \\ A.3.1 \\ A.3.2 \\ A.4 \\ A.4.1 \\ A.4.2 \\ A.5 \\ A.5.1 \\ A.5.2 \\ A.6 \\ A.6.1 \\ A.6.2 \end{array}$

Appendix B

B.1 B.2 B.3

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL MOTOROLA

TABLE OF CONTENTS (Concluded)

Paragraph Number	Title	Page lumber
	Appendix C S-Record Output Format	
C.1 C.2 C.3	S-Record Content. S-Record Types S-Record Creation	. C-2

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

vii

LIST OF FIGURES

Figure Numbe	r	Page Number
1-1	M68000 Family User Programming Model	1-2
1-2	M68000 Family Floating-Point Unit User Programming Model	
1-3	Floating-Point Control Register	
1-4	FPSR Condition Code Byte	
1-5	FPSR Quotient Code Byte	
1-6	FPSR Exception Status Byte	
1-7	FPSR Accrued Exception Byte	
1-8	Status Register	1-11
1-9	MC68030 Transparent Translation/MC68EC030 Access	
	Control Register Format	1-12
1-10	MC68040 and MC68LC040 Transparent Translation/MC68EC040	
	Access Control Register Format	1-13
1-11	Packed Decimal Real Format	1-16
1-12	Binary Floating-Point Data Formats	
1-13	Normalized Number Format	1-18
1-14	Denormalized Number Format	1-18
1-15	Zero Format	1-19
1-16	Infinity Format	1-19
1-17	Not-A-Number Format	1-19
1-19	Organization of Integer Data Formats in Address Registers	1-26
1-18	Organization of Integer Data Formats in Data Registers	1-26
1-20	Memory Operand Addressing	1-27
1-21	Memory Organization for Integer Operands	1-29
1-22	Organization of FPU Data Formats in Memory	1-30
2-1	Instruction Word General Format	
2-2	Instruction Word Specification Formats	
2-3	M68000 Family Brief Extension Word Formats	
2-4	Addressing Array Items	
2-5	No Memory Indirect Action	
2-6	Memory Indirect with Preindex	
2-7	Memory Indirect with Postindex	
2-8	Memory Indirect with Index Suppress	
3-1	Intermediate Result Format	
3-2	Rounding Algorithm Flowchart	
3-3	Instruction Description Format	3-33
B-1	MC68000 Group 1 and 2 Exception Stack Frame	
B-2	MC68000 Bus or Address Error Exception Stack Frame	
B-3	Four-Word Stack Frame, Format \$0	
B-4	Throwaway Four-Word Stack Frame, Format \$1	B-3
мото	ROLA M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL	ix

vi

LIST OF FIGURES (Concluded)

Figure Number	Title	Page Number
B-5	Six-Word Stack Frame, Format \$2	B-4
B-6	MC68040 Floating-Point Post-Instruction Stack Frame, Format \$3	B-4
B-7	MC68EC040 and MC68LC040 Floating-Point Unimplemented	
	Stack Frame, Format \$4	
B-8	MC68040 Access Error Stack Frame, Format \$7	
B-9	MC68010 Bus and Address Error Stack Frame, Format \$8	B-6
B-10	MC68020 Bus and MC68030 Coprocessor Mid-Instruction	
	Stack Frame, Format \$9	
B-11	MC68020 and MC68030 Short Bus Cycle Stack Frame, Format \$A	
B-12	MC68020 and MC68030 Long Bus Cycle Stack Frame, Format \$B	
B-13	CPU32 Bus Error for Prefetches and Operands Stack Frame, Format \$C.	
B-14	CPU32 Bus Error on MOVEM Operand Stack Frame, Format \$C	
B-15	CPU32 Four- and Six-Word Bus Error Stack Frame, Format \$C	
B-16	MC68881/MC68882 and MC68040 Null Stack Frame	
B-17	MC68881 Idle Stack Frame	
B-18	MC68881 Busy Stack Frame	
B-19	MC68882 Idle Stack Frame	B-11
B-20	MC68882 Busy Stack Frame	
B-21	MC68040 Idle Busy Stack Frame	B-12
B-22	MC68040 Unimplimented Instruction Stack Frame	
B-23	MC68040 Busy Stack Frame	B-13
C-1	Five Fields of an S-Record	C-1
C-2	Transmission of an S1 Record	C-4

LIST OF TABLES

Table Number	Title				
1-1	Supervisor Registers Not Related To Paged Memory Management	1-9			
1-2	Supervisor Registers Related To Paged Memory Management	1-10			
1-3	Integer Data Formats	1-15			
1-4	Single-Precision Real Format Summary Data Format				
1-5	Double-Precision Real Format Summary	1-22			
1-6	Extended-Precision Real Format Summary				
1-6	Extended-Precision Real Format Summary (Continued)				
1-7	Packed Decimal Real Format Summary				
1-8	MC68040 FPU Data Formats and Data Types	1-30			
2-1	Instruction Word Format Field Definitions				
2-2	IS-I/IS Memory Indirect Action Encodings				
2-3	Immediate Operand Location				
2-4	Effective Addressing Modes and Categories	2-20			
3-1	Notational Conventions				
3-1	Notational Conventions (Continued)				
3-1	Notational Conventions (Concluded)				
3-2	Data Movement Operation Format				
3-3	Integer Arithmetic Operation Format	3-7			
3-4	Logical Operation Format				
3-5	Shift and Rotate Operation Format				
3-6	Manipulation Operation Format				
3-7	t Field Operation Format				
3-8	Binary-Coded Decimal Operation Format				
3-9	Program Control Operation Format				
3-10	System Control Operation Format				
3-11	Cache Control Operation Format				
3-12	Multiprocessor Operations				
3-13	MMU Operation Format				
3-14	Dyadic Floating-Point Operation Format				
3-15	Dyadic Floating-Point Operations				
3-16	Monadic Floating-Point Operation Format				
3-17	Monadic Floating-Point Operations				
3-18	Integer Unit Condition Code Computations				
3-19	Conditional Tests				
3-20	Operation Table Example (FADD Instruction)				
3-21	FPCR Encodings				
3-22	FPCC Encodings				
3-23	Floating-Point Conditional Tests				
5-1	Directly Supported Floating-Point Instructions				
5-2	Indirectly Supported Floating-Point Instructions	5-3			
MOTOR	DLA M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL	xi			

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

LIST OF TABLES (Continued)

Table Number	Title	Page Number
7-1	MC68020 Instructions Not Supported	
7-2	M68000 Family Addressing Modes	
7-3	CPU32 Instruction Set	
8-1	Conditional Predicate Field Encoding	8-3
8-2	Operation Code Map	8-4
A-1	M68000 Family Instruction Set And Processor Cross-Reference	
A-2	M68000 Family Instruction Set	A-8
A-3	MC68000 and MC68008 Instruction Set	A-12
A-4	MC68010 Instruction Set	A-14
A-5	MC68000, MC68008, and MC68010 Data Addressing Modes	A-16
A-6	MC68020 Instruction Set Summary	A-17
A-7	MC68020 Data Addressing Modes	A-20
A-8	MC68030 Instruction Set Summary	
A-9	MC68030 Data Addressing Modes	
A-10	MC68040 Instruction Set	
A-11	MC68040 Data Addressing Modes	A-29
A-12	MC68881/MC68882 Instruction Set	A-30
A-13	MC68851 Instruction Set	A-31
B-1	Exception Vector Assignments for the M68000 Family	B-2
C-1 C-2	Field Composition of an S-Record	

SECTION 1 INTRODUCTION

This manual contains detailed information about software instructions used by the microprocessors and coprocessors in the M68000 family, including:

MC68000	_	16-/32-Bit Microprocessor
MC68EC000	_	16-/32-Bit Embedded Controller
MC68HC000	_	Low Power 16-/32-Bit Microprocessor
MC68008	_	16-Bit Microprocessor with 8-Bit Data Bus
MC68010	_	16-/32-Bit Virtual Memory Microprocessor
MC68020	_	32-Bit Virtual Memory Microprocessor
MC68EC020	_	32-Bit Embedded Controller
MC68030	_	Second-Generation 32-Bit Enhanced Microprocessor
MC68EC030	_	32-Bit Embedded Controller
MC68040	_	Third-Generation 32-Bit Microprocessor
MC68LC040	_	Third-Generation 32-Bit Microprocessor
MC68EC040	_	32-Bit Embedded Controller
MC68330	_	Integrated CPU32 Processor
MC68340	_	Integrated Processor with DMA
MC68851	_	Paged Memory Management Unit
MC68881	_	Floating-Point Coprocessor
MC68882	_	Enhanced Floating-Point Coprocessor
		3

NOTE

All references to the MC68000, MC68020, and MC68030 include the corresponding embedded controllers, MC68EC000, MC68EC020, and MC68EC030. All references to the MC680400 include the MC68LC040 and MC68EC040. This referencing method applies throughout the manual unless otherwise expecting specified.

The M68000 family programming model consists of two register groups: user and supervisor. User programs executing in the user mode only use the registers in the user group. System software executing in the supervisor mode can access all registers and uses the control registers in the supervisor group to perform supervisor functions. The following paragraphs provide a brief description of the registers in the user and supervisor models as well as the data organization in the registers.

x

Introduction

1.1 INTEGER UNIT USER PROGRAMMING MODEL

Figure 1-1 illustrates the integer portion of the user programming model. It consists of the following registers:

- 16 General-Purpose 32-Bit Registers (D7 D0, A7 A0)
- 32-Bit Program Counter (PC)
- 8-Bit Condition Code Register (CCR)

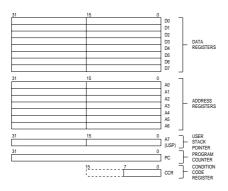


Figure 1-1. M68000 Family User Programming Model

1.1.1 Data Registers (D7 - D0)

These registers are for bit and bit field (1 - 32 bits), byte (8 bits), word (16 bits), long-word (32 bits), and quad-word (64 bits) operations. They also can be used as index registers.

1.1.2 Address Registers (A7 - A0)

These registers can be used as software stack pointers, index registers, or base address registers. The base address registers can be used for word and long-word operations. Register A7 is used as a hardware stack pointer during stacking for subroutine calls and exception handling. In the user programming model, A7 refers to the user stack pointer (USP).

1-2

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL MOTOROLA

Introduction

C—Carry Set if a carry out of the most significant bit of the operand occurs for an addition, or if a borrow occurs in a subtraction: otherwise clear.

1.2 FLOATING-POINT UNIT USER PROGRAMMING MODEL

The following paragraphs describe the registers for the floating- point unit user programming model. Figure 1-2 illustrates the M68000 family user programming model's floating-point portion for the MC68040 and the MC68881/MC68882 floating-point coprocessors. It contains the following registers:

- 8 Floating-Point Data Registers (FP7 FP0)
- 16-Bit Floating-Point Control Register (FPCR)
- 32-Bit Floating-Point Status Register (FPSR)
- 32-Bit Floating-Point Instruction Address Register (FPIAR)

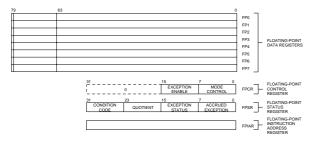


Figure 1-2. M68000 Family Floating-Point Unit User Programming Model

1.2.1 Floating-Point Data Registers (FP7 - FP0)

These floating-point data registers are analogous to the integer data registers for the M68000 family. They always contain extended- precision numbers. All external operands, despite the data format, are converted to extended-precision values before being used in any calculation or being stored in a floating-point data register. A reset or a null-restore operation sets FP7 – FP0 positive, nonsignaling not-a-numbers (NANs).


The PC contains the address of the instruction currently executing. During instruction execution and exception processing, the processor automatically increments the contents or places a new value in the PC. For some addressing modes, the PC can be used as a pointer for PC relative addressing.

1.1.4 Condition Code Register

Consisting of five bits, the CCR, the status register's lower byte, is the only portion of the status register (SR) available in the user mode. Many integer instructions affect the CCR, indicating the instruction's result. Program and system control instructions also use certain combinations of these bits to control program and system flow. The condition codes meet two criteria: consistency across instructions, uses, and instances and meaningful results with no change unless it provides useful information.

Consistency across instructions means that all instructions that are special cases of more general instructions affect the condition codes in the same way. Consistency across uses means that conditional instructions test the condition codes similarly and provide the same results whether a compare, test, or move instruction sets the condition codes. Consistency across instances means that all instances of an instruction affect the condition codes in the same way.

The first four bits represent a condition of the result generated by an operation. The fifth bit or the extend bit (X-bit) is an operand for multiprecision computations. The carry bit (C-bit) and the X-bit are separate in the M68000 family to simplify programming techniques that use them (refer to Table 3-18 as an example). In the instruction set definitions, the CCR is illustrated as follows:

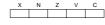

-Extend Set to the value of the C-bit for arithmetic operations; otherwise not affected or set to a specified result.

- N-Negative
- Set if the most significant bit of the result is set; otherwise clear.
- Z—Zero
 - Set if the result equals zero; otherwise clear.
- V—Overflow
- Set if an arithmetic overflow occurs implying that the result cannot be represented in the operand size; otherwise clear.

```
MOTOROLA
```

defaults

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL 1-3

1.2.2 Floating-Point Control Register (FPCR)

The FPCR (see Figure 1-3) contains an exception enable (ENABLE) byte and a mode control (MODE) byte. The user can read or write to the FPCR. Motorola reserves bits 31 – 16 for future definition; these bits are always read as zero and are ignored during write operations. The reset function or a restore operation of the null state clears the FPCR. When cleared, this register provides the IEEE 754 Standard for Binary Floating-Point Arithmetic

1.2.2.1 EXCEPTION ENABLE BYTE. Each bit of the ENABLE byte (see Figure 1-3) corresponds to a floating-point exception class. The user can separately enable traps for each class of floating-point exceptions.

1.2.2.2 MODE CONTROL BYTE. MODE (see Figure 1-3) controls the user- selectable rounding modes and precisions. Zeros in this byte select the IEEE 754 standard defaults. The rounding mode (RND) field specifies how inexact results are rounded, and the rounding precision (PREC) field selects the boundary for rounding the mantissa. Refer to Table 3-21 for encoding information.

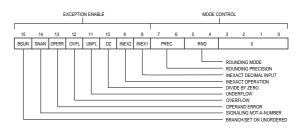


Figure 1-3. Floating-Point Control Register

1.2.3 Floating-Point Status Register (FPSR)

The FPSR (see Figure 1-2) contains a floating-point condition code (FPCC) byte, a floatingpoint exception status (EXC) byte, a quotient byte, and a floating-point accrued exception (AEXC) byte. The user can read or write to all the bits in the FPSR. Execution of most floating-point instructions modifies this register. The reset function or a restore operation of the null state clears the FPSR.

1.2.3.1 FLOATING-POINT CONDITION CODE BYTE. The FPCC byte, illustrated in Figure 1-4, contains four condition code bits that set after completion of all arithmetic instructions involving the floating-point data registers. The move floating-point data register

Introduction

to effective address, move multiple floating-point data register, and move system control register instructions do not affect the FPCC. .

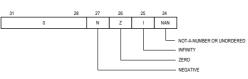



Figure 1-4. FPSR Condition Code Byte

1.2.3.2 QUOTIENT BYTE. The quotient byte contains the seven least significant bits of the unsigned quotient as well as the sign of the entire quotient (see Figure 1-5). The quotient bits can be used in argument reduction for transcendentals and other functions. For example, seven bits are more than enough to figure out the quadrant of a circle in which an operand resides. The quotient bits remain set until the user clears them.



Figure 1-5. FPSR Quotient Code Byte

1.2.3.3 EXCEPTION STATUS BYTE. The EXC byte, illustrated in Figure 1- 6, contains a bit for each floating-point exception that might have occurred during the most recent arithmetic instruction or move operation. This byte is cleared at the start of all operations that generate floating-point exceptions. Operations that do not generate floating-point exceptions do not clear this byte. An exception handler can use this byte to determine which floating-point exceptions) caused a trap.

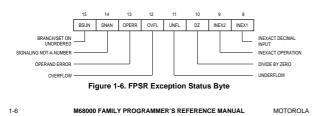

1.2.3.4 ACCRUED EXCEPTION BYTE. The AEXC byte contains five exception bits (see Figure 1-7) required by the IEEE 754 standard for trap disabled operations. These exceptions are logical combinations of the bits in the EXC byte. The AEXC byte contains a history of all floating-point exceptions that have occurred since the user last cleared the AEXC byte. In normal operations, only the user clears this byte by writing to the FPSR; however, a reset or a restore operation of the null state can also clear the AEXC byte.

Many users elect to disable traps for all or part of the floating- point exception classes. The AEXC byte makes it unnecessary to poll the EXC byte after each floating-point instruction. At the end of most operations (FMOVEM and FMOVE excluded), the bits in the EXC byte are logically combined to form an AEXC value that is logically ORed into the existing AEXC byte. This operation creates "sticky" floating- point exception bits in the AEXC byte that the user needs to poll only once—i.e., at the end of a series of floating-point operations.

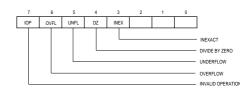


Figure 1-7. FPSR Accrued Exception Byte

Setting or clearing the AEXC bits neither causes nor prevents an exception. The following equations show the comparative relationship between the EXC byte and AEXC byte. Comparing the current value in the AEXC bit with a combination of bits in the EXC byte derives a new value in the corresponding AEXC bit. These equations apply to setting the AEXC bits at the end of each operation affecting the AEXC byte:

New AEXC Bit	= Old AEXC Bit	v	EXC Bits
IOP	= IOP	V	(SNAN V OPERR)
OVFL	= OVFL	V	(OVFL)
UNFL	= UNFL	V	(UNFL L INEX2)
DZ	= DZ	V	(DZ)
INEX	= INEX	V	(INEX1 V INEX2 V OVFL)

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

1-7

Introduction

Introduction

1.2.4 Floating-Point Instruction Address Register (FPIAR)

The integer unit can be executing instructions while the FPU is simultaneously executing a floating-point instruction. Additionally, the FPU can concurrently execute two floating-point instructions. Because of this nonsequential instruction execution, the PC value stacked by the FPU, in response to a floating-point exception trap, may not point to the offending instruction.

For the subset of the FPU instructions that generate exception traps, the 32-bit FPIAR is loaded with the logical address of the instruction before the processor executes it. The floating-point exception handler can use this address to locate the floating-point instruction that caused an exception. Since the FPU FMOVE to/from the FPCR, FPSR, or FPIAR and FMOVEM instructions cannot generate floating- point exceptions, these instructions do not modify the FPIAR. A reset or a null-restore operation clears the FPIAR.

1.3 SUPERVISOR PROGRAMMING MODEL

System programers use the supervisor programming model to implement sensitive operating system functions—e.g., I/O control and memory management unit (MMU) subsystems. The following paragraphs briefly describe the registers in the supervisor programming model. They can only be accessed via privileged instructions. Table 1-1 lists the supervisor registers and the processors not related to paged memory management. For information concerning page memory management programming, refer to the device-specific user's manual. Table 1-2 lists the supervisor registers and the processors related to paged memory management.

Table 1-1. Supervisor Registers Not Related To Paged Memory Management

	Devices												
Registers	68000 68008 68HC000 68HC001 68EC000	68010	68020 68EC020	CPU32	68030	68EC030	68040	68EC040	68LC040				
AC1, AC0						х							
ACUSR						х							
CAAR			х		x	x							
CACR			х		x	х	x	x	х				
DACR1, DACR0								x					
DFC		х	х	x	x	х	x	х	х				
DTT1, DTT0							x		х				
IACR1, IACR0								x					
ITT1, ITT0							x		х				
MSP			х		x	х	x	х	х				
SFC		х	х	x	x	х	x	x	х				
SR	х	х	х	x	x	х	x	x	х				
SSP/ISP	х	х	х	x	x	х	x	x	х				
TT1, TT0					x								
VBR		x	x	x	x	х	x	x	х				
ACU CA	AC0 = Acce JSR = Acce VAR = Cach VAR = Cach	ss Control e Address	Unit Status Re Register	egister	N	TT0 = Instru Trans ISP = Maste SFC = Source	lation Reg er Stack P	gisters ointer Regist					

		Access Control Registers	ITT1, ITT0	=	Instruction Transparent
ACUSR	=	Access Control Unit Status Register			Translation Registers
CAAR	=	Cache Address Register			Master Stack Pointer Register
		Cache Control Register	SFC	=	Source Function Code Register
DACR1, DACR0	=	Data Access ControlRegisters	SR	=	Status Register
		Destination Function Code Register			Supervisor and Interrupt Stack Pointer
		Data Transparent Translation Registers	TT1, TT0	=	Transparent Translation Registers
IACR1, IACR0	=	Instruction Access Control Registers	VBR	=	Vector Base Register

Table 1-2. Supervisor Registers Related To Paged Memory Managemer

Rei	ate	d To Page	ea wemor	y wanage	ement	
			Dev	ices		
Registe	rs	68851	68030	68040	68LC040	
AC		х				
CAL		х				
CRP		х	x			
DRP		х				
PCSR		х				
PMMUSR, MMUSR		x	x	x	x	
SCC		х				
SRP		х	x	х	x	
тс		х	x	х	x	
URP				х	x	
VAL		х				
AC CAL CRP DRP PCSR PMMUSR MMUSR SCC		Access Control Register Current Access Level Register CPU Root Pointer DMA Root Pointer PMMU Control Register Paged Memory Management Unit Status Register Memory Management Unit Status Register Stack Change Control Register				
SCC SRP TC URP VAL		Supervisor F Translation (User Root P	Root Pointer R Control Regist	tegister ter		

1.3.1 Address Register 7 (A7)

In the supervisor programming model register, A7 refers to the interrupt stack pointer, A7'(ISP) and the master stack pointer, A7" (MSP). The supervisor stack pointer is the active stack pointer (ISP or MSP). For processors that do not support ISP or MSP, the system stack is the system stack pointer (SSP). The ISP and MSP are general- purpose address registers for the supervisor mode. They can be used as software stack pointer, index registers. The ISP and MSP can be used for word and long-word operations.

1.3.2 Status Register

Figure 1-8 illustrates the SR, which stores the processor status and contains the condition codes that reflect the results of a previous operation. In the supervisor mode, software can access the full SR, including the interrupt priority mask and additional control bits. These bits indicate the following states for the processor: one of two trace modes (T1, T0), supervisor or user mode (S), and master or interrupt mode (M). For the MC68000, MC688C000, MC68008, MC68010, MC68HC000, MC68HC001, and CPU32, only one trace mode

MOTOROLA

```
1-10
```

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

Introduction

1.3.6 Transparent Translation/access Control Registers

Transparent translation is actually a misnomer since the whole address space transparently translates in an embedded control environment with no on-chip MMU present as well as in processors that have built-in MMUs. For processors that have built-in MMUs, such as the MC68030, MC68040, and MC68LC040, the transparent translation (TT) registers define blocks of logical addresses that are transparently translated to corresponding physical addresses. These registers are independent of the on-chip MMU. For embedded controllers, such as the MC68EC030 and MC68EC040, the access control registers (AC) are similar in function to the TT registers but just named differently. The AC registers, main function are to define blocks of address space that control address space properties such as cachability. The following paragraphs describe these registers.

NOTE

For the paged MMU related supervisor registers, please refer to the appropriate user's manual for specific programming detail.

1.3.6.1 TRANSPARENT TRANSLATION/ACCESS CONTROL REGISTER FIELDS FOR THE M68030. Figure 1-9 illustrates the MC68030 transparent translation/MC68EC030 access control register format.




Address Base

This 8-bit field is compared with address bits A31 – A24. Addresses that match in this comparison (and are otherwise eligible) are transparently translated/access controlled.

Address Mask

This 8-bit field contains a mask for the address base field. Setting a bit in this field causes the corresponding bit of the address base field to be ignored. Blocks of memory larger than 16 Mbytes can be transparently translated/accessed controlled by setting some logical address mask bits to ones. The low-order bits of this field normally are set to define contiguous blocks larger than 16 Mbytes, although this is not required. supported, where T0 is always zero, and only one system stack where the M-bit is always zero. I2, I1, and I0 define the interrupt mask level.

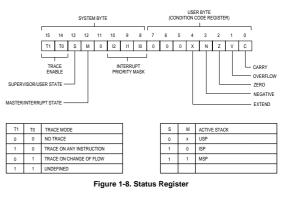

1.3.3 Vector Base Register (VBR)

The VBR contains the base address of the exception vector table in memory. The displacement of an exception vector adds to the value in this register, which accesses the vector table.

1.3.4 Alternate Function Code Registers (SFC and DFC)

The alternate function code registers contain 3-bit function codes. Function codes can be considered extensions of the 32-bit logical address that optionally provides as many as eight 4-Gbyte address spaces. The processor automatically generates function codes to select address spaces for data and programs at the user and supervisor modes. Certain instructions use SFC and DFC to specify the function codes for operations.

1.3.5 Acu Status Register (MC68EC030 only)

The access control unit status register (ACUSR) is a 16-bit register containing the status information returned by execution of the PTEST instruction. The PTEST instruction searches the access control (AC) registers to determine a match for a specified address. A match in either or both of the AC registers sets bit 6 in the ACUSR. All other bits in the ACUSR are undefined and must not be used.

MOTOROLA M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

1-11

Introduction

E—Enable 0 = Transparent translation/access control disabled 1 = Transparent translation/access control enabled

CI-Cache Inhibit

0 = Caching allowed 1 = Caching inhibited

R/W-Read/Write

0 = Only write accesses permitted 1 = Only read accesses permitted

R/WM—Read/Write Mask 0 = R/W field used 1 = R/W field ignored

FC BASE—Function Code Base

This 3-bit field defines the base function code for accesses to be transparently translated with this register. Addresses with function codes that match the FC BASE field (and are otherwise eligible) are transparently translated.

FC MASK—Function Code Mask

This 3-bit field contains a mask for the FC BASE field. Setting a bit in this field causes the corresponding bit of the FC BASE field to be ignored.

1.3.6.2 TRANSPARENT TRANSLATION/ACCESS CONTROL REGISTER FIELDS FOR THE M68040. Figure 1-10 illustrates the MC68040 and MC68LC040 transparent translation/ MC68EC040 access control register format.

:	31							24	23							16
				ADDRE:	SS BASE							ADDRES	SS MASH	<		
	E	S FI	ELD	0	0	0	U1	UO	0	C	м	0	0	W	0	0
-	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0

Figure 1-10. MC68040 and MC68LC040 Transparent Translation/MC68EC040 Access Control Register Format

Address Base

This 8-bit field is compared with address bits A31 – A24. Addresses that match in this comparison (and are otherwise eligible) are transparently translated/access controlled.

Introduction

Address Mask

This 8-bit field contains a mask for the address base field. Setting a bit in this field causes the corresponding bit in the address base field to be ignored. Blocks of memory larger than 16 Mbytes can be transparently translated/access controlled by setting some logical address mask bits to ones. The low-order bits of this field normally are set to define con-tiguous blocks larger than 16 Mbytes, although this not required.

E-Enable

This bit enables and disables transparent translation/access control of the block defined by this register.

0 = Transparent translation/access control disabled 1 = Transparent translation/access control enabled

-Supervisor/User Mode This field specifies the use of the FC2 in matching an address.

- 00 = Match only if FC2 is 0 (user mode access) 01 = Match only if FC2 is 1 (supervisor mode access)
- 1X = Ignore FC2 when matching

U1. U2-User Page Attributes

The MC68040, MC68E040, MC68LC040 do not interpret these user-defined bits. If ar external bus transfer results from the access, U0 and U1 are echoed to the UPA0 and UPA1 signals, respectively.

-Cache Mode

This field selects the cache mode and access serialization for a page as follows:

- 00 = Cachable, Writethrough 01 = Cachable, Copyback
- 10 = Noncachable, Serialized
- 11 = Noncachable

-Write Protect

This bit indicates if the block is write protected. If set, write and read-modify-write accesses are aborted as if the resident bit in a table descriptor were clear. 0 = Read and write accesses permitted

1 = Write accesses not permitted

1.4 INTEGER DATA FORMATS

The operand data formats supported by the integer unit, as listed in Table 1-3, include those supported by the MC68030 plus a new data format (16-byte block) for the MOVE16 instruction. Integer unit operands can reside in registers, memory, or instructions themselves. The operand size for each instruction is either explicitly encoded in the instruction or implicitly defined by the instruction operation.

1-14

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

Introduction



NOTE: XXXX indicates "don't care", which is zero when

Figure 1-11. Packed Decimal Real Format

1.5.2 Binary Floating-Point Formats

Figure 1-12 illustrates the three binary floating-point data formats. The exponent in the three binary floating-point formats is an unsigned binary integer with an implied bias added to it. When subtracting the bias from the exponent's value, the result represents a signed twos complement power of two. This yields the magnitude of a normalized floating-point number when multiplied by the mantissa. A program can execute a CMP instruction that compares floating-point numbers in memory using biased exponents, despite the absolute magnitude of the exponents.

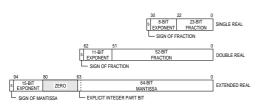


Figure 1-12. Binary Floating-Point Data Formats

Data formats for single- and double-precision numbers differ slightly from those for extended-precision numbers in the representation of the mantissa. For all three precisions, a normalized mantissa is always in the range (1.0...2.0). The extended-precision data format represents the entire mantissa, including the explicit integer part bit. Single- and doubleprecision data formats represent only a fractional portion of the mantissa (the fraction) and always imply the integer part as one

Table 1-3. Integer Data Formats

Operand Data Format	Size	Notes
Bit	1 Bit	-
Bit Field	1 - 32 Bits	Field of Consecutive Bit
Binary-Coded Decimal (BCD)	8 Bits	Packed: 2 Digits/Byte; Unpacked: 1 Digit/Byte
Byte Integer	8 Bits	-
Word Integer	16 Bits	-
Long-Word Integer	32 Bits	-
Quad-Word Integer	64 Bits	Any Two Data Registers
16-Byte	128 Bits	Memory Only, Aligned to 16- Byte Boundary

1.5 FLOATING-POINT DATA FORMATS

The following paragraphs describe the FPU's operand data formats. The FPU supports seven data formats. There are three signed binary integer formats (byte, word, and long word) that are identical to those supported by the integer unit. The FPU supports the use of the packed decimal real format. The MC68881 and MC68882 support this format in hardware and the processors starting with the MC68040 support it in software. The FPU also supports three binary floating- point formats (single, double, and extended precision) that fully comply with the IEEE 754 standard. All references in this manual to extendedprecision format imply the double-extended-precision format defined by the IEEE 754 standard.

1.5.1 Packed Decimal Real Format

Figure 1-11 illustrates the packed decimal real format which is three long words consisting of a 3-digit base 10 exponent and a 17-digit base 10 mantissa. The first two long words, digits 15 - 0, are 64 bits and map directly to bit positions 63 - 0 of the extended-precision real format. There are two separate sign bits, one for the exponent, the other for the mantissa. An extra exponent (EXP3) is defined for overflows that can occur when converting from the extended-precision real format to the packed decimal real format.

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

1-15

Introduction

The IEEE 754 standard has created the term significand to bridge the difference between mantissa and fraction and to avoid the historical implications of the term mantissa. The IEEE 754 standard defines a significand as the component of a binary floating-point number that includes an explicit or implicit leading bit to the left of the implied binary point. However, this manual uses the term mantissa for extended-precision formats and fraction for single- and double- precision formats instead of the IEEE term significand.

NOTE

This section specifies ranges using traditional set notation with the format "bound...bound" specifying the boundaries of the range. The bracket types enclosing the range define whether the endpoint is inclusive or exclusive. A square bracket indicates inclusive, and a parenthesis indicates exclusive. For example, the range specification "[1.0...2.0]" defines the range of numbers greater than or equal to 1.0 and less than or equal to 2.0. The range specification "(0.0... + inf)" defines the range of numbers greater than 0.0 and less than positive infinity, but not equal to.

1.6 FLOATING-POINT DATA TYPES

Each floating-point data format supports five, unique, floating-point data types: 1) normalized numbers, 2) denormalized numbers, 3) zeros, 4) infinities, and 5) NANs. Exponent values in each format represent these special data types. The normalized data type never uses the maximum or minimum exponent value for a given format, except the extended-precision format. The packed decimal real data format does not support denormalized numbers

There is a subtle difference between the definition of an extended- precision number with an exponent equal to zero and a single- or double-precision number with an exponent equal to zero. The zero exponent of a single- or double-precision number with an exponent equal to zero. The zero exponent of a single- or double-precision number with an exponent of zero may have an explicit integer bit is zero. An extended- precision number with an exponent of zero may have an explicit integer bit equal to one. This results in a normalized number, though the exponent is equal to the minimum value. For simplicity, the following discussion treats all three floating-point formats in the same manner, where an exponent value of zero indeptified exponent is equal to the minimum value. For simplicity, the following discussion treats all three floating-point formats in the same manner, where an exponent value of zero indeptified exponent is equal to the minimum value. value of zero identifies a denormalized number. However, remember the extended-precision format can deviate from this rule.

Introduction

1.6.1 Normalized Numbers

Normalized numbers encompass all numbers with exponents laying between the maximum and minimum values. Normalized numbers can be positive or negative. For normalized numbers in single and double precision the implied integer bit is one. In extended precision, the mantissa's MSB, the explicit integer bit, can only be a one (see Figure 1-13); and the exponent can be zero.

Π	MIN < EXPONENT < MAX	MANTISSA = ANY BIT PATTERN
τ	- SIGN OF MANTISSA, 0 OR 1	

Figure 1-13. Normalized Number Format

1.6.2 Denormalized Numbers

Denormalized numbers represent real values near the underflow threshold. The detection of the underflow for a given data format and operation occurs when the result's exponent is less than or equal to the minimum exponent value. Denormalized numbers can be positive or negative. For denormalized numbers in single and double precision the implied integer bit is a zero. In extended precision, the mantissa's MSB, the explicit integer bit, can only be a zero (see Figure 1-14).

	EXPONENT = 0	MANTISSA = ANY NONZERO BIT PATTERN
τ	- SIGN OF MANTISSA, 0 OR 1	

Figure 1-14. Denormalized Number Format

Traditionally, the detection of underflow causes floating-point number systems to perform a "flush-to-zero". This leaves a large gap in the number line between the smallest magnitude normalized number and zero. The IEEE 754 standard implements gradual underflows: the result mantissa is shifted right (denormalized) while the result exponent is incremented until reaching the minimum value. If all the mantissa bits of the result are shifted off to the right during this denormalization, the result becomes zero. Usually a gradual underflow limits the potential underflow damage to no more than a round-off error. This underflow and denormalization description ignores the effects of rounding and the user-selectable rounding modes. Thus, the large gap in the number line created by "flush-to-zero" number systems is filled with representable (denormalized) numbers in the IEEE "gradual underflow" floating-point number system.

Since the extended-precision data format has an explicit integer bit, a number can be formatted with a nonzero exponent, less than the maximum value, and a zero integer bit. The IEEE 754 standard does not define a zero integer bit. Such a number is an unnormalized number. Hardware does not directly support denormalized and unnormalized numbers, but implicitly supports them by trapping them as unimplemented data types, allowing efficient conversion in software.

1-18 M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

Introduction

SNAN can be used as an escape mechanism for a user-defined, non-IEEE data type. The FPU never creates an SNAN resulting from an operation.

The IEEE specification defines NAN processing used as an input to an operation. A nonsignaling NAN must be returned when using an SNAN as an input and there is a disabled SNAN trap. The FPU does this by using the source SNAN, setting the MSB of the mantissa, and storing the resulting nonsignaling NAN in the destination. Because of the IEEE formats for NANs, the result of setting an SNAN MSB is always a nonsignaling NAN.

When the FPU creates a NAN, the NAN always contains the same bit pattern in the mantissa. All bits of the mantissa are ones for any precision. When the user creates a NAN, any nonzero bit pattern can be stored in the mantissa.

1.6.6 Data Format and Type Summary

Tables 1-4 through 1-6 summarize the data type specifications for single-, double-, and extended-precision data formats. Packed decimal real formats support all data types except denormalized numbers. Table 1-7 summarizes the data types for the packed decimal real format. 1.6.3 Zeros

Zeros can be positive or negative and represent the real values + 0.0 and – 0.0 (see Figure 1-15).

EXPONENT = 0	MANTISSA = 0
SIGN OF MANTISSA, 0 OR 1	

Figure 1-15. Zero Format

1.6.4 Infinities

Infinities can be positive or negative and represent real values that exceed the overflow threshold. A result's exponent greater than or equal to the maximum exponent value indicates the overflow for a given data format and operation. This overflow description ignores the effects of rounding and the user-selectable rounding models. For single- and double-precision infinities the fraction is a zero. For extended-precision infinities, the mantissa's MSB, the explicit integer bit, can be either one or zero (see Figure 1-16).

Γ	EXPONENT = MAXIMUM	MANTISSA = 0			
T	SIGN OF MANTISSA. 0 OR 1				

Figure 1-16. Infinity Format

1.6.5 Not-A-Numbers

When created by the FPU, NANs represent the results of operations having no mathematical interpretation, such as infinity divided by infinity. All operations involving a NAN operand as an input return a NAN result. When created by the user, NANs can protect against unitialized variables and arrays or represent user-defined data types. For extendedprecision NANs, the mantissa's MSB, the explicit integer bit, can be either one or zero (see Figure 1-17).

Γ	EXPONENT = MAXIMUM	MANTISSA = ANY NONZERO BIT PATTERN
τ	SIGN OF MANTISSA A OP 1	

Figure 1-17. Not-A-Number Format

The FPU implements two different types of NANs identified by the value of the MSB of the mantissa for single- and double-precision, and the MSB of the mantissa minus one for extended-precision. If the bit is set, it is a nonsignaling NAN, otherwise, it is an SNAN. An

MOTOROLA M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

Introduction

1-19

Table 1-4. Single-Precision Real Format Summary Data Format

Data	Format
31 30 s e	23 22 0 f
Field Si	ze In Bits
Sign (s)	1
Biased Exponent (e)	8
Fraction (f)	23
Total	32
Interpreta	tion of Sign
Positive Fraction	s = 0
Negative Fraction	s = 1
Normalize	d Numbers
Bias of Biased Exponent	+127 (\$7F)
Range of Biased Exponent	0 < e < 255 (\$FF)
Range of Fraction	Zero or Nonzero
Fraction	1.f
Relation to Representation of Real Numbers	(−1) ^s ×2 ^{e−127} ×1.f
Denormaliz	ed Numbers
Biased Exponent Format Minimum	0 (\$00)
Bias of Biased Exponent	+126 (\$7E)
Range of Fraction	Nonzero
Fraction	0.f
Relation to Representation of Real Numbers	$(-1)^{8} \times 2 - ^{126} \times 0.f$
Signe	d Zeros
Biased Exponent Format Minimum	0 (\$00)
Fraction	0.f = 0.0
Signed	Infinities
Biased Exponent Format Maximum	255 (\$FF)
Fraction	0.f = 0.0
N	ANs
Sign	Don't Care
Biased Exponent Format Maximum	255 (\$FF)
Fraction	Nonzero
Representation of Fraction Nonsignaling Signaling Nonzero Bit Pattern Created by User Fraction When Created by FPCP	0.1xxxxxxxxxx 0.0xxxxxxxxxx xxxxxxxxxxx 11111111
Approxim	ate Ranges
Maximum Positive Normalized	3.4×10^{38}
Minimum Positive Normalized	1.2×10- ³⁸

MOTOROLA

Table 1-5. Double-Precision Real Format Summary

Format				
52 51 0				
ze (in Bits)				
1				
11				
52				
64				
ation of Sign				
s = 0				
s = 1				
ed Numbers				
+1023 (\$3FF)				
0 < e < 2047 (\$7FF)				
Zero or Nonzero				
1.f				
(-1) ^s ×2 ^{e-1023} ×1.f				
zed Numbers				
0 (\$000)				
+1022 (\$3FE)				
Nonzero				
0.f				
(-1) ⁸ × 2- ¹⁰²² × 0.f				
ed Zeros				
0 (\$00)				
0.f = 0.0				
Infinities				
2047 (\$7FF)				
0.f = 0.0				
ANs				
0 or 1				
255 (\$7FF)				
Nonzero				
10000x0000x 00000x0000x 00000x0000x 111111111				
nate Ranges				
18 x 10 ³⁰⁸				
2.2 x 10- ³⁰⁸				

Table 1-6. Extended-Precision Real Format Summary

95 94 80 s e	79 64 63 62 0 z i f
Field Siz	e (in Bits)
Sign (s)	1
Biased Exponent (e)	15
Zero, Reserved (u)	16
Explicit Integer Bit (j)	1
Mantissa (f)	63
Total	96
Interpretation	of Unused Bits
Input	Don't Care
Output	All Zeros
Interpretat	tion of Sign
Positive Mantissa	s = 0
Negative Mantissa	s = 1
Normalize	d Numbers
Bias of Biased Exponent	+16383 (\$3FFF)
Range of Biased Exponent	0 < = e < 32767 (\$7FFF)
Explicit Integer Bit	1
Range of Mantissa	Zero or Nonzero
Mantissa (Explicit Integer Bit and Fraction)	1.f
Relation to Representation of Real Numbers	(−1) ^s ×2 ^{e−16383} ×1.f
Denormaliz	ed Numbers
Biased Exponent Format Minimum	0 (\$0000)
Bias of Biased Exponent	+16383 (\$3FFF)
Explicit Integer Bit	0
Range of Mantissa	Nonzero
Mantissa (Explicit Integer Bit and Fraction)	0.f
Relation to Representation of Real Numbers	(−1) ⁸ ×2− ¹⁶³⁸³ ×0.f
	d Zeros
Biased Exponent Format Minimum	0 (\$0000)
Mantissa (Explicit Integer Bit and Fraction)	0.0
	Infinities
Biased Exponent Format Maximum	32767 (\$7FFF)
Explicit Integer Bit	Don't Care
Mantissa (Explicit Integer Bit and Fraction)	x.0000000

1-22

168000 FAMILY PROG

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

1-23

Introduction

Introduction

Table 1-6. Extended-Precision Real Format Summary (Continued)

NANs		
Sign	Don't Care	
Explicit Integer Bit	Don't Care	
Biased Exponent Format Maximum	32767 (\$7FFF)	
Mantissa	Nonzero	
Representation of Fraction Nonsignaling Signaling Nonzero Bit Pattern Created by User Fraction When Created by FPCP	x.1xxxxxxxxxx x.0xxxxxxxxx x.xxxxxxxxxxx 1.111111111	
Approximate Ranges		
Maximum Positive Normalized	1.2×10^{4932}	
Minimum Positive Normalized	1.7×10^{-4932}	
Minimum Positive Denormalized	3.7 × 10 ⁴⁹⁵¹	

Table 1-7. Packed Decimal Real Format Summary

Data Type	SM	SE	Y	Y	3-Digit Exponent	1-Digit Integer	16-Digit Fraction
±Infinity	0/1	1	1	1	\$FFF	\$XXXX	\$0000
±NAN	0/1	1	1	1	\$FFF	\$XXXX	Nonzero
±SNAN	0/1	1	1	1	\$FFF	\$XXXX	Nonzero
+Zero	0	0/1	Х	х	\$000-\$999	\$XXX0	\$0000
-Zero	1	0/1	Х	X	\$000-\$999	\$XXX0	\$0000
+In-Range	0	0/1	Х	X	\$000-\$999	\$XXX0-\$XXX9	\$0001-\$9999
-In-Range	1	0/1	Х	X	\$000-\$999	\$XXX0-\$XXX9	\$0001-\$9999

A packed decimal real data format with the SE and both Y bits set, an exponent of \$FFF, and a nonzero 16-bit decimal fraction is a NAN. When the FPU uses this format, the fraction of the NAN is moved bit- by-bit into the extended-precision mantissa of a floating-point data register. The exponent of the register is set to signify a NAN, and no conversion occurs. The MSB of the most significant digit in the decimal fraction (the MSB of digit 15) is a don't care, as in extended-precision NANs, and the MSB of minus one of digit 15 is the SNAN bit. If the NAN bit is a zero, then it is an SNAN.

If a non-decimal digit (\$A – \$F) appears in the exponent of a zero, the number is a true zero. The FPU does not detect non-decimal digits in the exponent, integer, or fraction digits of an in-range packed decimal real data format. These non-decimal digits are converted to binary in the same manner as decimal digits; however, the result is probably useless although it is repeatable. Since an in-range number cannot overflow or underflow when converted to extended precision, conversion from the packed decimal real data format always produces normalized extended-precision numbers.

1.7 ORGANIZATION OF DATA IN REGISTERS

The following paragraphs describe data organization within the data, address, and control registers.


1.7.1 Organization of Integer Data Formats in Registers

Each integer data register is 32 bits wide. Byte and word operands occupy the lower 8- and 16-bit portions of integer data registers, respectively. Long- word operands occupy the entire 32 bits of integer data register hat register that is either a source or destination operand only uses or changes the appropriate lower 8 or 16 bits (in byte or word operations, respectively). The remaining high-order portion does not change and goes unused. The address of the least significant bit (LSB) of a long-word integer is zero, and the MSB is 31. For bit fields, the address of the MSB is zero, and the LSB is the width of the register minus one (the offset). If the width of the register plus the offset is greater than 32, the bit field wraps around within the register. Figure 1-18 illustrates the organization of various data formats in the data registers.

An example of a quad word is the product of a 32-bit multiply or the quotient of a 32-bit divide operation (signed and unsigned). Quad words may be organized in any two integer data registers without restrictions on order or pairing. There are no explicit instructions for the management of this data format, although the MOVEM instruction can be used to move a quad word into or out of registers.

Binary-coded decimal (BCD) data represents decimal numbers in binary form. Although there are many BCD codes, the BCD instructions of the M68000 family support two formats, packed and unpacked. In these formats, the LSBs consist of a binary number having the numeric value of the corresponding decimal number. In the unpacked BCD format, a byte defines one decimal number that has four LSBs containing the binary value and four undefined MSBs. Each byte of the packed BCD format contains two decimal numbers; the least significant four bits contain the most signif

1-24

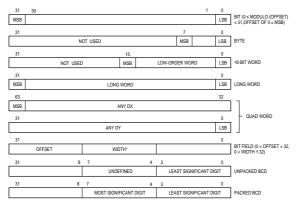

* IF WIDTH + OFFSET > 32, BIT FIELD WRAPS AROUND WITHIN THE REGISTER

Figure 1-18. Organization of Integer Data Formats in Data Registers

Because address registers and stack pointers are 32 bits wide, address registers cannot be used for byte-size operands. When an address register is a source operand, either the loworder word or the entire long-word operand is used, depending upon the operation size When an address register is the destination operand, the entire register becomes affected, despite the operation size. If the source operand is a word size, it is sign-extended to 32 bits and then used in the operation to an address register destination. Address registers are primarily for addresses and address computation support. The instruction set includes instructions that add to, compare, and move the contents of address registers. Figure 1-19 illustrates the organization of addresses in address registers.

31		16 15	0
	SIGN-EXTENDED	16-BIT ADDRESS OPERAND	
31			0
	FULL 32-BIT AI	DDRESS OPERAND	

Figure 1-19. Organization of Integer Data Formats in Address Registers

1-26	M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL	MOTOROLA

Introduction

Control registers vary in size according to function. Some control registers have undefined bits reserved for future definition by Motorola. Those particular bits read as zeros and must be written as zeros for future compatibility.

All operations to the SR and CCR are word-size operations. For all CCR operations, the upper byte is read as all zeros and is ignored when written, despite privilege mode. The alternate function code registers, supervisor function code (SFC) and data function code (DFC), are 32-bit registers with only bits 0P2 implemented. These bits contain the address space values for the read or write operands of MOVES, PFLUSH, and PTEST instructions. Values transfer to and from the SFC and DFC by using the MOVEC instruction. These are long-word transfers; the upper 29 bits are read as zeros and are ignored when written.

1.7.2 Organization of Integer Data Formats in Memory

The byte-addressable organization of memory allows lower addresses to correspond to The byte-addressable organization of memory allows lower addresses to correspond to higher order bytes. The address N of a long-word data item corresponds to the address of the highest order wordUs MSB. The lower order word is located at address N + 2, leaving the LSB at address N + 3 (see Figure 1-20). Organization of data formats in memory is consistent with the M68000 family data organization. The lowest address (nearest \$00000000) is the location of the MSB, with each successive LSB located at the next address (N + 1, N + 2, etc.). The highest address (nearest \$FFFFFFFF) is the location of the I SB

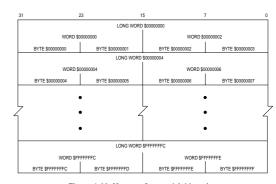


Figure 1-20. Memory Operand Addressing



M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

1-27

Introduction

Figure 1-21 illustrates the organization of IU data formats in memory. A base address that selects one byte in memory, the base byte, specifies a bit number that selects one bit, the bit operand, in the base byte. The MSB of the byte is seven.

The following conditions specify a bit field operand:

- 1. A base address that selects one byte in memory.
- 2. A bit field offset that shows the leftmost (base) bit of the bit field in relation to the MSB of the base byte.
- 3. A bit field width that determines how many bits to the right of the base bit are in the bit field.

The MSB of the base byte is bit field offset 0; the LSB of the base byte is bit field offset 7; and the LSB of the previous byte in memory is bit field offset – 1. Bit field offsets may have values between 2 – 31 to 231 – 1, and bit field widths may range from 1 to 32 bits.

A 16-byte block operand, supported by the MOVE16 instruction, has a block of 16 bytes, aligned to a 16-byte boundary. An address that can point to any byte in the block specifies this operand

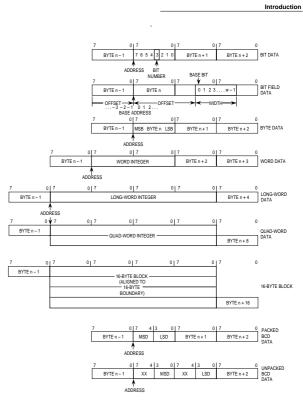


Figure 1-21. Memory Organization for Integer Operands

Introduction

1.7.3 Organization of Fpu Data Formats in Registers and Memory

The eight, 80-bit floating-point data registers are analogous to the integer data registers and are completely general purpose (i.e., any instruction may use any register). The MC68040 supports only some data formats and types in hardware. Table 1-8 lists the data formats supported by the MC68040.

Table 1-8. MC68040 FPU Data Formats and Data Types

Data Formats							
Number Types	Single- Precision Real	Double- Precision Real	Extended- Precision Real	Packed- Decimal Real	Byte Integer	Word Integer	Long- Word Integer
Normalized	*	*	*	†	*		*
Zero	*		*	†	*		*
Infinity	*		*	t			
NAN	*		*	t			
Denormalized	†	t	t	†			
Unnormalized			t	†			

NOTES:

* = Data Format/Type Supported by On-Chip MC68040 FPU Hardw + = Data Format/Type Supported by Software (MC68040FPSP)

Figure 1-22 illustrates the floating-point data format for the single- , double-, and extendedprecision binary real data organization in memory.

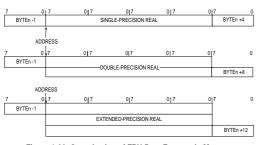


Figure 1-22. Organization of FPU Data Formats in Memory

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL MOTOROLA

SECTION 2 ADDRESSING CAPABILITIES

Most operations take asource operand and destination operand, compute them, and store the result in the destination location. Single-operand operations take a destination operand, compute it, and store the result in the destination location. External microprocessor references to memory are either program references that refer to program space or data references that refer to data space. They access either instruction words or operands (data items) for an instruction. Program space is the section of memory that contains the program instructions and any immediate data operands residing in the instruction stream. Data space is the section of memory that contains the program data. Data items in the instruction stream can be accessed with the program counter relative addressing modes; these accesses classify as program references.

2.1 INSTRUCTION FORMAT

M68000 family instructions consist of at least one word; some have as many as 11 words. Figure 2-1 illustrates the general composition of an instruction. The first word of the instruction, called the simple effective address operation word, specifies the length of the instruction, the effective addressing mode, and the operation to be performed. The remaining words, called brief and full extension words, further specify the instruction and operands. These words can be floating-point command words, conditional predicates, immediate operands, extensions to the effective addressing mode specified in the simple effective address operation word, branch displacements, bit number or bit field specifications, special register specifications, trap operands, pack/unpack constants, or argument counts.

1	5	0
	SINGLE EFFECTIVE ADDRESS OPERATION WORD (ONE WORD, SPECIFIES OPERATION AND MODES)	
	SPECIAL OPERAND SPECIFIERS (IF ANY, ONE OR TWO WORDS)	
	IMMEDIATE OPERAND OR SOURCE EFFECTIVE ADDRESS EXTENSION (IF ANY, ONE TO SIX WORDS)	
	DESTINATION EFFECTIVE ADDRESS EXTENSION (IF ANY, ONE TO SIX WORDS)	

Figure 2-1. Instruction Word General Format

```
MOTOROLA
```


M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL


2-1

Addressing Capabilities

An instruction specifies the function to be performed with an operation code and defines the location of every operand. Instructions specify an operand location by register specification, the instruction's register field holds the register's number; by effective address, the instruction's effective address field contains addressing mode information; or by implicit reference, the definition of the instruction implies the use of specific registers.

The single effective address operation word format is the basic instruction word (see Figure 2-2). The encoding of the mode field selects the addressing mode. The register field contains the general register number or a value that selects the addressing mode when the mode field contains opcode 111. Some indexed or indirect addressing modes use a combination of the simple effective address operation word followed by a brief extension word. Other indexed or indirect addressing modes consist of the simple effective address operation word and a full extension word. The longest instruction is a MOVE instruction with a full extension word. The longest instruction is a 400-te instruction with restores and destination effective addresses and eight other extension words. It also contains 32-bit base displacements and 32-bit outer displacements for both source and destination addresses. Figure 2-2 illustrates the three formats used in an instruction word, Table 2-1 lists the field definitions for these three formats.

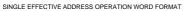

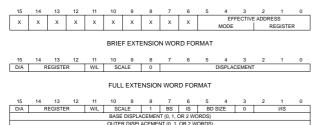

OUTER DISPLACEMENT (0, 1, OR 2 WORDS) Figure 2-2. Instruction Word Specification Formats

Addressing Capabilities

Table 2-1. Instruction Word Format Field Definitions

Field	Definition
	Instruction
Mode	Addressing Mode
Register	General Register Number
	Extensions
D/A	Index Register Type 0 = Dn 1 = An
W/L	Word/Long-Word Index Size 0 = Sign-Extended Word 1 = Long Word
Scale	Scale Factor 00 = 1 01 = 2 10 = 4 11 = 8
BS	Base Register Suppress 0 = Base Register Added 1 = Base Register Suppressed
IS	Index Suppress 0 = Evaluate and Add Index Operand 1 = Suppress Index Operand
BD SIZE	Base Displacement Size 00 = Reserved 01 = Null Displacement 10 = Word Displacement 11 = Long Displacement
I/IS	Index/Indirect Selection Indirect and Indexing Operand Determined in Conjunc- tion with Bit 6, Index Suppress

For effective addresses that use a full extension word format, the index suppress (IS) bit and the index/indirect selection (I/IS) field determine the type of indexing and indirect action. Table 2-2 lists the index and indirect operations corresponding to all combinations of IS and I/IS values.

Table 2-2. IS-I/IS Memory Indirect Action Encodings

IS	Index/Indirect	Operation
0	000	No Memory Indirect Action
0	001	Indirect Preindexed with Null Outer Displacement
0	010	Indirect Preindexed with Word Outer Displacement
0	011	Indirect Preindexed with Long Outer Displacement
0	100	Reserved
0	101	Indirect Postindexed with Null Outer Displacement
0	110	Indirect Postindexed with Word Outer Displacement
0	111	Indirect Postindexed with Long Outer Displacement
1	000	No Memory Indirect Action
1	001	Memory Indirect with Null Outer Displacement
1	010	Memory Indirect with Word Outer Displacement
1	011	Memory Indirect with Long Outer Displacement
1	100-111	Reserved

2.2 EFFECTIVE ADDRESSING MODES

Besides the operation code, which specifies the function to be performed, an instruction defines the location of every operand for the function. Instructions specify an operand location in one of three ways. A register field within an instruction can specify the register to be used; an instruction's effective address field can contain addressing mode information; or the instruction's definition can imply the use of a specific register. Other fields within the instruction specify whether the register selected is an address of data register and how the register is to be used. Section 1 Introduction contains detailed register descriptions.

An instruction's addressing mode specifies the value of an operand, a register that contains the operand, or how to derive the effective address of an operand in memory. Each addressing mode has an assembler syntax. Some instructions imply the addressing mode for an operand. These instructions include the appropriate fields for operands that use only one addressing mode.

2.2.1 Data Register Direct Mode

In the data register direct mode, the effective address field specifies the data register containing the operand.

GENERATION: ASSEMBLER SYNTAX: EA MODE FIELD: EA REGISTER FIELD: NUMBER OF EXTENSION WORDS:	EA = Dn Dn 000 REG. NO. 0		
DATA REGISTER		OPERAND	


2.2.2 Address Register Direct Mode

In the address register direct mode, the effective address field specifies the address register containing the operand.

GENERATION: ASSEMBLER SYNTAX: EA MODE FIELD: EA REGISTER FIELD: NUMBER OF EXTENSION WORDS:	EA = An An 001 REG. NO. 0	
ADDRESS REGISTER		OPERAND

2.2.3 Address Register Indirect Mode

In the address register indirect mode, the operand is in memory. The effective address field specifies the address register containing the address of the operand in memory.

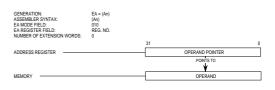

2-4

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL MOTOROLA

MOTOROLA


M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

2-5

Addressing Capabilities

2.2.4 Address Register Indirect with Postincrement Mode


In the address register indirect with postincrement mode, the operand is in memory. The effective address field specifies the address register containing the address of the operand in memory. After the operand address is used, it is incremented by one, two, or four depending on the size of the operand: byte, word, or long word, respectively. Coprocessors may support incrementing for any operand size, up to 255 bytes. If the address register is the stack pointer and the operand size is byte, the ddress is incremented by two to keep the stack pointer aligned to a word boundary.

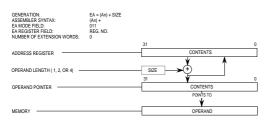

Addressing Capabilities


2.2.5 Address Register Indirect with Predecrement Mode

In the address register indirect with predecrement mode, the operand is in memory. The effective address field specifies the address register containing the address of the operand in memory. Before the operand address is used, it is decremented by one, two, or four depending on the operand size: byte, word, or long word, respectively. Coprocessors may support decrementing for any operand size up to 255 bytes. If the address register is the stack pointer and the operand size is byte, the address is decremented by two to keep the stack pointer and the operand size is byte, the address is decremented by two to keep the stack pointer aligned to a word boundary.

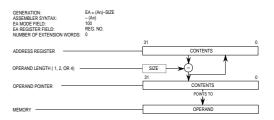

2.2.6 Address Register Indirect with Displacement Mode


In the address register indirect with displacement mode, the operand is in memory. The sum of the address in the address register, which the effective address specifies, plus the signextended 16-bit displacement integer in the extension word is the operand's address in memory. Displacements are always sign-extended to 32 bits prior to being used in effective address calculations.

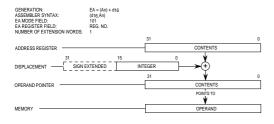



Addressing Capabilities

This addressing mode requires one extension word that contains an index register indicator and an 8-bit displacement. The index register indicator includes size and scale information. In this mode, the operand is in memory. The operand's address is the sum of the address register's contents; the sign-extended displacement value in the extension word's low-order eight bits; and the index register's sign-extended contents (possibly scaled). The user must specify the address register, the displacement, and the index register in this mode.

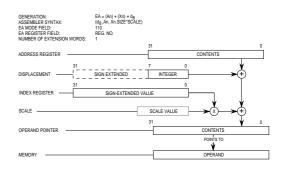

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL


2-9

Addressing Capabilities

2.2.8 Address Register Indirect with Index (Base Displacement) Mode

This addressing mode requires an index register indicator and an optional 16- or 32-bit signextended base displacement. The index register indicator includes size and scaling information. The operand is in memory. The operand's address is the sum of the contents of the address register, the base displacement, and the scaled contents of the sign-extended index register.

In this mode, the address register, the index register, and the displacement are all optional. The effective address is zero if there is no specification. This mode provides a data register indirect address when there is no specific address register and the index register is a data register.

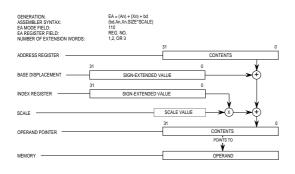


2.2.9 Memory Indirect Postindexed Mode

Addressing Capabilities

In this mode, both the operand and its address are in memory. The processor calculates an intermediate indirect memory address using a base address register and base displacement. The processor accesses a long word at this address and adds the index operand (Xn.SIZE*SCALE) and the outer displacement to yield the effective address. Both displacements and the index register contents are sign-extended to 32 bits.


In the syntax for this mode, brackets enclose the values used to calculate the intermediate memory address. All four user-specified values are optional. Both the base and outer displacements may be null, word, or long word. When omitting a displacement or suppressing an element, its value is zero in the effective address calculation.

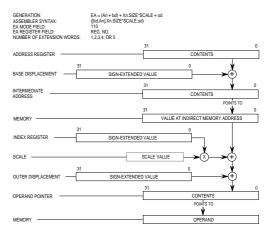

2.2.10 Memory Indirect Preindexed Mode

In this mode, both the operand and its address are in memory. The processor calculates an intermediate indirect memory address using a base address register, a base displacement, and the index operand (Xn.SIZE*SCALE). The processor accesses a long word at this address and adds the outer displacement to yield the effective address. Both displacements and the index register contents are sign-extended to 32 bits.

In the syntax for this mode, brackets enclose the values used to calculate the intermediate memory address. All four user-specified values are optional. Both the base and outer displacements may be null, word, or long word. When omitting a displacement or suppressing an element, its value is zero in the effective address calculation.

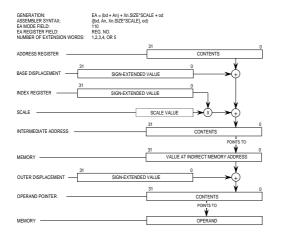

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL MOT

MOTOROLA

MOTOROLA


M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

2-13


Addressing Capabilities

2.2.12 Program Counter Indirect with Index (8-Bit Displacement) Mode

This mode is similar to the mode described in **2.2.7 Address Register Indirect with Index** (**8-Bit Displacement**) Mode, except the PC is the base register. The operand is in memory. The operand's address is the sum of the address in the PC, the sign-extended displacement integer in the extension word's lower eight bits, and the sized, scaled, and sign-extended index operand. The value in the PC is the address of the extension word. This is a program reference allowed only for reads. The user must include the displacement, the PC, and the index register when specifying this addressing mode.

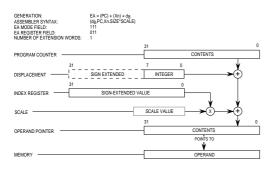

In this mode, the operand is in memory. The address of the operand is the sum of the address in the program counter (PC) and the sign-extended 16-bit displacement integer in the extension word. The value in the PC is the address of the extension word. This is a program reference allowed only for reads.

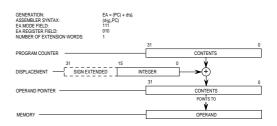


Addressing Capabilities

2.2.13 Program Counter Indirect with Index (Base Displacement) Mode

This mode is similar to the mode described in **2.2.8 Address Register Indirect with Index** (Base Displacement) Mode, except the PC is the base register. It requires an index register indicator and an optional 16- or 32-bit sign-extended base displacement. The operand's address is the sum of the contents of the PC, the base displacement, and the scaled contents of the sign-extended index register. The value of the PC is the address of the first extension word. This is a program reference allowed only for reads.


In this mode, the PC, the displacement, and the index register are optional. The user must supply the assembler notation ZPC (a zero value PC) to show that the PC is not used. This allows the user to access the program space without using the PC in calculating the effective address. The user can access the program space with a data register indirect access by placing ZPC in the instruction and specifying a data register as the index register.

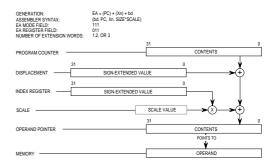

2.2.14 Program Counter Memory Indirect Postindexed Mode

This mode is similar to the mode described in **2.2.9 Memory Indirect Postindexed Mode**, but the PC is the base register. Both the operand and operand address are in memory. The processor calculates an intermediate indirect memory address by adding a base displacement to the PC contents. The processor accesses a long word at that address and adds the scaled contents of the index register and the optional outer displacement to yield the effective address. The value of the PC used in the calculation is the address of the first extension word. This is a program reference allowed only for reads.

In the syntax for this mode, brackets enclose the values used to calculate the intermediate memory address. All four user-specified values are optional. The user must supply the assembler notation ZPC (a zero value PC) to show the PC is not used. This allows the user to access the program space without using the PC in calculating the effective address. Both the base and outer displacements may be null, word, or long word. When omitting a displacement or suppressing an element, its value is zero in the effective address calculation.

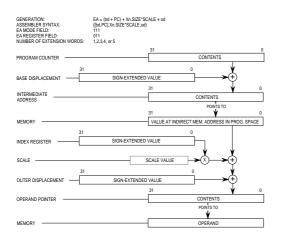


M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL MOTOROLA

2.2.15 Program Counter Memory Indirect Preindexed Mode

This mode is similar to the mode described in **2.2.10 Memory Indirect Preindexed Mode**, but the PC is the base register. Both the operand and operand address are in memory. The processor calculates an intermediate indirect memory address by adding the PC contents, a base displacement, and the scaled contents of an index register. The processor accesses a long word at immediate indirect memory address and adds the optional outer displacement to yield the effective address. The value of the PC is the address of the first extension word. This is a program reference allowed only for reads.

In the syntax for this mode, brackets enclose the values used to calculate the intermediate memory address. All four user-specified values are optional. The user must supply the assembler notation ZPC showing that the PC is not used. This allows the user to access the program space without using the PC in calculating the effective address. Both the base and outer displacements may be null, word, or long word. When omitting a displacement or suppressing an element, its value is zero in the effective address calculation.

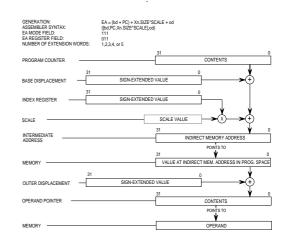

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

2-17


Addressing Capabilities

REAL OPERANDS

Addressing Capabilities


2.2.16 Absolute Short Addressing Mode

In this addressing mode, the operand is in memory, and the address of the operand is in the extension word. The 16-bit address is sign-extended to 32 bits before it is used. .

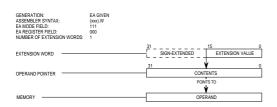

2.2.17 Absolute Long Addressing Mode

In this addressing mode, the operand is in memory, and the operand's address occupies the two extension words following the instruction word in memory. The first extension word contains the high-order part of the address; the second contains the low-order part of the address.

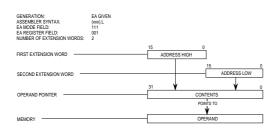

2.2.18 Immediate Data

ASSEMBI EA MODE EA REGIS

In this addressing mode, the operand is in one or two extension words. Table 2-3 lists the location of the operand within the instruction word format. The immediate data format is as follows:

FION:	OPERAND GIVEN
ER SYNTAX:	#<000>
FIELD:	111
TER FIELD:	100
OF EXTENSION WORDS:	1,2,4, OR 6, EXCEPT FOR PACKED DECIMAL

Table 2-3. Immediate Operand Location

Operation Length	Location		
Byte	Low-order byte of the extension word.		
Word	The entire extension word.		
Long Word	High-order word of the operand is in the first extension word; the low-order word is in the second extension word.		
Single-Precision	In two extension words.		
Double-Precision	In four extension words.		
Extended-Precision	In six extension words.		
Packed-Decimal Real	In six extension words.		

2.3 EFFECTIVE ADDRESSING MODE SUMMARY

Effective addressing modes are grouped according to the use of the mode. Data addressing modes refer to data operands. Memory addressing modes refer to memory operands. Alterable addressing modes refer to alterable (writable) operands. Control addressing modes refer to memory operands without an associated size.

These categories sometimes combine to form new categories that are more restrictive. Two combined classifications are alterable memory (addressing modes that are both alterable and memory addresses) and data alterable (addressing modes that are both alterable and data). Table 2-4 lists a summary of effective addressing modes and their categories.

OLA

Table 2-4. Effective Addressing Modes and Categories

Addressing Modes	Syntax	Mode Field	Reg. Field	Data	Memory	Control	Alterable
Register Direct Data Address	Dn An	000 001	reg. no. reg. no.	<u>×</u>	_	_	x x
Register Indirect Address Address with Postincrement Address with Predecrement Address with Displacement	(An) (An)+ -(An) (d ₁₆ ,An)	010 011 100 101	reg. no. reg. no. reg. no. reg. no.	x x x x	x x x x	× — ×	X X X X
Address Register Indirect with Index 8-Bit Displacement Base Displacement	(d ₈ ,An,Xn) (bd,An,Xn)	110 110	reg. no. reg. no.	x x	x x	x x	x x
Memory Indirect Postindexed Preindexed	([bd,An],Xn,od) ([bd,An,Xn],od)	110 110	reg. no. reg. no.	x	x x	x x	x x
Program Counter Indirect with Displacement	(d ₁₆ ,PC)	111	010	x	х	x	_
Program Counter Indirect with Index 8-Bit Displacement Base Displacement	(d ₈ ,PC,Xn) (bd,PC,Xn)	111 111	011 011	x x	x x	x x	
Program Counter Memory Indirect Postindexed Preindexed	([bd,PC],Xn,od) ([bd,PC,Xn],od)	111 111	011 011	x x	x x	x x	x x
Absolute Data Addressing Short Long	(xxx).W (xxx).L	111 111	000 000	x x	x x	x x	
Immediate	# <xxx></xxx>	111	100	Х	Х	-	-

Addressing Capabilities

Programs can be easily transported from one member of the M68000 family to another in an upward-compatible ifashion. The user object code of each early member of the family, which is upward compatible with newer members, can be executed on the newer microprocessor without change. Brief extension word formats are encoded with information that allows the CPU32, MC68020, MC68030, and MC68040 to distinguish the basic M68000 family architecture's new address extensions. Figure 2-3 illustrates these brief extension word formats. The encoding for SCALE used by the CPU32, MC68020, MC68030, and MC68040 is a compatible extension of the M68000 family architecture. A value of zero for SCALE is the same encoding for both extension words. Software that uses this encoding is compatible with all processors in the M68000 family. Both brief extension word formats do not contain the other values of SCALE. Software can be easily migrated in an upwardcompatible direction, with downward support only for nonscaled addressing. If the MC68000 were to execute an instruction that encoded a scaling factor, the scaling factor wold be ignored and would not access the desired memory address. The earlier microprocessors. Although they can detect illegal instructions, they do not decode invalid encodings of the brief extension word formats as exceptions.

7 6 15 14 13 12 11 10 D/A REGISTER W/L 0 9 8 (a) MC68000. MC68008. and MC68010

 15
 14
 13
 12
 11
 10
 9
 8
 7
 6
 5
 4
 3
 2
 1
 0

 D/A
 REGISTER
 W/L
 SCALE
 0
 DISPLACEMENT INTEGER

(b) CPU32, MC68020, MC68030, and MC68040

Figure 2-3. M68000 Family Brief Extension Word Formats

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

2-21

Addressing Capabilities

2.5 FULL EXTENSION ADDRESSING MODES

The full extension word format provides additional addressing modes for the MC68020, MC68030, and MC68040. There are four elements common to these full extension addressing modes: a base register (RN), an index register (RN), a base displacement (bd), and an outer displacement (od). Each of these four elements can be suppressed independently of each other. However, at least one element must be active and not suppressed. When an element is suppressed, it has an effective value of zero.

BR can be suppressed through the BS field of the full extension word format. The encoding of bits 0-5 in the single effective address word format (see Figure 2-2) selects BR as either the PC when using program relative addressing modes, or An when using non-program relative addressing modes. The value of the PC is the address of the extension word. For the non-program relative addressing modes, BR is the contents of a selected An.

SIZE and SCALE can be used to modify Xn. The W/L field in the full extension format selects the size of Xn as a word or long word. The SCALE field selects the scaling factor, shifts the value of the Xn left multiplying the value by 1, 2, 4, or 8, respectively, without actually changing the value. Scaling can be used to calculate the address of arrayed structures. Figure 2-4 illustrates the scaling of an Xn.

The bd and od can be either word or long word. The size of od is selected through the encoding of the I/IS field in the full extension word format (refer to Table 2-2). There are two main modes of operation that use these four elements in different ways: no memory indirect action and memory indirect. The od is provided only for using memory indirect addressing modes of which there are three types: with preindex, with postindex, and with index suppressed.

Addressing Capabilities

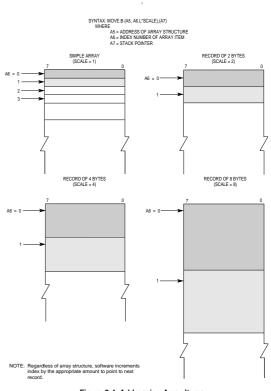


Figure 2-4. Addressing Array Items

No memory indirect action mode uses BR, Xn with its modifiers, and bd to calculate the address of the required operand. Data register indirect (Dn) and absolute address with index (bd,Xn.SIZE*SCALE) are examples of the no memory indirect action mode. Figure 2-5 illustrates the no memory indirect action mode.

BR	Xn	bd	Addressing Mode	
S	S	S	Not Applicable	
S	S	Α	Absolute Addressing Mode	
S	А	S	Register Indirect	
S	А	Α	Register Indirect with Constant Index	
An	S	S	Address Register Indirect	
An	S	A	Address Register Indirect with Constant Index	
An	Α	S	Address Register Indirect with Variable Index	
An	Α	Α	Address Register Indirect with Constant and Variable Index	
PC	S	S	PC Relative	
PC	S	Α	PC Relative with Constant Index	
PC	Α	S	PC Relative with Variable Index	
PC	А	А	PC Relative with Constant and Variable Index	

NOTE: S indicates suppressed and A indicates active.



Figure 2-5. No Memory Indirect Action

Memory indirect modes fetch two operands from memory. The BR and bd evaluate the address of the first operand, intermediate memory pointer (IMP). The value of IMP and the od evaluates the address of the second operand.

There are three types of memory indirect modes: pre-index, post-index, and index register suppressed. Xn and its modifiers can be allocated to determine either the address of the IMP (pre-index) or to the address of the second operand (post-index).

2.5.2.1 MEMORY INDIRECT WITH PREINDEX. The Xn is allocated to determine the address of the IMP. Figure 2-6 illustrates the memory indirect with pre-indexing mode.

BR	Xn	bd	od	IMP Addressing Mode	Operand Addressing Mode
S	Α	S	S	Register Indirect	Memory Pointer Directly to Data Operand
s	А	s	A	Register Indirect	Memory Pointer as Base with Displacement to Data Operand
S	A	A	S	Register Indirect with Constant Index	Memory Pointer Directly to Data Operand
s	А	А	А	Register Indirect with Constant Index	Memory Pointer as Base with Displacement to Data Operand
An	А	s	s	Address Register Indirect with Variable Index	Memory Pointer Directly to Data Operand
An	А	s	А	Address Register Indirect with Variable Index	Memory Pointer as Base with Displacement to Data Operand
An	А	А	s	Address Register Indirect with Constant and Variable Index	Memory Pointer Directly to Data Operand
An	А	А	А	Address Register Indirect with Constant and Variable Index	Memory Pointer as Base with Displacement to Data Operand
PC	Α	S	S	PC Relative with Variable Index	Memory Pointer Directly to Data Operand
PC	А	s	А	PC Relative with Variable Index	Memory Pointer as Base with Displacement to Data Operand
PC	А	А	s	PC Relative with Constant and Variable Index	Memory Pointer Directly to Data Operand
PC	А	А	А	PC Relative with Constant and Variable Index	Memory Pointer as Base with Displacement to Data Operand

NOTE: S indicates suppressed and A indicates active.

2-24

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

2-25

Addressing Capabilities

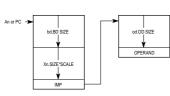


Figure 2-6. Memory Indirect with Preindex

2.5.2.2 MEMORY INDIRECT WITH POSTINDEX. The Xn is allocated to evaluate the address of the second operand. Figure 2-7 illustrates the memory indirect with post-indexing mode.

BR	Xn	bd	od	IMP Addressing Mode	Operand Addressing Mode
S	Α	S	S	-	_
S	Α	S	A	-	_
s	А	А	s	Absolute Addressing Mode	Memory Pointer with Variable Index to Data Operand
s	А	А	А	Absolute Addressing Mode	Memory Pointer with Constant and Variable Index to Data Operand
An	А	S	s	Address Register Indirect	Memory Pointer with Variable Index to Data Operand
An	А	s	А	Address Register Indirect	Memory Pointer with Constant and Variable Index to Data Operand
An	Α	А	s	Address Register Indirect with Constant Index	Memory Pointer with Variable Index to Data Operand
An	А	А	А	Address Register Indirect with Constant Index	Memory Pointer with Constant and Variable Index to Data Operand
PC	А	s	s	PC Relative	Memory Pointer with Variable Index to Data Operand
PC	А	s	А	PC Relative	Memory Pointer with Constant and Variable Index to Data Operand
PC	А	А	s	PC Relative with Constant Index	Memory Pointer with Variable Index to Data Operand
PC	А	А	А	PC Relative with Constant Index	Memory Pointer with Constant and Variable Index to Data Operand

NOTE: S indicates suppressed and A indicates active.

Addressing Capabilities

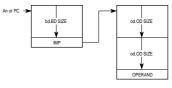


Figure 2-7. Memory Indirect with Postindex

2.5.2.3 MEMORY INDIRECT WITH INDEX SUPPRESSED. The Xn is suppressed. Figure 2-8 illustrates the memory indirect with index suppressed mode.

BR	Xn	bd	od	IMP Addressing Mode	Operand Addressing Mode
S	S	S	S	-	-
S	S	S	A	-	-
S	S	A	S	Absolute Addressing Mode	Memory Pointer Directly to Data Operand
s	s	А	А	Absolute Addressing Mode	Memory Pointer as Base with Displacement to Data Operand
An	S	S	S	Address Register Indirect	Memory Pointer Directly to Data Operand
An	s	s	А	Address Register Indirect	Memory Pointer as Base with Displacement to Data Operand
An	s	А	s	Address Register Indirect with Constant Index	Memory Pointer Directly to Data Operand
An	s	А	А	Address Register Indirect with Constant Index	Memory Pointer as Base with Displacement to Data Operand
PC	S	S	S	PC Relative	Memory Pointer Directly to Data Operand
PC	s	s	А	PC Relative	Memory Pointer as Base with Displacement to Data Operand
PC	S	A	S	PC Relative with Constant Index	Memory Pointer Directly to Data Operand
PC	s	А	А	PC Relative with Constant Index	Memory Pointer as Base with Displacement to Data Operand

NOTE: S indicates suppressed and A indicates active.

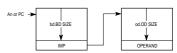


Figure 2-8. Memory Indirect with Index Suppress

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

2.6 OTHER DATA STRUCTURES

Stacks and queues are common data structures. The M68000 family implements a system stack and instructions that support user stacks and queues.

2.6.1 System Stack

Address register seven (A7) is the system stack pointer. Either the user stack pointer (USP), the interrupt stack pointer ((SP), or the master stack pointer (MSP) is active at any one time. Refer to **Section 1 Introduction** for details on these stack pointers. To keep data on the system stack aligned for maximum efficiency, the active stack pointer is automatically decremented or incremented by two for all byte-size operands moved to or from the stack. In long-word-organized memory, aligning the stack pointer on a long-word address significantly increases the efficiency of stacking exception frames, subroutine calls and returns, and other stacking operations.

The user can implement stacks with the address register indirect with postincrement and predecrement addressing modes. With an address register the user can implement a stack that fills either from high memory to low memory or from low memory to high memory. Important consideration are:

- Use the predecrement mode to decrement the register before using its contents as the pointer to the stack.
- Use the postincrement mode to increment the register after using its contents as the pointer to the stack.
- Maintain the stack pointer correctly when byte, word, and long-word items mix in these stacks.

To implement stack growth from high memory to low memory, use -(An) to push data on the stack and (An) + to pull data from the stack. For this type of stack, after either a push or a pull operation, the address register points to the top item on the stack.



Addressing Capabilities

To implement stack growth from low memory to high memory, use (An) + to push data on the stack and -(An) to pull data from the stack. After either a push or pull operation, the address register points to the next available space on the stack.




2.6.2 Queues

MOTOROLA

The user can implement queues, groups of information waiting to be processed, with the address register indirect with postincrement or predecrement addressing modes. Using a pair of address registers, the user implements a queue that fills either from high memory to low memory or from low memory to high memory. Two registers are used because the queues get pushed from one end and pulled from the other. One address register contains the put pointer; the other register the get pointer. To implement growth of the queue from low memory to high memory, use the put address register to put data into the queue and the get address register to get data from the queue.

After a put operation, the put address register points to the next available space in the queue; the unchanged get address register points to the next item to be removed from the queue. After a get operation, the get address register points to the next item to be removed from the queue; the unchanged put address register points to the next available space in the queue.

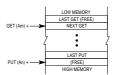

To implement the queue as a circular buffer, the relevant address register should be checked and adjusted. If necessary, do this before performing the put or get operation. Subtracting the buffer length (in bytes) from the register adjusts the address register. To implement growth of the queue from high memory to low memory, use the put address register indirect to put data into the queue and get address register indirect to get data from the queue.

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL




M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

Addressing Capabilities

After a put operation, the put address register points to the last item placed in the queue; the unchanged get address register points to the last item removed from the queue. After a get operation, the get address register points to the last item placed in the queue.

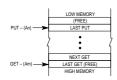

To implement the queue as a circular buffer, the get or put operation should be performed first. Then the relevant address register should be checked and adjusted, if necessary. Adding the buffer length (in bytes) to the address register contents adjusts the address register.

SECTION 3 INSTRUCTION SET SUMMARY

This section briefly describes the M68000 family instruction set, using Motorola,s assembly language syntax and notation. It includes instruction set details such as notation and format, selected instruction examples, and an integer condition code discussion. The section concludes with a discussion of floating-point details such as computational accuracy, conditional test definitions, an explanation of the operation table, and a discussion of not-anumbers (NANs) and postprocessing.

3.1 INSTRUCTION SUMMARY

Instructions form a set of tools that perform the following types of operations:

- Data Movement Integer Arithmetic Logical Operations Shift and Rotate Operations Bit Manipulation Bit Field Manipulation Binary-Coded Decimal Arithmetic
- Program Control System Control Cache Maintenance Multiprocessor Communications Memory Management Floating-Point Arithmetic

The following paragraphs describe in detail the instruction for each type of operation. Table 3-1 lists the notations used throughout this manual. In the operand syntax statements of the instruction definitions, the operand on the right is the destination operand.

MOTOROLA

2-29

Instruction Set Summary

Table 3-1. Notational Conventions

	Table 5-1. Notational Conventions
	Single- And Double Operand Operations
+	Arithmetic addition or postincrement indicator.
-	Arithmetic subtraction or predecrement indicator.
×	Arithmetic multiplication.
*	Arithmetic division or conjunction symbol.
~	Invert; operand is logically complemented.
Λ	Logical AND
v	Logical OR
÷	Logical exclusive OR
\rightarrow	Source operand is moved to destination operand.
$\leftarrow \rightarrow$	Two operands are exchanged.
<op></op>	Any double-operand operation.
<operand>tested</operand>	Operand is compared to zero and the condition codes are set appropriately.
sign-extended	All bits of the upper portion are made equal to the high-order bit of the lower portion.
-	Other Operations
TRAP	Equivalent to Format +Offset Word \rightarrow (SSP); SSP – 2 \rightarrow SSP; PC \rightarrow (SSP); SSP – 4 \rightarrow SSP; SR \rightarrow (SSP); SSP – 2 \rightarrow SSP; (Vector) \rightarrow PC
STOP	Enter the stopped state, waiting for interrupts.
<operand>10</operand>	The operand is BCD; operations are performed in decimal.
If <condition> then <operations> else <operations></operations></operations></condition>	Test the condition. If true, the operations after "then" are performed. If the condition is false and the optional "else" clause is present, the operations after "else" are performed. If the condition is false and else is omitted, the instruction performs no operation. Refer to the Bcc instruction description as an example.
	Register Specifications
An	Any Address Register n (example: A3 is address register 3)
Ax, Ay	Source and destination address registers, respectively.
Dc	Data register D7–D0, used during compare.
Dh, Dl	Data register's high- or low-order 32 bits of product.
Dn	Any Data Register n (example: D5 is data register 5)
Dr, Dq	Data register's remainder or quotient of divide.
Du	Data register D7–D0, used during update.
Dx, Dy	Source and destination data registers, respectively.
MRn	Any Memory Register n.
Rn	Any Address or Data Register
Rx, Ry	Any source and destination registers, respectively.
Xn	Index Register

Table 3-1. Notational Conventions (Continued)

-	Data Format And Type			
+ inf	Positive Infinity			
<fmt></fmt>	Operand Data Format: Byte (B), Word (W), Long (L), Single (S), Double (D), Extended (X), or Packed (P).			
B, W, L	Specifies a signed integer data type (twos complement) of byte, word, or long word.			
D	Double-precision real data format (64 bits).			
k	A twos complement signed integer (-64 to +17) specifying a number's format to be stored in the packed decimal format.			
Р	Packed BCD real data format (96 bits, 12 bytes).			
S	Single-precision real data format (32 bits).			
х	Extended-precision real data format (96 bits, 16 bits unused).			
– inf	Negative Infinity			
	Subfields and Qualifiers			
# <xxx> or #<data></data></xxx>	Immediate data following the instruction word(s).			
()	Identifies an indirect address in a register.			
[]	Identifies an indirect address in memory.			
bd	Base Displacement			
CCC	Index into the MC68881/MC68882 Constant ROM			
d _n	Displacement Value, n Bits Wide (example: d ₁₆ is a 16-bit displacement).			
LSB	Least Significant Bit			
LSW	Least Significant Word			
MSB	Most Significant Bit			
MSW	Most Significant Word			
od	Outer Displacement			
SCALE	A scale factor (1, 2, 4, or 8 for no-word, word, long-word, or quad-word scaling, respectively).			
SIZE	The index register's size (W for word, L for long word).			
{offset:width}	Bit field selection.			
	Register Names			
CCR	Condition Code Register (lower byte of status register)			
DFC	Destination Function Code Register			
FPcr	Any Floating-Point System Control Register (FPCR, FPSR, or FPIAR)			
FPm, FPn	Any Floating-Point Data Register specified as the source or destination, respectively.			
IC, DC, IC/DC	Instruction, Data, or Both Caches			
MMUSR	MMU Status Register			
PC	Program Counter			
Rc	Any Non Floating-Point Control Register			
SFC	Source Function Code Register			
SR	Status Register			

3-2

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

3-3

Instruction Set Summary

Instruction Set Summary

LB

m m–n

UB

Bit m of an Operand

Upper Bound

Bits m through n of Operand

Register Codes General Case Carry Bit in CCR Condition Codes from CCR cc FC Function Code Negative Bit in CCR Ν Undefined, Reserved for Motorola Use. Overflow Bit in CCR Extend Bit in CCR x Z Zero Bit in CCR Not Affected or Applicable. Stack Pointers 100 Supervisor/Interrupt Stack Pointe MSP Supervisor/Master Stack Pointer Active Stack Pointer SSP Supervisor (Master or Interrupt) Stack Pointer USP User Stack Pointer Miscellaneous Effective Address <ea> nble Program Labe label List of registers, for example D3-D0. <list>

Table 3-1. Notational Conventions (Concluded)

3.1.1 Data Movement Instructions

The MOVE and FMOVE instructions with their associated addressing modes are the basic means of transferring and storing addresses and data. MOVE instructions transfer byte, word, and long-word operands from memory to memory, memory to register, rogister, move instructions transfer word and long-word operands and ensure that only valid address manipulations are executed. In addition to the general MOVE instructions, there are several special data movement instructions: MOVE16, MOVEP, MOVEP, MOVEP, MOVE, LAN, PEA, LINK, and UNLK. The MOVE16 instruction is an MC68040 extension to the M68000 instruction set.

The FMOVE instructions move operands into, out of, and between floating-point data registers. FMOVE also moves operands to and from the floating-point control register (FPCR), floating-point status register (FPSR), and floating-point instruction address register (FPIAR). For operands moved into a floating-point data register, FSMOVE and FDMOVE explicitly select single- and double-precision rounding of the result, respectively. FMOVEM moves any combination of either floating-point data registers or floating-point control registers. Table 3-2 lists the general format of these integer and floating-point data movement instructions.

Instruction	Operand Syntax	Operand Size	Operation
EXG	Rn, Rn	32	$Rn \leftarrow \rightarrow Rn$
FMOVE	FPm,FPn	Х	Source → Destination
	<ea>,FPn</ea>	B, W, L, S, D, X, P	
	FPm, <ea></ea>	B, W, L, S, D, X, P	
	<ea>,FPcr</ea>	32	
	FPcr, <ea></ea>	32	
FSMOVE,	FPm,FPn	Х	Source → Destination; round destination to single or
FDMOVE	<ea>,FPn</ea>	B, W, L, S, D, X	double precision.
FMOVEM	<ea>.<list>1</list></ea>	32, X	Listed Registers → Destination
	<ea>,Dn</ea>	X	
	<list>1.<ea></ea></list>	32, X	Source → Listed Registers
	Dn, <ea></ea>	x	
LEA	<ea>,An</ea>	32	$\langle ea \rangle \rightarrow An$
LINK	An,# <d></d>	16, 32	$SP - 4 \rightarrow SP$; $An \rightarrow (SP)$; $SP \rightarrow An$, $SP + D \rightarrow SP$
MOVE	<ea>,<ea></ea></ea>	8, 16, 32	Source → Destination
MOVE16	<ea>,<ea></ea></ea>	16 bytes	Aligned 16-Byte Block → Destination
MOVEA	<ea>,An</ea>	$16, 32 \rightarrow 32$	
MOVEM	list, <ea></ea>	16, 32	Listed Registers → Destination
	<ea>,list</ea>	$16, 32 \rightarrow 32$	Source → Listed Registers
MOVEP	Dn, (d ₁₆ ,An)	16, 32	Dn 31–24 \rightarrow (An + d _n); Dn 23–16 \rightarrow (An + d _n + 2);
			$Dn 15-8 \rightarrow (An + d_n + 4); Dn 7-0 \rightarrow (An + d_n + 6)$
	(d ₁₆ ,An),Dn		$(An + d_n) \rightarrow Dn 31-24; (An + d_n + 2) \rightarrow Dn 23-16;$
			$(An + d_n + 4) \rightarrow Dn 15-8; (An + d_n + 6) \rightarrow Dn 7-0$
MOVEQ	# <data>,Dn</data>	$8 \rightarrow 32$	Immediate Data → Destination
PEA	<ea></ea>	32	$SP - 4 \rightarrow SP; \langle ea \rangle \rightarrow (SP)$
UNLK	An	32	$An \rightarrow SP$; (SP) $\rightarrow An$; SP + 4 $\rightarrow SP$

NOTE: A register list includes any combination of the eight floating-point data registers or any combination of three control registers (FPCR, FPSR, and FPIAR). If a register list mask resides in a data register, only floating-point data registers may be specified.

3.1.2 Integer Arithmetic Instructions

The integer arithmetic operations include four basic operations: ADD, SUB, MUL, and DIV. They also include CMP, CMPM, CMP2, CLR, and NEG. The instruction set includes ADD, CMP, and SUB instructions for both address and data operations with all operand sizes valid for data operations. Address operands consist of 16 or 32 bits. The CLR and NEG instructions apply to all sizes of data operands. Signed and unsigned MUL and DIV instructions include:

- Word multiply to produce a long-word product.
- · Long-word multiply to produce a long-word or quad-word product.
- · Long word divided by a word divisor (word quotient and word remainder).
- Long word or quad word divided by a long-word divisor (long-word quotient and longword remainder).

3-6	M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

```
A set of extended instructions provides multiprecision and mixed-size arithmetic: ADDX, SUBX, EXT, and NEGX. Refer to Table 3-3 for a summary of the integer arithmetic operations. In Table 3-3, X refers to the X-bit in the CCR.
```

Table 3-3. Integer Arithmetic Operation Format

Instruction	Operand Syntax	Operand Size	Operation
ADD	Dn, <ea> <ea>,Dn</ea></ea>	8, 16, 32 8, 16, 32	Source + Destination \rightarrow Destination
ADDA	<ea>,An</ea>	16, 32	
ADDI	# <data>,<ea></ea></data>	8, 16, 32	Immediate Data + Destination \rightarrow Destination
ADDQ	# <data>,<ea></ea></data>	8, 16, 32	
ADDX	Dn,Dn	8, 16, 32	Source + Destination + $X \rightarrow$ Destination
	-(An), -(An)	8, 16, 32	
CLR	<ea></ea>	8, 16, 32	$0 \rightarrow Destination$
CMP	<ea>,Dn</ea>	8, 16, 32	Destination – Source
CMPA	<ea>,An</ea>	16, 32	
CMPI	# <data>,<ea></ea></data>	8, 16, 32	Destination – Immediate Data
CMPM	(An)+,(An)+	8, 16, 32	Destination – Source
CMP2	<ea>,Rn</ea>	8, 16, 32	Lower Bound \rightarrow Rn \rightarrow Upper Bound
DIVS/DIVU	<ea>,Dn</ea>	$32 \div 16 \rightarrow 16, 16$	Destination +Source → Destination
	<ea>,Dr-Dq</ea>	$64 \div 32 \rightarrow 32,32$	(Signed or Unsigned Quotient, Remainder)
	<ea>,Dq</ea>	$32 \div 32 \rightarrow 32$	
DIVSL/DIVUL	<ea>,Dr-Dq</ea>	$32 \div 32 \rightarrow 32,32$	
EXT	Dn	8 → 16	Sign-Extended Destination \rightarrow Destination
	Dn	$16 \rightarrow 32$	
EXTB	Dn	8 → 32	
MULS/MULU	<ea>,Dn</ea>	$16 \times 16 \rightarrow 32$	Source x Destination → Destination
	<ea>,DI</ea>	$32 \times 32 \rightarrow 32$	(Signed or Unsigned)
	<ea>,Dh-Dl</ea>	$32 \times 32 \rightarrow 64$	
NEG	<ea></ea>	8, 16, 32	$0 - Destination \rightarrow Destination$
NEGX	<ea></ea>	8, 16, 32	$0 - Destination - X \rightarrow Destination$
SUB	<ea>,Dn</ea>	8, 16, 32	Destination = Source → Destination
	Dn, <ea></ea>	8, 16, 32	
SUBA	<ea>,An</ea>	16, 32	
SUBI	# <data>,<ea></ea></data>	8, 16, 32	Destination – Immediate Data \rightarrow Destination
SUBQ	# <data>,<ea></ea></data>	8, 16, 32	
SUBX	Dn,Dn	8, 16, 32	Destination – Source – $X \rightarrow$ Destination
	-(An), -(An)	8, 16, 32	

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

3-7

Instruction Set Summary

Instruction Set Summary

3.1.3 Logical Instructions

The logical operation instructions (AND, OR, EOR, and NOT) perform logical operations with all sizes of integer data operands. A similar set of immediate instructions (ANDI, ORI, and EORI) provides these logical operations with all sizes of immediate data. Table 3-4 summarizes the logical operations.

Instruction	Operand Syntax	Operand Size	Operation
AND	<ea>,Dn Dn,<ea></ea></ea>	8, 16, 32 8, 16, 32	Source Λ Destination \rightarrow Destination
ANDI	# <data>,<ea></ea></data>	8, 16, 32	Immediate Data Λ Destination \rightarrow Destination
EOR	Dn, <ea></ea>	8, 16, 32	Source ⊕ Destination → Destination
EORI	# <data>,<ea></ea></data>	8, 16, 32	Immediate Data \oplus Destination \rightarrow Destination
NOT	<ea></ea>	8, 16, 32	~ Destination \rightarrow Destination
OR	<ea>,Dn Dn,<ea></ea></ea>	8, 16, 32	Source V Destination \rightarrow Destination
ORI	# <data>,<ea></ea></data>	8, 16, 32	Immediate Data V Destination → Destination

Table 3-4. Logical Operation Format

3.1.4 Shift and Rotate Instructions

The ASR, ASL, LSR, and LSL instructions provide shift operations in both directions. The ROR, ROL, ROXR, and ROXL instructions perform rotate (circular shift) operations, with and without the CCR extend bit (X-bit). All shift and rotate operations can be performed on either registers or memory.

Register shift and rotate operations shift all operand sizes. The shift count can be specified in the instruction operation word (to shift from 1-8 places) or in a register (modulo 64 shift count).

Memory shift and rotate operations shift word operands one bit position only. The SWAP instruction exchanges the 16-bit halves of a register. Fast byte swapping is possible by using the ROR and ROL instructions with a shift count of eight, enhancing the performance of the shift/rotate instructions. Table 3-5 is a summary of the shift and rotate operations. In Table 3-5, C and X refer to the C-bit and X- bit in the CCR.

Table 3-5. Shift and Rotate Operation Format

Instruction	Operand Syntax	Operand Size	Operation
ASL	Dn, Dn # (data), Dn ea	8, 16, 32 8, 16, 32 16	
ASR	Dn, Dn #(data), Dn ea	8, 16, 32 8, 16, 32 16	
LSL	Dn, Dn # (data), Dn ea	8, 16, 32 8, 16, 32 16	
LSR	Dn, Dn # (data), Dn ea	8, 16, 32 8, 16, 32 16	
ROL	Dn, Dn # (data), Dn ea	8, 16, 32 8, 16, 32 16	
ROR	Dn, Dn # (data), Dn ea	8, 16, 32 8, 16, 32 16	
ROXL	Dn, Dn # (data), Dn ea	8, 16, 32 8, 16, 32 16	
ROXR	Dn, Dn # (data), Dn ea	8, 16, 32 8, 16, 32 16	
SWAP	Dn	32	MSW LSW

NOTE: X indicates the extend bit and C the carry bit in the CCR.

3.1.5 Bit Manipulation Instructions

BTST, BSET, BCLR, and BCHG are bit manipulation instructions. All bit manipulation operations can be performed on either registers or memory. The bit number is specified either as immediate data or in the contents of a data register. Register operands are 32 bits long, and memory operands are 8 bits long. Table 3-6 summarizes bit manipulation operations; Z refers to the zero bit of the CCR.

Table 3-6. Bit Manipulation Operation Format

Instruction	Operand Syntax	Operand Size	Operation
BCHG	Dn, <ea> #<data>,<ea></ea></data></ea>	8, 32 8, 32	\sim (<bit number=""> of Destination) \rightarrow Z \rightarrow Bit of Destination</bit>
BCLR	Dn, <ea> #<data>,<ea></ea></data></ea>	8, 32 8, 32	~ (<bit number=""> of Destination) \rightarrow Z; 0 \rightarrow Bit of Destination</bit>
BSET	Dn, <ea> #<data>,<ea></ea></data></ea>	8, 32 8, 32	~ (<bit number=""> of Destination) \rightarrow Z; 1 \rightarrow Bit of Destination</bit>
BTST	Dn, <ea> #<data>,<ea></ea></data></ea>	8, 32 8, 32	~ (<bit number=""> of Destination) \rightarrow Z</bit>

3.1.6 Bit Field Instructions

The M68000 family architecture supports variable-length bit field operations on fields of up to 32 bits. The BFINS instruction inserts a value into a bit field. BFEXTU and BFEXTS extract a value from the field. BFFFO finds the first set bit in a bit field. Also included are instructions analogous to the bit manipulation operations: BFTST, BFSET, BFCLR, and BFCHG. Table 3-7 summarizes bit field operations.

Instruction	Operand Syntax	Operand Size	Operation
BFCHG	<ea> {offset:width}</ea>	1–32	\sim Field \rightarrow Field
BFCLR	<ea> {offset:width}</ea>	1–32	$0\text{'s} \rightarrow \text{Field}$
BFEXTS	<ea> {offset:width}, Dn</ea>	1–32	Field \rightarrow Dn; Sign-Extended
BFEXTU	<ea> {offset:width}, Dn</ea>	1–32	Field \rightarrow Dn; Zero-Extended
BFFFO	<ea> {offset:width}, Dn</ea>	1–32	Scan for First Bit Set in Field; Offset \rightarrow Dn.
BFINS	Dn, <ea> {offset:width}</ea>	1–32	$Dn \to Field$
BFSET	<ea> {offset:width}</ea>	1–32	$1's \rightarrow Field$
BFTST	<ea> {offset:width}</ea>	1-32	Field MSB \rightarrow N; ~ (OR of All Bits in Field) \rightarrow Z

NOTE: All bit field instructions set the CCR N and Z bits as shown for BFTST before performing the specified operation.

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

3.1.7 Binary-Coded Decimal Instructions

Five instructions support operations on binary-coded decimal (BCD) numbers. The arithmetic operations on packed BCD numbers are ABCD, SBCD, and NBCD. PACK and UNPK instructions aid in the conversion of byte-encoded numeric data, such as ASCII or EBCDIC strings to BCD data and vice versa. Table 3-8 summarizes BCD operations. In Table 3- 8 X refers to the X-bit in the CCR.

Instruction	Operand Syntax	Operand Size	Operation
ABCD	Dn,Dn	8	Source ₁₀ + Destination ₁₀ + X \rightarrow Destination
	-(An), -(An)	8	
NBCD	<ea></ea>	8	$0 - \text{Destination}_{10} - X \rightarrow \text{Destination}$
PACK	-(An), -(An) # <data></data>	$16 \rightarrow 8$	Unpackaged Source + Immediate Data → Packed
	Dn,Dn,# <data></data>	$16 \rightarrow 8$	Destination
SBCD	Dn,Dn	8	Destination ₁₀ – Source ₁₀ – X \rightarrow Destination
	-(An), -(An)	8	
UNPK	-(An),-(An) # <data></data>	$8 \rightarrow 16$	Packed Source → Unpacked Source
	Dn,Dn,# <data></data>	$8 \rightarrow 16$	Unpacked Source + Immediate Data \rightarrow
			Unpacked Destination

3.1.8 Program Control Instructions

A set of subroutine call and return instructions and conditional and unconditional branch instructions perform program control operations. Also included are test operand instructions (TST and FTST), which set the integer or floating-point condition codes for use by other program and system control instructions. NOP forces synchronization of the internal pipelines. Table 3-9 summarizes these instructions.

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

3-10

Instruction Set Summary

Table 3-9. Program Control Operation Format

Instruction	Operand Syntax	Operand Size	Operation		
	Integer and Floating-Point Conditional				
Bcc, FBcc	<label></label>	8, 16, 32	If Condition True, Then PC + $d_n \rightarrow PC$		
DBcc, FDBcc	Dn, <label></label>	16	If Condition False, Then $Dn - 1 \rightarrow Dn$		
			If $Dn \rightarrow -1$, Then PC + $d_n \rightarrow PC$		
Scc, FScc	<ea></ea>	8	If Condition True, Then 1's \rightarrow Destination;		
			Else 0's \rightarrow Destination		
		Uncor	ditional		
BRA	<label></label>	8, 16, 32	$PC + d_n \rightarrow PC$		
BSR	<label></label>	8, 16, 32	$SP - 4 \rightarrow SP; PC \rightarrow (SP); PC + d_n \rightarrow PC$		
JMP	<ea></ea>	none	Destination \rightarrow PC		
JSR	<ea></ea>	none $SP - 4 \rightarrow SP; PC \rightarrow (SP); Destination \rightarrow PC$			
NOP	none	none PC + 2 → PC (Integer Pipeline Synchronized)			
FNOP	none	none PC + 4 → PC (FPU Pipeline Synchronized)			
		Ret	turns		
RTD	# <data></data>	16	$(SP) \rightarrow PC; SP + 4 + d_n \rightarrow SP$		
RTR	none	none	$(SP) \rightarrow CCR; SP + 2 \rightarrow SP; (SP) \rightarrow PC; SP + 4 \rightarrow SP$		
RTS	none	none	$(SP) \rightarrow PC; SP + 4 \rightarrow SP$		
		Test C	Operand		
TST	<ea></ea>	8, 16, 32	Set Integer Condition Codes		
FTST	<ea></ea>	B, W, L, S, D, X, P	Set Floating-Point Condition Codes		
	FPn	Х			

Letters cc in the integer instruction mnemonics Bcc, DBcc, and Scc specify testing one of the following conditions: CC—Carry clear GE—Greater than or equal LS—Lower or same PL—Plus

	CS-Carry set	GT—Greater than
	LT—Less than	T—Always true*
	EQ-Equal	HI—Higher
	MI-Minus	VC—Overflow clear
	F-Never true*	LE-Less than or equal
	NE-Not equal	VS-Overflow set
loi	applicable to the Bcc instruction	ns.

3.1.9 System Control Instructions

Privileged and trapping instructions as well as instructions that use or modify the CCR provide system control operations. FSAVE and FRESTORE save and restore the nonuser visible portion of the FPU during context switches in a virtual memory or multitasking system. The conditional trap instructions, which use the same conditional tests as their corresponding program control instructions, allow an optional 16- or 32-bit immediate operand to be included as part of the instruction for passing parameters to the operating system. These instructions cause the processor to flush the instruction pipe. Table 3-10 summarizes these instructions. See 3.2 Integer Unit Condition Code Computation for more details on condition codes.

3-11

Table 3-10. System Control Operation Format

Instruction	Operand Syntax	Operand Size	Operation		
Privileged					
ANDI to SR	# <data>,SR</data>	16	Immediate Data $\Lambda SR \rightarrow SR$		
EORI to SR	# <data>,SR</data>	16	Immediate Data \oplus SR \rightarrow SR		
FRESTORE	<ea></ea>	none	State Frame → Internal Floating-Point Registers		
FSAVE	<ea></ea>	none	Internal Floating-Point Registers → State Frame		
MOVE to SR	<ea>,SR</ea>	16	Source \rightarrow SR		
MOVE from SR	SR, <ea></ea>	16	$SR \rightarrow Destination$		
MOVE USP	USP,An An,USP	32 32	$USP \rightarrow An$ $An \rightarrow USP$		
MOVEC	Rc,Rn Rn,Rc	32 32	$Rc \rightarrow Rn$ $Rn \rightarrow Rc$		
MOVES	Rn, <ea> <ea>,Rn</ea></ea>	8, 16, 32	$Rn \rightarrow Destination Using DFC$ Source Using SFC $\rightarrow Rn$		
ORI to SR	# <data>,SR</data>	16	Immediate Data V SR \rightarrow SR		
RESET	none	none	Assert Reset Output		
RTE	none	none	$\begin{array}{l} (\text{SP}) \rightarrow \text{SR}; \text{SP} + 2 \rightarrow \text{SP}; (\text{SP}) \rightarrow \text{PC}; \text{SP} + 4 \rightarrow \text{SP}; \\ \text{Restore Stack According to Format} \end{array}$		
STOP	# <data></data>	16	Immediate Data \rightarrow SR; STOP		
Trap Generating					
BKPT	# <data></data>	none	Run Breakpoint Cycle		
CHK	<ea>,Dn</ea>	16, 32	If Dn < 0 or Dn > (<ea>), Then CHK Exception</ea>		
CHK2	<ea>,Rn</ea>	8, 16, 32	If Rn< Lower Bound or Rn > Upper Bound, Then CHK Exception		
ILLEGAL	none	none	$\begin{array}{l} SSP-2 \rightarrow SSP; \mbox{Vector Offset} \rightarrow (SSP);\\ SSP-4 \rightarrow SSP; PC \rightarrow (SSP);\\ SSP-2 \rightarrow SSP; SR \rightarrow (SSP);\\ Illegal Instruction Vector Address \rightarrow PC \end{array}$		
TRAP	# <data></data>	none	$\begin{array}{l} SSP-2 \rightarrow SSP; \mbox{ Format and Vector Offset} \rightarrow (SSP) \\ SSP-4 \rightarrow SSP; \mbox{ PC} \rightarrow (SSP); \mbox{ SSP} - 2 \rightarrow SSP; \\ SR \rightarrow (SSP); \mbox{ Vector Address} \rightarrow PC \end{array}$		
TRAPcc	none # <data></data>	none 16, 32	If cc True, Then Trap Exception		
FTRAPcc	none # <data></data>	none 16, 32	If Floating-Point cc True, Then Trap Exception		
TRAPV	none	none	If V, Then Take Overflow Trap Exception		
		Condition	Code Register		
ANDI to SR	# <data>,CCR</data>	8	Immediate Data Λ CCR \rightarrow CCR		
EORI to SR	# <data>,CCR</data>	8	Immediate Data \oplus CCR \rightarrow CCR		
MOVE to SR	<ea>,CCR</ea>	16	Source \rightarrow CCR		
MOVE from SR	CCR, <ea></ea>	16	$CCR \rightarrow Destination$		
ORI to SR	# <data>,CCR</data>	8	Immediate Data V CCR \rightarrow CCR		

Letters cc in the TRAPcc and FTRAPcc specify testing for a condition.

3-13

3.1.10 Cache Control Instructions (MC68040)

The cache instructions provide maintenance functions for managing the instruction and data caches. CINV invalidates cache entries in both caches, and CPUSH pushes dirty data from the data cache to update memory. Both instructions can operate on either or both caches and can select a single cache line, all lines in a page, or the entire cache. Table 3-11 summarizes these instructions.

Table 3-11. Cache Control Operation Format

Instruction	Operand Syntax	Operand Size	Operation
CINVL	caches,(An)	none	Invalidate cache line
CINVP	caches, (An)	none	Invalidate cache page
CINVA	caches	none	Invalidate entire cache
CPUSHL CPUSHP CPUSHA	caches,(An) caches, (An) caches	none none none	Push selected dirty data cache lines, then invalidate selected cache lines

3.1.11 Multiprocessor Instructions

The TAS, CAS, and CAS2 instructions coordinate the operations of processors in multiprocessing systems. These instructions use read-modify-write bus cycles to ensure uninterrupted updating of memory. Coprocessor instructions control the coprocessor operations. Table 3- 12 summarizes these instructions.

	Table 3-12.	Table 3-12. Multiprocessor Operations				
Instruction	Operand Syntax	Operand Size	Or			

Instruction	Operand Syntax	Operand Size	Operation		
Read-Write-Modify					
CAS	Dc,Du, <ea></ea>	8, 16, 32	$\begin{array}{l} \text{Destination} - \text{Dc} \rightarrow \text{CC} \\ \text{If Z, Then Du} \rightarrow \text{Destination} \\ \text{Else Destination} \rightarrow \text{Dc} \end{array}$		
CAS2	Dc1–Dc2, Du1–Du2, (Rn)–(Rn)	16, 32	Dual Operand CAS		
TAS	<69>	8	$\begin{array}{l} \text{Destination}-0; \text{ Set Condition Codes};\\ 1 \rightarrow \text{Destination} \left[7\right] \end{array}$		
Coprocessor					
cpBcc	<label></label>	16, 32	If cpcc True, Then PC + $d_n \rightarrow PC$		
cpDBcc	<label>,Dn</label>	16	If cpcc False, Then $Dn-1 \rightarrow Dn$ If $Dn \neq -1,$ Then $PC + d_n \rightarrow PC$		
cpGEN	User Defined	User Defined	$Operand \rightarrow Coprocessor$		
CPRESTORE	<ea></ea>	none	Restore Coprocessor State from <ea></ea>		
cpSAVE	<ea></ea>	none	Save Coprocessor State at <ea></ea>		
cpScc	<69>	8	If cpcc True, Then 1's \rightarrow Destination; Else 0's \rightarrow Destination		
cpTRAPcc	none # <data></data>	none 16, 32	If cpcc True, Then TRAPcc Exception		

3-14

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

3.1.12 Memory Management Unit (MMU) Instructions

The PFLUSH instructions flush the address translation caches (ATCs) and can optionally select only nonglobal entries for flushing. PTEST performs a search of the address translation tables, stores the results in the MMU status register, and loads the entry into the ATC. Table 3-13 summarizes these instructions.

Table 3-13. MMU Operation Format

Instruction	Processor	Operand Syntax	Operand Size	Operation
PBcc	MC68851	<label></label>	none	Branch on PMMU Condition
PDBcc	MC68851	Dn, <la- bel></la- 	none	Test, Decrement, and Branch
PFLUSHA	MC68030 MC68040 MC68851	none	none	Invalidate All ATC Entries
PFLUSH	MC68040	(An)	none	Invalidate ATC Entries at Effective Address
PFLUSHN	MC68040	(An)	none	Invalidate Nonglobal ATC Entries at Effective Address
PFLUSHAN	MC68040	none	none	Invalidate All Nonglobal ATC Entries
PFLUSHS	MC68851	none	none	Invalidate All Shared/Global ATC Entries
PFLUSHR	MC68851	<ea></ea>	none	Invalidate ATC and RPT Entries
PLOAD	MC68030 MC68851	FC, <ea></ea>	none	Load an Entry into the ATC
PMOVE	MC68030 MC68851	MRn, <ea> <ea>,MRn</ea></ea>	8,16,32,64	Move to/from MMU Registers
PRESTORE	MC68851	<ea></ea>	none	PMMU Restore Function
PSAVE	MC68851	<ea></ea>	none	PMMU Save Function
PScc	MC68851	<ea></ea>	8	Set on PMMU Condition
PTEST	MC68030 MC68040 MC68851	(An)	none	Information About Logical Address \rightarrow MMU Status Register
PTRAPcc	MC68851	# <data></data>	16,32	Trap on PMMU Condition

3.1.13 Floating-Point Arithmetic Instructions

The following paragraphs describe the floating-point instructions, organized into two categories of operation: dyadic (requiring two operands) and monadic (requiring one operand).

The dyadic floating-point instructions provide several arithmetic functions that require two input operands, such as add and subtract. For these operations, the first operand can be located in memory, an integer data register, or a floating-point data register. The second operand is always located in a floating-point data register. The results of the operation store in the register specified as the second operand. All FPU operations support all data formats. Results are rounded to either extended, single, or double-precision format. Table 3-14 gives the general format of dyadic instructions, and Table 3-15 lists the available operations.

MOTOROLA M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

3-15

Instruction Set Summary

Table 3-14. Dyadic Floating-Point Operation Format

Instruction	Operand Syntax	Operand Format	Operation
F <dop></dop>	<ea>,FPn FPm,FPn</ea>	B, W, L, S, D, X, P X	$FPn < Function > Source \rightarrow FPn$

NOTE: < dop > is any one of the dyadic operation specifiers.

Table 3-15. Dyadic Floating-Point Operations

Instruction	Operation
FADD, FSADD, FDADD	Add
FCMP	Compare
FDIV, FSDIV, FDDIV	Divide
FMOD	Modulo Remainder
FMUL, FSMUL, FDMUL	Multiply
FREM	IEEE Remainder
FSCALE	Scale Exponent
FSUB, FSSUB, FDSUB	Subtract
FSGLDIV, FSGLMUL	Single-Precision Divide, Multiply

The monadic floating-point instructions provide several arithmetic functions requiring only one input operand. Unlike the integer counterparts to these functions (e.g., NEG < a >), a source and a destination can be specified. The operation is performed on the source operand and the result is stored in the destination, which is always a floating-point data register. When the source is not a floating-point data register, all data formats are supported. The data format is always extended precision for register-to-register operations. Table 3-16 lists the general format of these instructions, and Table 3-17 lists the available operations.

Table 3-16. Monadic Floating-Point Operation Format

Instruction	Operand Syntax	Operand Format	Operation
F <mop></mop>		B, W, L, S, D, X, P	Source \rightarrow Function \rightarrow FPn
	FPm,FPn	X	
	FPn	х	$FPn \rightarrow Function \rightarrow FPn$

NOTE: < mop > is any one of the monadic operation specifiers.

Instruction Set Summary

Table 3-17. Monadic Floating-Point Operations

Instruction	Operation	Instruction	Operation
FABS	Absolute Value	FLOGN	ln(x)
FACOS	Arc Cosine	FLOGNP1	In(x + 1)
FASIN	Arc Sine	FLOG10	Log ₁₀ (x)
FATAN	Hyperbolic Art Tangent	FLOG2	Log ₂ (x)
FCOS	Cosine	FNEG	Negate
FCOSH	Hyperbolic Cosine	FSIN	Sine
FETOX	e ^x	FSINH	Hyperbolic Sine
FETOXM1	e ^{x -} 1	FSQRT	Square Root
FGETEXP	Extract Exponent	FTAN	Tangent
FGETMAN	Extract Mantissa	FTANH	Hyperbolic Tangent
FINT	Extract Integer Part	FTENTOX	10 ^x
FINTRZ	Extract Integer Part, Rounded-to-Zero	FTWOTOX	2 ^x

3.2 INTEGER UNIT CONDITION CODE COMPUTATION

Many integer instructions affect the CCR to indicate the instruction,s results. Program and system control instructions also use certain combinations of these bits to control program and system flow. The condition codes meet consistency criteria across instructions, uses, and instances. They also meet the criteria of meaningful results, where no change occurs unless it provides useful information. Refer to **Section 1 Introduction** for details concerning the CCR.

Table 3-18 lists the integer condition code computations for instructions and Table 3-19 lists the condition names, encodings, and tests for the conditional branch and set instructions. The test associated with each condition is a logical formula using the current states of the condition codes. If this formula evaluates to one, the condition is true. If the formula evaluates to zero, the condition is false. For example, the T condition is always true, and the EQ condition is true only if the Z-bit condition code is currently true.

X N Z V C Special Definition Operations ABCD U $C = \text{Decimal Carry} \\ Z = Z \Lambda \overline{\text{Rm}} \Lambda \dots \Lambda \overline{\text{R0}}$ ADD, ADDI, ADDC $V = Sm \Lambda Dm \Lambda \overline{Rm} V \overline{Sm} \Lambda \overline{Dm} \Lambda Rm$ $C = Sm \Lambda Dm V \overline{Rm} \Lambda Dm V Sm \Lambda \overline{Rm}$ $V = Sm \Lambda Dm \Lambda \overline{Rm} V \overline{Sm} \Lambda \overline{Dm} \Lambda \overline{Rm}$ $C = Sm \Lambda Dm V \overline{Rm} \Lambda Dm V Sm \Lambda \overline{Rm}$ $Z = Z \Lambda \overline{Rm} \Lambda ... \Lambda \overline{R0}$ ADD> AND, ANDI, EOR, EORI, 0 0 MOVEQ, MOVE, OR, ORI, CLR, EXT, EXTB, NOT, TAS, TS СНК U U U $\begin{array}{l} Z = (R = LB) \ V \ (R = UB) \\ C = (LB \leq UB) \ \Lambda \ (IR < LB) \ V \ (R > UB) \\ V \ (UB < LB) \ \Lambda \ (IR < UB) \ \Lambda \ (R < LB) \\ V = \overline{Sm} \ \Lambda \ Dm \ \Lambda \ \overline{Rm} \ V \ Sm \ \Lambda \ \overline{Dm} \ \Lambda \ Rm \\ C = \overline{Sm} \ \Lambda \ \overline{Dm} \ V \ Rm \ \Lambda \ \overline{Dm} \ \Lambda \ Rm \\ \end{array}$ CHK2, CMP2 U ? U SUB, SUBI, SUBQ ? ? SUBX CAS, CAS2, CMP, CMPA, CM CMPM $V = \overline{Sm} \wedge Dm \wedge \overline{Rm} V Sm \wedge \overline{Dm} \wedge Rn$ $C = Sm \wedge \overline{Dm} V Rm \wedge \overline{Dm} V Sm \wedge Rn$ DIVS, DUVU 0 V = Division Overflow MULS, MULU 0 V = Multipl on Ove SBCD, NBCD υ υ $\begin{array}{l} \mathsf{C} = \mathsf{Decimal \ Borrow} \\ \mathsf{Z} = \mathsf{Z} \ \Lambda \ \overline{\mathsf{Rm}} \ \Lambda \ \dots \Lambda \ \overline{\mathsf{R0}} \end{array}$ NEG $V = Dm \Lambda Rm$ C = Dm V Rm $V = Dm \Lambda Rm$ C = Dm V Rm $Z = Z \Lambda Rm \Lambda$ NEG) A RO $Z = \overline{Dn}$ BTST, BCHG, BSET, BCLR BETST, BECHG, BESET, BECLE 2 0 0 $\frac{Z - Z}{N = Sm}$ Z = Sm Λ Sm-1 $\Lambda \dots \Lambda$ SO BFEXTS, BFEXTU, BFFFC 0 0 BFINS 0 0 $V = Dm \land \overline{Dm-1} \lor ... \lor \overline{Dm-r} \lor V \overline{Dm} \land$ $(DM -1 \lor ... + Dm - r)$ $C = \overline{Dm-r+1}$ ASL ASL (r = 0) 0 0 ? C = Dm - r + 1 LSL, ROX 0

Table 3-18. Integer Unit Condition Code Computations

Table 3-18. Integer Unit Condition Code Computations (Continued)

······································									
Operations	х	N	Z	v	С	Special Definition			
LSR (r = 0)	-	•	•	0	0				
ROXL (r = 0)	-	•	•	0	?	X = C			
ROL	-	•	•	0	?	C = Dm - r + 1			
ROL (r = 0)	-	•	•	0	0				
ASR, LSR, ROXR	•	•	•	0	?	C = Dr - 1			
ASR, LSR (r = 0)	-	•	•	0	0				
ROXR (r = 0)	-	•	•	0	?	X = C			
ROR	-	•	•	0	?	C = Dr - 1			
ROR (r = 0)	-	•	•	0	0				

? = Other-See Special Definition N = Result Operand (MSB) $Z = \overline{Rm} \Lambda ... \Lambda \overline{R0}$ Sm = Source Operand (MSB) Dm = Destination Operand (MSB) Rm = Result Operand (MSB) Rm = Not Result Operand (MSB) R = Register Tested r = Shift Count

Table 3-19. Conditional Tests

Mnemonic	Condition	Encoding	Test
T*	True	0000	1
F*	False	0001	0
н	High	0010	ΓΛΖ
LS	Low or Same	0011	CVZ
CC(HI)	Carry Clear	0100	С
CS(LO)	Carry Set	0101	С
NE	Not Equal	0110	Z
EQ	Equal	0111	Z
VC	Overflow Clear	1000	V
VS	Overflow Set	1001	V
PL	Plus	1010	N
MI	Minus	1011	N
GE	Greater or Equal	1100	$N \land V \lor \overline{N} \land \overline{V}$
LT	Less Than	1101	ΝΛΫΥΝΛΥ
GT	Greater Than	1110	ΝΛΥΛΖΥΝΛΫΛΖ
LE	Less or Equal	1111	Ζ V N Λ V V N Λ V

NOTES: \overline{N} = Logical Not N \overline{V} = Logical Not V \overline{Z} = Logical Not Z the Bcc instruction

3-18

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL MOTOROLA MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

3-19

Instruction Set Summary

3.3 INSTRUCTION EXAMPLES

The following paragraphs provide examples of how to use selected instructions.

3.3.1 Using the Cas and Cas2 Instructions

The CAS instruction compares the value in a memory location with the value in a data register, and copies a second data register into the memory location if the compared values are equal. This provides a means of updating system counters, history information, and globally shared pointers. The instruction uses an indivisible read-modify- write cycle. After Gost stated polities: The instruction dees an indivision reaching mine operation. And CAS reads the memory location, no other instruction can change that location before CAS has written the new value. This provides security in single-processor systems, in multitasking environments, and in multiprocessor environments. In a single-processor system, the operation is protected from instructions of an interrupt routine. In a multitasking environment as the case interface with written the neurophysic of a worker workshold the security of a worker workshold to be the security of a worker work work of the security of a worker workshold to be the security of a worker work work of the security of a worker work of the security of the security of a worker work of the security of the security of a worker work of the security of t environment, no other task can interfere with writing the new value of a system variable. In a multiprocessor environment, the other processors must wait until the CAS instruction completes before accessing a global pointer.

3.3.2 Using the Moves Instruction

This instruction moves the byte, word, or long-word operand from the specified general register to a location within the address space specified by the destination function code (DFC) register. It also moves the byte, word, or long-word operand from a location within the address space specified by the source function code (SFC) register to the specified general register

3.3.3 Nested Subroutine Calls

The LINK instruction pushes an address onto the stack, saves the stack address at which the address is stored, and reserves an area of the stack. Using this instruction in a series of subroutine calls results in a linked list of stack frames.

The UNLK instruction removes a stack frame from the end of the list by loading an address into the stack pointer and pulling the value at that address from the stack. When the operand of the instruction is the address of the link address at the bottom of a stack frame, the effect is to remove the stack frame from the stack and from the linked list.

3.3.4 Bit Field Instructions

One of the data types provided by the MC68030 is the bit field, consisting of as many as 32 Consecutive bits. An offset from an effective address and a width value defines a bit field. The offset is a value in the range of -231 through 231 - 1 from the most significant bit (bit 7) at the effective address. The width is a positive number, 1 through 22. The most significant bit of a bit field is bit 0. The bits number in a direction opposite to the bits of an integer.

The instruction set includes eight instructions that have bit field operands. The insert bit field (BFINS) instruction inserts a bit field stored in a register into a bit field. The extract bit field signed (BFEXTS) instruction loads a bit field into the least significant bits of a register and

Instruction Set Summary

extends the sign to the left, filling the register. The extract bit field unsigned (BFEXTU) also loads a bit field, but zero fills the unused portion of the destination register

The set bit field (BFSET) instruction sets all the bits of a field to ones. The clear bit field (BFCLR) instruction clears a field. The change bit field (BFCHG) instruction complements all the bits in a bit field. These three instructions all test the previous value of the bit field, setting the condition codes accordingly. The test bit field (BFTST) instruction tests the value in the field, setting the condition codes appropriately without altering the bit field. The find first one in bit field (BFFFO) instruction scans a bit field from bit 0 to the right until it finds a bit set to one and loads the bit offset of the first set bit into the specified data register. If no bits in the field are set, the field offset and the field width is loaded into the register.

An important application of bit field instructions is the manipulation of the exponent field in a floating-point number. In the IEEE standard format, the most significant bit is the sign bit of the mantissa. The exponent value begins at the next most significant bit position; the exponent field does not begin on a byte boundary. The extract bit field (BFEXTU) instruction and the BFTST instruction are the most useful for this application, but other bit field instructions can also be used.

Programming of input and output operations to peripherals requires testing, setting, and inserting of bit fields in the control registers of the peripherals. This is another application for bit field instructions. However, control register locations are not memory locations; therefore, it is not always possible to insert or extract bit fields of a register without affecting other fields within the registe

Another widely used application for bit field instructions is bit-mapped graphics. Because byte boundaries are ignored in these areas of memory, the field definitions used with bit field instructions are very helpful.

3.3.5 Pipeline Synchronization with the Nop Instruction

Although the no operation (NOP) instruction performs no visible operation, it serves an important purpose. It forces synchronization of the integer unit pipeline by waiting for all pending bus cycles to complete. All previous integer instructions and floating-point external operand accesses complete execution before the NOP begins. The NOP instruction does not synchronize the FPU pipeline—floating- point instructions with floating-point register operand destinations can be executing when the NOP begins. NOP is considered a change of flow instruction and traps for trace on change of flow. A single- cycle nonsynchronizing operation can be affected with the TRAPF instruction

3.4 FLOATING-POINT INSTRUCTION DETAILS

The following paragraphs describe the operation tables used in the instruction descriptions and the conditional tests that can be used to change program flow based on floating-point conditions. Details on NANs and floating-point condition codes are also discussed. The IEEE 754 standard specifies that each data format must support add, subtract, multiply, divide, remainder, square root, integer part, and compare. In addition to these arithmetic

Instruction Set Summary

functions, software supports remainder and integer part; the FPU also supports the nontranscendental operations of absolute value, negate, and test.

Most floating-point instruction descriptions include an operation table. This table lists the resulting data types for the instruction based on the operand, s input. Table 3-20 is an operation table example for the FADD instruction. The operation table lists the source operand type along the top, and the destination operand type along the side. In-range numbers are normalized, denormalized, unnormalized real numbers, or integers that are converted to normalized or denormalized extended-precision numbers upon entering the FPU

Table 3-20.	Operation	Table	Example	(FADD	Instruction)
-------------	-----------	-------	---------	-------	--------------

DESTINATION	SOURCE						
		+ Zero –	+ Infinity –				
In Range +	ADD		+inf –inf				
Zero +			+inf –inf				
-		0.0 ² -0.0					
Infinity +	+inf	+inf	+inf NAN ³				
	-inf	-inf	NAN ³ -inf				

NOTES:

NOTES: 1.If either operand is a NAN, refer to **1.6.5 NANs** for more information. 2.Returns +0.0 in rounding modes RN, RZ, and RP; returns -0.0 in RM 3.Sets the OPERR bit in the FPSR exception byte.

For example, Table 3-20 illustrates that if both the source and destination operand are positive zero, the result is also a positive zero. If the source operand is a positive zero and the destination operand is an in-range number, then the ADD algorithm is executed to obtain the result. If a label such as ADD appears in the table, it indicates that the FPU performs the indicated operation and returns the correct result. Since the result of such an operation is undefined, a NAN is returned as the result, and the OPERR bit is set in the FPSR EXC byte.

In addition to the data types covered in the operation tables for each floating-point instruction, NANs can also be used as inputs to an arithmetic operation. The operation tables do not contain a row and column for NANs because NANs are handled the same way for all operations. If either operand, but not both operands, of an operation is a nonsignaling NAN, then that NAN is returned as the result. If both operands are nonsignaling NANs, then the destination operand nonsignaling NAN is returned as the result

If either operand to an operation is a signaling NAN (SNAN), then the SNAN bit is set in the FPSR EXC byte. If the SNAN exception enable bit is set in the FPCR ENABLE byte, then the exception is taken and the destination is not modified. If the SNAN exception enable bit is not set, setting the SNAN bit in the operand to a one converts the SNAN to a nonsignaling NAN. The operation then continues as described in the preceding paragraph for nonsignaling NANs.

3-22

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

3-23

Instruction Set Summary

3.5.1 Intermediate Result

All FPU calculations use an intermediate result. When the FPU performs any operation, the calculation is carried out using extended-precision inputs, and the intermediate result is calculated as if to produce infinite precision. After the calculation is complete, the intermediate result is rounded to the selected precision and stored in the destination.

Figure 3-1 illustrates the intermediate result format. The intermediate result's exponent for some dyadic operations (i.e., multiply and divide) can easily overflow or underflow the 15-bit exponent of the designation floating-point register. To simplify the overflow and underflow the detection, intermediate results in the FPU maintain a 16-bit (17 bits for the MC688821 and MC688822, twos complement, integer exponent. Detection of an overflow or underflow intermediate result always converts the 16-bit exponent into a 15-bit biased exponent before being stored in a floating-point data register. The FPU internally maintains the 67-bit mantissa for rounding purposes. The mantissa is always rounded to 64 bits (or less, depending on the selected rounding precision) before it is stored in a floating-point data registor. Figure 3-1 illustrates the intermediate result format. The intermediate result's exponent for register.





If the destination is a floating-point data register, the result is in the extended-precision All mantissa bits beyond the precision specified by the FPSR PREC bits before being stored. All mantissa bits beyond the selected precision are zero. If the single- or double-precision mode is selected, the exponent value is in the correct range even if it is stored in extended-precision format. If the destination is a memory location, the FPSR PREC bits are ignored. In this case, a number in the extended-precision format is taken from the source floating-point data register, rounded to the destination format precision, and then written to memory.

Depending on the selected rounding mode or destination data format in effect, the location of the least significant bit of the mantissa and the locations of the guard, round, and sticky bits in the 67-bit intermediate result mantissa varies. The guard and round bits are always calculated exactly. The sticky bit is used to create the illusion of an infinitely wide intermediate result. As the arrow illustrates in Figure 3-1, the sticky bit is the logical OR of all the bits in the infinitely precise result to the right of the round bit. During the calculation stage of an arithmetic operation, any non-zero bits generated that are to the right of the round bit set the sticky bit to one. Because of the sticky bit, the rounded intermediate result for all required IEEE arithmetic operations in the RN mode is in error by no more than one half unit in the last place

3.5 FLOATING-POINT COMPUTATIONAL ACCURACY

Representing a real number in a binary format of finite precision is problematic. If the number cannot be represented exactly, a round-off error occurs. Furthermore, when two of these inexact numbers are used in a calculation, the result becomes even more inexact. The IEEE 754 standard defines the error bounds for calculating binary floating-point values so that the result obtained by any conforming device can be predicted exactly for a particular that the result obtained by any contorming device can be predicted exactly for a structure precision and rounding mode. The error bound defined by the IEEE 754 standard is one-half unit in the last place of the destination data format in the RN mode, and one unit in last place in the other rounding modes. The operation's data format must have the same input values, rounding mode, and precision. The standard also specifies the maximum allowable error that can be introduced during a calculation and the manner in which rounding of the result is not formed. is performed.

The single- and double-precision formats provide emulation for devices that only support those precisions. The execution speed of all instructions is the same whether using single-or double-precision rounding. When using these two data formats, the FPU produces the same results as any other device that conforms to the IEEE standard but does not support extended precision. The results are the same when performing the same operation in extended precision and storing the results in single- or double-precision format.

The FPU performs all floating-point internal operations in extended-precision. It supports mixed-mode arithmetic by converting single- and double-precision operands to extended-precision values before performing the specified operation. The FPU converts all memory data formats to the extended-precision data format and stores the value in a floating-point register or uses it as the source operand for an arithmetic operation. The FPU also converts extended-precision data formats in a floating-point data register to any data format and either stores it is a memory dotingation or in an integrat data register. either stores it in a memory destination or in an integer data register

Additionally if the external operand is a denormalized number, the number is normalized before an operation is performed. However, an external denormalized number moved into a floating-point data register is stored as a denormalized number. The number is first normalized and then denormalized before it is stored in the designated floating-point data register. This method simplifies the handling of all other data formats and types

If an external operand is an unnormalized number, the number is normalized before it is used in an arithmetic operation. If the external operand is an unnormalized zero (i.e., with a arantissa of all zeros), the number is converted to a normalized zero bloc the specified operation is performed. The regular use of unnormalized inputs not only defeats the purpose of the IEEE 754 standard, but also can produce gross inaccuracies in the results.

Instruction Set Summary

3.5.2 Rounding the Result

The FPU supports the four rounding modes specified by the IEEE 754 standard. These modes are round to nearest (RN), round toward zero (RZ), round toward plus infinity (RP), and round toward minus infinity (RM). The RM and RP rounding modes are often referred to as "directed rounding modes" and are useful in interval arithmetic. Rounding is accomplished through the intermediate result. Single-precision results are rounded to a 24-bit boundary; double-precision results are rounded to a 53-bit boundary; and extended precision results are rounded to a 64-bit boundary. Table 3-21 lists the encodings for the IDPD that these the round is an environment of the article are rounded to a 64-bit boundary. FPCR that denote the rounding and precision modes.

Table 3-21, FPCR Encodings

			-
Rounding Mode (RND Field)	Enco	oding	Rounding Precision (PREC Field)
To Nearest (RN)	0	0	Extend (X)
To Zero (RZ)	0	1	Single (S)
To Minus Infinity (RM)	1	0	Double (D)
To Plus Infinity (RP)	1	1	Undefined

Rounding the intermediate result's mantissa to the specified precision and checking the 16-bit intermediate exponent to ensure that it is within the representable range of the selected control of the selected precision accomplishes range control. Range control is a method used to assure correct emulation of a device that only supports single- or double- precision arithmetic. If the intermediate result's exponent exceeds the range of the selected precision, the exponent value appropriate for an underflow or overflow is stored as the result in the 16-bit extended-precision format exponent. For example, if the data format and rounding mode is single precision RM and the result of an arithmetic operation overflows the magnitude of the singleprecision format, the largest normalized single-precision value is stored as an extended-precision number in the destination floating-point data register (i.e., an unbiased 15-bit exponent of \$00FF and a mantissa of \$FFFFF0000000000). If an infinity is the appropriate result for an underflow or overflow, the infinity value for the destination data format is stored as the result (i.e., an exponent with the maximum value and a mantissa of zero).

Figure 3-2 illustrates the algorithm that the FPU uses to round an intermediate result to the selected rounding precision and destination data format. If the destination is a floating-point register, either the selected rounding precision specified by the FPCR PREC status byte or by the instruction itself determines the rounding boundary. For example, FSADD and FDADD specify single- and double-precision rounding regardless of the precision specified in the FPCR PREC status byte. If the destination is external memory or an integer data register, the destination data format determines the rounding boundary. If the rounded result of an operation is not exact, then the INEX2 bit is set in the FPSR EXC status byte.

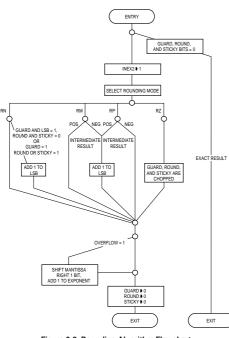


Figure 3-2. Rounding Algorithm Flowchart

The three additional bits beyond the extended-precision format, the difference between the intermediate result's 67-bit mantissa and the storing result's 64-bit mantissa, allow the FPU to perform all calculations as though it were performing calculations using a float engine with infinite bit prec The result is always correct for the specified destination's data format before performing rounding (unless an overflow or underflow error occurs). The specified orunding operation then produces a number that is as close as possible to the infinitely precise

3-26

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

Instruction Set Summary

3.6.1 Underflow, Round, Overflow

During the calculation of an arithmetic result, the FPU arithmetic logic unit (ALU) has more precision and range than the 80-bit extended precision format. However, the final result of these operations is an extended-precision floating-point value. In some cases, an intermediate result becomes either smaller or larger than can be represented in extended precision. Also, the operation can generate a larger exponent or more bits of precision than can be represented in the chosen rounding precision. For these reasons, every arithmetic instruction ends by rounding the result and checking for overflow and underflow.

At the completion of an arithmetic operation, the intermediate result is checked to see if it is too small to be represented as a normalized number in the selected precision. If so, the underflow (UNFL) bit is set in the FPSR EXC byte. It is also denormalized unless denormalization provides a zero value. Denormalizing a number causes a loss of accuracy, but a zero is not returned unless absolutely necessary. If a number is grossly underflowed, the FPU returns a zero or the smallest denormalized number with the correct sign, depending on the rounding mode in effect.

If no underflow occurs, the intermediate result is rounded according to the user-selected rounding precision and rounding mode. After rounding, the inexact bit (INEX2) is set appropriately. Lastly, the magnitude of the result is checked to see if it is too large to be represented in the current rounding precision. If so, the overflow (OVFL) bit is set and a correctly signed infinity or correctly signed largest normalized number is returned, depending on the rounding mode in effect.

3.6.2 Conditional Testing

Unlike the integer arithmetic condition codes, an instruction either always sets the floatingpoint condition codes in the same way or it does not change them at all. Therefore, the instruction descriptions do not include floating-point condition code settings. The following paragraphs describe how floating-point condition codes are set for all instructions that modify condition codes.

The condition code bits differ slightly from the integer condition codes. Unlike the operation type dependent integer condition codes, examining the result at the end of the operation sets or clears the floating-point condition codes accordingly. The M68000 family integer condition codes bits N and Z have this characteristic, but the V and C bits are set differently for different instructions. The data type of the operation's result determines how the four condition code bits are set. Table 3-22 lists the condition code bit setting for each data type. Loading the FPCC with one of the other combinations and executing a conditional instruction can produce an unexpected branch condition.

intermediate value and still representable in the The following tie-case example shows how the 67-bit mantissa allows the FPU to meet the error bound of the IEEE specification:

Result	Integer	63-Bit Fraction	Guard	Round	Sticky
Intermediate	х	xxxx00	1	0	0
Rounded-to-Nearest	х	xxxx00	0	0	0

The LSB of the rounded result does not increment though the guard bit is set in the intermediate result. The IEEE 754 standard specifies that tie cases should be handled in this manner. If the destination data format is extended and there is a difference between the infinitely precise intermediate result and the round-to-nearest result, the relative difference is 2 - 64 (the value of the guard bit). This error is equal to half of the least significant bit's value and is the worst case error that can be introduced when using the RN mode. Thus, the term one-half unit in the last place correctly identifies the error bound for this operation. This error specification is the relative error present in the result; the absolute error bound is equal to 2exponent x 2 - 64. The following example shows the error bound for the other rounding modes:

Result	Integer	63-Bit Fraction	Guard	Round	Sticky
Intermediate	x	xxxx00	1	1	1
Rounded-to-Nearest	х	xxxx00	0	0	0

The difference between the infinitely precise result and the rounded result is 2-64+2-65+2-66, which is slightly less than 2-63 (the value of the LSB). Thus, the error bound for this operation is not more than one unit in the last place. For all arithmetic operations, the FPU meets these error bounds, providing accurate and repeatable results.

3.6 FLOATING-POINT POSTPROCESSING

Most operations end with a postprocessing step. The FPU provides two steps in postprocessing. First, the condition code bits in the FPSR are set or cleared at the end of each arithmetic operation or move operation to a single floating-point data register. The condition code bits are consistently set based on the result of the operation. Second, the FPU supports 32 conditional tests that allow floating-point conditional instructions to test floating-point conditions in exactly the same way as the integer condition code bits and the simple programming of conditional instructions gives the processor a very flexible, high-performance method of altering program flow based on floating-point results. While reading the summary for each instruction, it should be assumed that an instruction performs postprocessing unless the summary specifically states that the instruction does not do so. The following paragraphs describe postprocessing in detail.

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

3-27

Instruction Set Summary

Table 3-22. FPCC Encodings										
Data Type	N	z	I	NAN						
+ Normalized or Denormalized	0	0	0	0						
 Normalized or Denormalized 	1	0	0	0						
+ 0	0	1	0	0						
- 0	1	1	0	0						
+ Infinity	0	0	1	0						
– Infinity	1	0	1	0						
+ NAN	0	0	0	1						
– NAN	1	0	0	1						

The inclusion of the NAN data type in the IEEE floating-point number system requires each conditional test to include the NAN condition code bit in its Boolean equation. Because a comparison of a NAN with any other data type is unordered (i.e., it is impossible to determine if a NAN is bigger or smaller than an in-range number), the compare instruction sets the NAN condition code bit when an unordered compare is attempted. All arithmetic instructions also set the NAN bit if the result of an operation is a NAN. The conditional instructions interpret the NAN condition code bit equal to one as the unordered condition.

The IEEE 754 standard defines four conditions: equal to (EQ), greater than (GT), less than (LT), and unordered (UN). In addition, the standard only requires the generation of the condition codes as a result of a floating-point compare operation. The FPU can test these conditions at the end of any operation affecting the condition codes. For purposes of the floating-point conditional branch, set byte on condition, decrement and branch on condition and trap on condition instructions, the processor logically combines the four FPCC condition codes to form 32 conditional tests. There are three main categories of conditional tests: IEEE nonaware tests, IEEE aware tests, and miscellaneous. The set of IEEE nonaware tests is best used:

- when porting a program from a system that does not support the IEEE standard to a conforming system, or
- when generating high-level language code that does not support IEEE floating-point concepts (i.e., the unordered condition).

The 32 conditional tests are separated into two groups; 16 that cause an exception if an unordered condition is present when the conditional test is attempted and 16 that do not cause an exception. An unordered condition occurs when one or both of the operands in a floating-point compare operation The inclusion of the unordered condition in floating-point branches destroys the familiar trichotomy relationship (greater than, equal, less than) that exists for integers. For example, the opposite of floating-point branch greater than (FBGT) is not floating-point branch less than or equal (FBLE). Rather, the opposite condition was unordered, FBNGT is true; whereas, both FBGT and FBLE would be false since unordered fails both of these tests (and sets BSUN). Compiler programmers should be particularly careful of the lack of trichotomy in the floating-point branches since it is common for compilers to invert the sense of conditions.

When using the IEEE nonaware tests, the user receives a BSUN exception whenever a branch is attempted and the NAN condition code bit is set, unless the branch is an FBBQ or an FBNE. If the BSUN exception is enabled in the FPCR, the exception causes another exception. Therefore, the IEEE nonaware program is interrupted if an unexpected condition occurs. Compilers and programmers who are knowledgeable of the IEEE 754 standard should use the IEEE aware tests in programs that contain ordered and unordered conditions. Since the ordered or unordered attribute is explicitly included in the conditional test, the BSUN bit is not set in the FPSR EXC byte when the unordered condition occurs. Table 3-23 summarizes the conditional mnemonics, definitions, equations, predicates, and whether the BSUN bit is set in the FPSR EXC byte for the 32 floating-point condition acturs. The equation column lists the combination of FPCC bits for each test in the form of an equation. All condition codes with an overbar indicate cleared bits; all other bits are set.

Table 3-23. Floating-Point Conditional Tests

Mnemonic	Definition	Equation	Predicate	BSUN Bit Set
	IEEE N	onaware Tests		
EQ	Equal	Z	000001	No
NE	Not Equal	z	001110	No
GT	Greater Than	NAN V Z V N	010010	Yes
NGT	Not Greater Than	NANVZVN	011101	Yes
GE	Greater Than or Equal	Z V (NAN V N)	010011	Yes
NGE	Not Greater Than or Equal	NAN V (N A Z)	011100	Yes
LT	Less Than	N Λ (<u>NAN</u> ∇ Z)	010100	Yes
NLT	Not Less Than	NAN V (Z V N)	011011	Yes
LE	Less Than or Equal	Z V (Ν Λ ΝΑΝ)	010101	Yes
NLE	Not Less Than or Equal	NAN V (N V Z)	011010	Yes
GL	Greater or Less Than	NAN V Z	010110	Yes
NGL	Not Greater or Less Than	NAN V Z	011001	Yes
GLE	Greater, Less or Equal	NAN	010111	Yes
NGLE	Not Greater, Less or Equal	NAN	011000	Yes
	IEEE	Aware Tests		
EQ	Equal	Z	000001	No
NE	Not Equal	Z	001110	No
OGT	Ordered Greater Than	NAN V Z V N	000010	No
ULE	Unordered or Less or Equal	NAN V Z V N	001101	No
OGE	Ordered Greater Than or Equal	Z V (NAN V N)	000011	No
ULT	Unordered or Less Than	NAN V (N $\Lambda \overline{Z}$)	001100	No
OLT	Ordered Less Than	$N \land (\overline{NAN} \overrightarrow{V} \overrightarrow{Z})$	000100	No
UGE	Unordered or Greater or Equal	NAN V Z V N	001011	No
OLE	Ordered Less Than or Equal	Z V (N Λ NAN)	000101	No
UGT	Unordered or Greater Than	NAN V (N V Z)	001010	No
OGL	Ordered Greater or Less Than	NAN V Z	000110	No
UEQ	Unordered or Equal	NAN V Z	001001	No
OR	Ordered	NAN	000111	No
UN	Unordered	NAN	001000	No
	Misce	llaneous Tests		
F	False	False	000000	No
т	True	True	001111	No
SF	Signaling False	False	010000	Yes
ST	Signaling True	True	011111	Yes
SEQ	Signaling Equal	Z	010001	Yes
SNE	Signaling Not Equal	z	011110	Yes

3-30

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

3-31

Instruction Set Summary

3.7 INSTRUCTION DESCRIPTIONS

Section 4, 5, 6, and 7 contain detailed information about each instruction in the M68000 family instruction set. Each section arranges the instruction in alphabetical order by instruction mnemonic and includes descriptions of the instruction's notation and format. Figure 3-3 illustrates the format of the instruction descriptions. Note that the illustration is an amalgamation of the various parts that make up an instruction description. Instruction descriptions for the integer unit differ slightly from those for the floating-point unit; i.e. there are no operation tables included for integer unit instruction descriptions.

The size attribute line specifies the size of the operands of an instruction. When an instruction uses operands of more than one size, the mnemonic of the instruction includes a suffix such as:

- .B-Byte Operands
- .W—Word Operands .L—Long-Word Operands
- .S—Single-Precision Real Operands .D—Double-Precision Real Operands
- -Extended-Precision Real Operands
- .X—Extended-Precision Near CF .P—Packed BCD Real Operands

The instruction format specifies the bit pattern and fields of the operation and command words, and any other words that are always part of the instruction. The effective address

extensions are not explicitly illustrated. The extension words, if any, follow immediately after the illustrated portions of the instructions.

INSTRUCTION NAME	ABCD
	Operation: Absolute value of s
INSTRUCTION'S ASSEMBLER SYNTAX	Assembler FABSxfm tx <ee System: FABSX FPm FABSX FPn</ee
SIZE ATRIBUTE	Attributes: Forms = (Byte, Word,
TEXT DESCRIPTION OF INSTRUCTION OPERATION	Description: Converts the source c absolute value of that
APPLICABLE RESULT OF FLOATING-POINT OPERATION	Operation Table:
	Destination Sourc
	Result A NOTE: If the source operation
EFFECTS ON INTEGER CONDITION CODES OR FLOATING-POINT STATUS REGISTER	Status Register Condition Codes: Affected by Quotient Byte: Not Affected Exception Byte: BSUN SNAN OPERR OVRL
	Accrued Exception Byte:
INSTRUCTION FORMAT	Instruction Format:
	15 14 13 12 11 10
	0 1 1 1 1 1 0 0 SOURCE
DEFINITIONS AND ALLOWED VALUES FOR THE	Instruction Fields:
	Effective Address Field - Determines

Figure 3-3. Instruction Description Format

Instruction Set Summary

SECTION 4 INTEGER INSTRUCTIONS

This section contains detailed information about the integer instructions for the M68000 family. A detailed discussion of each instruction description is arranged in alphabetical order by instruction mnemonic.

Each instruction description identifies the differences among the M68000 family for that instruction. Noted under the title of the instruction are all specific processors that apply to that instruction-for example:

Test Bit Field and Change (MC68030, MC68040)

The MC68HC000 is identical to the MC68000 except for power dissipation; therefore, all instructions that apply to the MC68000 also apply to the MC68HC000. All references to the MC68000, MC68020, and MC68030 include references to the corresponding embedded controllers, MC68EC000, MC68EC020, and MC68EC030. All references to the MC68040 include the MC68LC040 and MC68EC040. This referencing applies throughout this section unless otherwise specified.

Identified within the paragraphs are the specific processors that use different instruction fields, instruction formats, etc.--for example:

MC68020, MC68030, and MC68040 only

(bd,An,Xn) 110 reg. number:An (bd,PC,Xn)** 111 011 **Can be used with CPU32 proce

Appendix A Processor Instruction Summary provides a listing of all processors and the instructions that apply to them for quick reference.

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-1

Integer Instructions

Integer Instructions

ABCD	Add Decimal with Extend (M68000 Family)	ABCD
Operation:	Source10 + Destination10 + X \rightarrow Destination	
Assembler Syntax:	ABCD Dy,Dx ABCD – (Ay), – (Ax)	
Attributes:	Size = (Byte)	
	Is the source operand to the destination operand along with the result in the destination location. The addition is performed	

- nary coded decimal arithmetic. The operands, which are packed binary-coded decimal Data Register to Data Register: The operands are contained in the data register
 - ters specified in the instruction.
 - Memory to Memory: The operands are addressed with the predecrement ad-dressing mode using the address registers specified in the instruction.

This operation is a byte operation only.

Condition Codes:

Х	Ν	Z	V	С	
•	U	•	U	•	

- X Set the same as the carry bit.
- N Undefined. V — Onderned.
 V — Undefined.
- Undefined.
- C Set if a decimal carry was generated; cleared otherwise.

NOTE

Normally, the Z condition code bit is set via programming before the start of an operation. This allows successful tests for zero results upon completion of multiple-precision operations.



15 14 13 12 1 1 0 0 11 10 9 8 7 6 5 REGISTER Rx 1 0 0 0 0

Instruction Fields:

Register Rx field—Specifies the destination register.

- If R/M = 0, specifies a data register. If R/M = 1, specifies an address register for the predecrement addressing mode.
- R/M field—Specifies the operand addressing mode.
 0 The operation is data register to data register.
 1 The operation is memory to memory.

Register Ry field—Specifies the source register. If R/M = 0, specifies a data register. If R/M = 1, specifies an address register for the predecrement addressing mode.

Integer Instructions

ADD	Add (M68000 Family)	ADD
Operation:	Source + Destination \rightarrow Destination	
Assembler Syntax:	ADD < ea > ,Dn ADD Dn, < ea >	

Size = (Byte, Word, Long) Attributes:

Description: Adds the source operand to the destination operand using binary addition and stores the result in the destination location. The size of the operation using binary addition and as byte, word, or long. The mode of the instruction indicates which operand is the source and which is the destination, as well as the operand size.

Condition Codes:

х	Ν	Z	V	С
*	*	*	*	*

- X Set the same as the carry bit.
- N Set if the result is negative; cleared otherwise Z Set if the result is zero; cleared otherwise.
- V Set if an overflow is generated; cleared otherwise.
 C Set if a carry is generated; cleared otherwise.
- Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
4		0			REGISTER			OPMODE	-		EFI	ECTIVE	ADDRE	SS	
1 · ·	l '	0	· ·	r	CEGIOTEI	n.	I '	OFWODE	-		MODE		R	EGISTE	R

ADD

ADD

Add (M68000 Family)

Instruction Fields: Register field-Specifies any of the eight data registers.

Opmode field

Byte	Word	Long	Operation
000	001	010	$<$ ea > + Dn \rightarrow Dn
100	101	110	$Dn + < ea > \rightarrow < ea >$

Effective Address field-Determines addressing mode

a. If the location specified is a source operand, all addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register] [Addressing Mode	Mode	Register
Dn	000	reg. number:Dn	11	(xxx).W	111	000
An*	001	reg. number:An	1 [(xxx).L	111	001
(An)	010	reg. number:An	1 [# <data></data>	111	100
(An) +	011	reg. number:An	1 [
– (An)	100	reg. number:An	11			
(d ₁₆ ,An)	101	reg. number:An	11	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	1 [(d ₈ ,PC,Xn)	111	011

MC68020, MC68030, and MC68040 only

([bd,An,Xn],od) 110 reg. number:An ([bd,PC,Xn],od) 111 011 ([bd,An],Xn,od) 110 reg. number:An ([bd,PC],Xn,od) 111 011	(bd,An,Xn)**	110	reg. number:An	(bd,PC,Xn)†	111	011
([bd,An],Xn,od) 110 reg. number:An ([bd,PC],Xn,od) 111 011	([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
	([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

rd and long only an be used with CPU32 *Word and it **Can be us

4-4

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

ADD

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-5

Integer Instructions

Integer Instructions

ADD

Add (M68000 Family)

b. If the location specified is a destination operand, only memory alterable addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	-	-	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	-	-
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	_

MC68020, MC68030, and MC68040 only

(bd,An,Xn)*	110	reg. number:An	(bd,PC,Xn)*	-	-
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	-	-
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	-	-

*Can be used with CPI I32

NOTE

The Dn mode is used when the destination is a data register; the destination < ea > mode is invalid for a data register.

ADDA is used when the destination is an address register. ADDI and ADDQ are used when the source is immediate data. Most assemblers automatically make this distinction.

ADDA	Add Address (M68000 Family)	ADDA
Operation:	Source + Destination \rightarrow Destination	
Assembler Syntax:	ADDA < ea > , An	
Attributes:	Size = (Word, Long)	

Description: Adds the source operand to the destination address register and stores the result in the address register. The size of the operation may be specified as word or long. The entire destination address register is used regardless of the operation size.

Condition Codes:

Not affected.

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	0	1	F	REGISTE	R		OPMOD	E		EFI MODE	FECTIVE	ADDRE R	ESS EGISTE	R

Instruction Fields:

Register field-Specifies any of the eight address registers. This is always the destination.

Opmode field-Specifies the size of the operation.

011—Word operation; the source operand is sign-extended to a long operand and the operation is performed on the address register using all 32 bits. 111-Long operation.

ADDA

Add Address (M68000 Family)

Effective Address field-Specifies the source operand. All addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	000	reg. number:Dn	(xxx).W	111	000
An	001	reg. number:An	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	111	100
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011

MC68020, MC68030, and MC68040 only

	(bd,An,Xn)*	110	reg. number:An	(bd,PC,Xn)*	111	011
	([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
[([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

*Can be used with CPU32

Integer Instructions

ADDI

4-9

Integer Instructions

ADDI Add Immediate (M68000 Family

Immediate Data + Destination \rightarrow Destination Operation:

Assembler Syntax:

ADDI # < data > . < ea >

Size = (Byte, Word, Long) Attributes:

Description: Adds the immediate data to the destination operand and stores the result in the destination location. The size of the operation may be specified as byte, word, or long. The size of the immediate data matches the operation size.

Condition Codes:



- Set the same as the carry bit. Х

 $\begin{array}{l} X = \text{Set if same as use cany bit.} \\ N = \text{Set if the result is negative; cleared otherwise.} \\ Z = \text{Set if the result is zero; cleared otherwise.} \\ V = \text{Set if an overflow is generated; cleared otherwise.} \\ C = \text{Set if a carry is generated; cleared otherwise.} \end{array}$

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
							1 0 SIZE EFFECTIVE ADDRES					SS			
0	0	0	0	0	1	1	0	51	2E		MODE		R	EGISTE	R
	16-BIT WORD DATA										8	3-BIT BY	TE DATA	A	
						3	2-BIT LC	ONG DAT	A						

4-8

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

ADDI

ADDA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

Integer Instructions

ADDI

Add Immediate (M68000 Family)

Instruction Fields:

Size field—Specifies the size of the operation. 00 — Byte operation 01 — Word operation

10 — Long operation

Effective Address field—Specifies the destination operand. Only data alterable addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	-	-
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	_

MC68020, MC68030, and MC68040 only

(bd,An,Xn)*	110	reg. number:An	(bd,PC,Xn)*	-	-
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	-	-
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	-	-

*Can be used with CPU32

Immediate field—Data immediately following the instruction. If size = 00, the data is the low-order byte of the immediate word. If size = 01, the data is the entire immediate word.

If size = 10, the data is the next two immediate words

ADDQ ADDQ Add Quick (M68000 Family) Immediate Data + Destination \rightarrow Destination Operation: Assemble ADDQ # < data > , < ea > Syntax: Attributes: Size = (Byte, Word, Long) Description: Adds an immediate value of one to eight to the operand at the destination location. The size of the operation may be specified as byte, word, or long. Word and long operations are also allowed on the address registers. When adding to address

registers, the condition codes are not altered, and the entire destination address register is used regardless of the operation size.

Condition Codes:

X	N	Z	V	С
•		•	•	•

- Set the same as the carry bit.

N — Set if the result is negative; cleared otherwise. Z — Set if the result is zero; cleared otherwise. V — Set if an overflow occurs; cleared otherwise.

- V Set if an overflow occurs; cleared other C Set if a carry occurs; cleared otherwise.

The condition codes are not affected when the destination is an address register.

Instruction Format:



Integer Instructions

ADDQ

ADDQ Add Quick (M68000 Family)

Instruction Fields:

Data field—Three bits of immediate data representing eight values (0 – 7), with the immediate value zero representing a value of eight.

Size field-Specifies the size of the operation.

00— Byte operation 01— Word operation 10— Long operation

Effective Address field-Specifies the destination location. Only alterable addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register] [Addressing Mode	Mode	Register
Dn	000	reg. number:Dn	1 [(xxx).W	111	000
An	001	reg. number:An	1 [(xxx).L	111	001
(An)	010	reg. number:An	1 [# <data></data>	-	-
(An) +	011	reg. number:An	1 [
– (An)	100	reg. number:An	11			
(d ₁₆ ,An)	101	reg. number:An	11	(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An	1 [(d ₈ ,PC,Xn)	-	_

MC68020 MC68030 and MC68040 only

1000020, 1100000	o, ana n	1000040 01119				
(bd,An,Xn**	110	reg. number:An		(bd,PC,Xn)†	-	-
([bd,An,Xn],od)	110	reg. number:An		([bd,PC,Xn],od)	-	-
([bd,An],Xn,od)	110	reg. number:An		([bd,PC],Xn,od)	—	-
((),),)			1	((

*Word and long only. **Can be used with CPU32

ADDX

Add Extended (M68000 Family

Source + Destination + X \rightarrow Destination Operation:

Assembler Syntax:

ADDX Dv.Dx ADDX - (Ay), - (Ax)

Attributes Size = (Byte, Word, Long)

Description: Adds the source operand and the extend bit to the destination operand and pres the result in the destination location. The operands can be addressed in two different ways:

- 1. Data register to data register—The data registers specified in the instruction contain the operands.
- 2. Memory to memory—The address registers specified in the instruction address the operands using the predecrement addressing mode.

The size of the operation can be specified as byte, word, or long.

Condition Codes:



Χ-

Set the same as the carry bit.
 Set if the result is negative; cleared otherwise.

Z — Cleared if the result is nonzero; unchanged otherwise.
 V — Set if an overflow occurs; cleared otherwise.
 C — Set if a carry is generated; cleared otherwise.

NOTE

Normally, the Z condition code bit is set via programming before the start of an operation. This allows successful tests for zero results upon completion of multiple-precision operations.

4-12

4-14

Integer Instructions

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-13

Integer Instructions

ADDX ADDX Add Extended (M68000 Family) Instruction Format: 15 14 13 12 1 1 0 1 11 10 9 8 7 REGISTER Rx 1 SIZE 4 3 0 R/M 2 , REGISTER Ry Instruction Fields: Register Rx field—Specifies the destination register. If R/M = 0, specifies a data register. If R/M = 1, specifies an address register for the predecrement addressing mode. Size field-Specifies the size of the operation. 00 — Byte operation 01 — Word operation 10 — Long operation

R/M field—Specifies the operand address mode The operation is data register to data register
 The operation is memory to memory.

Register Ry field-Specifies the source register.

If R/M = 0, specifies a data register. If R/M = 1, specifies an address register for the predecrement addressing mode.

AND AND AND Logical (M68000 Family) Operation: Source L Destination \rightarrow Destination AND < ea > ,Dn AND Dn, < ea > Assembler Syntax: Size = (Byte, Word, Long) Attributes: Description: Performs an AND operation of the source operand with the destination operand and stores the result in the destination location. The size of the operation can be specified as byte, word, or long. The contents of an address register may not be

used as an operand.

Condition Codes:



X — Not affected

- Set if the most significant bit of the result is set; cleared otherwise.
- Z Set if the result is zero; cleared otherwise. V Always cleared.
- C Always cleared.

Instruction Format:



Instruction Fields:

Register field—Specifies any of the eight data registers.

Opmode field

Byte	Word	Long	Operation
000	001	010	$< ea > \Lambda Dn \rightarrow Dn$
100	101	110	Dn Λ < ea > \rightarrow < ea >

AND

AND Logical (M68000 Family)

AND

Effective Address field—Determines addressing mode

a. If the location specified is a source operand, only data addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	111	100
(An) +	011	reg. number:An			
- (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011

MC68020, MC68030, and MC68040 only

(bd,An,Xn*	110	reg. number:An	(bd,PC,Xn)*	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

*Can be used with CPU32.

Integer Instructions

AND

AND Logical (M68000 Family) b. If the location specified is a destination operand, only memory alterable address-ing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register] [Addressing Mode	Mode	Register
Dn	-	-	1 [(xxx).W	111	000
An	-	-	1 [(xxx).L	111	001
(An)	010	reg. number:An	1 [# <data></data>	-	-
(An) +	011	reg. number:An	1 [
– (An)	100	reg. number:An	1 [
(d ₁₆ ,An)	101	reg. number:An	1 [(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An	1 [(d ₈ ,PC,Xn)	-	-

(bd,PC,Xn)*

([bd,PC,Xn],od)

([bd,PC],Xn,od)

MC68020, MC68030, and MC68040 only

(bd,An,Xn)*	110	reg. number:An						
([bd,An,Xn],od)	110	reg. number:An						
([bd,An],Xn,od)	110	reg. number:An						
*Can be used with CPU32.								

number:An

NOTE

The Dn mode is used when the destination is a data register; the destination < ea > mode is invalid for a data register.

Most assemblers use ANDI when the source is immediate data

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-17

Integer Instructions

ANDI	AND Immediate (M68000 Family)	ANDI
Operation:	Immediate Data Λ Destination \rightarrow Destination	
Assembler Syntax:	ANDI # < data > , < ea >	
Attributes:	Size = (Byte, Word, Long)	
operand and	forms an AND operation of the immediate data with stores the result in the destination location. The size of th as byte, word, or long. The size of the immediate dat e.	e operation can

Condition Codes:



- Not affected X N
- Set if the most significant bit of the result is set; cleared otherwise.
- Z Set if the result is zero; cleared otherwise. V Always cleared.
- C Always cleared.

Instruction Format:



ANDI

MOTOROLA

AND

AND Immediate (M68000 Family)

Integer Instructions ANDI

Instruction Fields:

Size field—Specifies the size of the operation. 00 — Byte operation 01 — Word operation

- 10 Long operation

Effective Address field—Specifies the destination operand. Only data alterable addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register	
Dn	000	reg. number:Dn	(xxx).W	111	000	
An	-	_	(xxx).L	111	001	
(An)	010	reg. number:An	# <data></data>	-	_	
(An) +	011	reg. number:An				
– (An)	100	reg. number:An				
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	_	
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	-	

MC68020. MC68030. and MC68040 only

(bd,An,Xn)*	110	reg. number:An	(bd,PC,Xn)*	-	_
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	-	-
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	-	-
*Can be used with CF	PU32				

Immediate field—Data immediately following the instruction. If size = 00, the data is the low-order byte of the immediate word. If size = 01, the data is the entire immediate word.

If size = 10, the data is the next two immediate words

Integer Instructions

ANDI to CCR	CCR AND Immediate	ANDI to CCR	ASL, AS	SR Arithmetic Shift (M68000 Family)
	(M68000 Family)		Operation:	Destination Shifted By Count \rightarrow Destination
Operation:	Source $\Lambda \operatorname{CCR} \to \operatorname{CCR}$		Assembler	ASd Dx,Dy
Assembler Syntax:	ANDI # < data > ,CCR		Syntax:	ASd # < data > ,Dy ASd < ea > where d is direction, L or R
Attributes:	Size = (Byte)		Attributes:	Size = (Byte, Word, Long)
	rforms an AND operation of the immediate operators the result in the low-order byte of the status		The carry	rithmetically shifts the bits of the operand bit receives the last bit shifted out of the a register may be specified in two differen

codes Condition Codes:

х	Ν	z	V	С	
•	•	•	•	•	

- X Cleared if bit 4 of immediate operand is zero; unchanged otherwise
- N Cleared if bit 3 of immediate operand is zero; unchanged otherwise
 N Cleared if bit 3 of immediate operand is zero; unchanged otherwise
 V Cleared if bit 1 of immediate operand is zero; unchanged otherwise
- С - Cleared if bit 0 of immediate operand is zero; unchanged otherwise

Instruction Format

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	0	0	1	0	0	0	1	1	1	1	0	0
0	0	0	0	0	0	0	0				B-BIT BY	TE DAT/	Á.		

ASL, ASR

Count \rightarrow Destination

the operand in the direction (L or R) specified. ted out of the operand. The shift count for the shifting of a register may be specified in two different ways: 1. Immediate—The shift count is specified in the instruction (shift range, 1 – 8).

- 2. Register—The shift count is the value in the data register specified in instruction
- modulo 64

The size of the operation can be specified as byte, word, or long. An operand in memory can be shifted one bit only, and the operand size is restricted to a word.

For ASL, the operand is shifted left; the number of positions shifted is the shift count. Bits shifted out of the high-order bit go to both the carry and the extend bits; zeros are shifted into the low-order bit. The overflow bit indicates if any sign changes occur during the shift



4-20

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

Integer Instructions

ASL, ASR

Arithmetic Shift (M68000 Family)



For ASR, the operand is shifted right; the number of positions shifted is the shift count Bits shifted out of the low-order bit go to both the carry and the extend bits; the sign bit (MSB) is shifted into the high-order bit.



Condition Codes:

Ν

X - Set according to the last bit shifted out of the operand; unaffected for a shift count of zero. — Set if the most significant bit of the result is set; cleared otherwise.

- Ν
- Z Set if the result is zero; cleared otherwise. V Set if the most significant bit is changed at any time during the shift operation;
- cleared otherwise
- $\rm C-Set$ according to the last bit shifted out of the operand; cleared for a shift count of zero


Instruction Format:

REGISTER SHIFTS





- Count/Register field-Specifies shift count or register that contains the shift count: If i/r = 0, this field contains the shift count. The values 1 – 7 represent counts of 1 – 7; a value of zero represents a count of eight.
 - If i/r = 1, this field specifies the data register that contains the shift count (modulo 64)

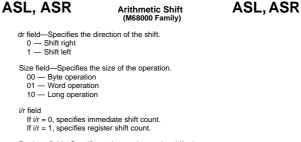

Register field—Specifies a data register to be shifted.

Instruction Format:





Instruction Fields:

dr field-Specifies the direction of the shift

0 — Shift right 1 — Shift left

4-21

Integer Instructions

ASL, ASR

Arithmetic Shift (M68000 Family)

ASL, ASR

Effective Address field—Specifies the operand to be shifted. Only memory alterable addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register	Addressing Mod	e Mode	Register
Dn	-	-	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	-	-
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	-

MC68020, MC68030, and MC68040 only

(bd,An,Xn)*	110	reg. number:An		(bd,PC,Xn)*	-	-
([bd,An,Xn],od)	110	reg. number:An		([bd,PC,Xn],od)	-	-
([bd,An],Xn,od)	110	reg. number:An		([bd,PC],Xn,od)	-	-

*Can be used with CPU32.

Bcc	Branch Conditionally (M68000 Family)	Bcc
Operation:	If Condition True Then PC + $d_n \rightarrow PC$	
Assembler Syntax:	Bcc < label >	

Attributes: Size = (Byte, Word, Long*) *(MC68020, MC68030, and MC68040 only)

Description: If the specified condition is true, program execution continues at location (PC) + displacement. The program counter contains the address of the instruction word for the Bcc instruction plus two. The displacement is a twos-complement integer that represents the relative distance in bytes from the current program counter to the destination program counter. If the 8-bit displacement field in the instruction word is destination program counter. If the 4-bit displacement tield in the instruction word is zero, a 16-bit displacement (the word immediately following the instruction) is used. If the 8-bit displacement field in the instruction word is all ones (\$FF), the 32-bit displacement (long word immediately following the instruction) is used. Condition code cc specifies one of the following conditional tests (refer to Table 3-19 for more information on these conditional tests):

Mnemonic	Condition		Mnemonic	Condition
CC(HI)	Carry Clear		LS	Low or Same
CS(LO)	Carry Set		LT	Less Than
EQ	Equal		MI	Minus
GE	Greater or Equal		NE	Not Equal
GT	Greater Than		PL	Plus
н	High		VC	Overflow Clear
LE	Less or Equal		VS	Overflow Set

Condition Codes:

Not affected.

4-24

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-25

Integer Instructions

Integer Instructions

Вс	BCC Branch Conditionally (M68000 Family)									B	cc				
Instru	uctior	Form	nat:												
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	1	0		COND	ITION				8-E	BIT DISP	LACEME	INT		
	16-BIT DISPLACEMENT IF 8-BIT DISPLACEMENT = \$00														
	32-BIT DISPLACEMENT IF 8-BIT DISPLACEMENT = \$FF														

Instruction Fields:

Condition field-The binary code for one of the conditions listed in the table

- 8-Bit Displacement field—Twos complement integer specifying the number of bytes between the branch instruction and the next instruction to be executed if the condition is met.
- 16-Bit Displacement field-Used for the displacement when the 8-bit displacement field contains \$00
- 32-Bit Displacement field-Used for the displacement when the 8-bit displacement field contains \$FF.

NOTE

A branch to the immediately following instruction automatically uses the 16-bit displacement format because the 8-bit displacement field contains \$00 (zero offset).

BCHG	Test a Bit and Change (M68000 Family)	BCHG				
Operation:	TEST (< number > of Destination) \rightarrow Z; TEST (< number > of Destination) \rightarrow < bit number >	of Destination				
Assembler Syntax:	BCHG Dn, < ea > BCHG # < data > , < ea >					
Attributes:	Size = (Byte, Long)					
Description: Tests a bit in the destination operand and sets the Z condition cod appropriately, then inverts the specified bit in the destination. When the destination						

a data register, any of the 32 bits can be specified by the modulo 32-bit number. When the destination is a memory location, the operation is a byte operation, and the bit number is modulo 8. In all cases, bit zero refers to the least significant bit. The bit number for this operation may be specified in either of two ways:
 Immediate—The bit number is specified in a second word of the instruction.

- 2. Register—The specified data register contains the bit number.

Condition Codes:



N - Not affected.

- Z Set if the bit tested is zero; cleared otherwise.
 V Not affected.
- C Not affected.

Test a Bit and Change (M68000 Family)

BCHG

Instruction Format:

BIT NUMBER DYNAMIC, SPECIFIED IN A REGISTER

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	R	REGISTER		1	0	1		EFI MODE	FECTIVI	E ADDRE	SS EGISTE	R

Instruction Fields:

Register field-Specifies the data register that contains the bit number.

Effective Address field—Specifies the destination location. Only data alterable addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	-	-
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	-

MC68020, MC68030, and MC68040 only

(bd,An,Xn)**	110	reg. number:An		(bd,PC,Xn)†	-	-	
([bd,An,Xn],od)	110	reg. number:An		([bd,PC,Xn],od)	-	-	
([bd,An],Xn,od)	110	reg. number:An		([bd,PC],Xn,od)	-	-	

*Long only; all others are byte only. **Can be used with CPU32.

Register

000 001

BCHG

Test a Bit and Change (M68000 Family)

Instruction Format:

BIT NUMBER STATIC, SPECIFIED AS IMMEDIATE DATA

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	1	0	0	0	0	1		EFF MODE	ECTIVE	ADDRE	ESS EGISTE	R
0	0	0	0	0	0	0	0				BIT NU	IMBER			

Instruction Fields:

Effective Address field—Specifies the destination location. Only data alterable addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register	Addressing Mode Mode
Dn*	000	reg. number:Dn	(xxx).W 111
An	-	-	(xxx).L 111
(An)	010	reg. number:An	# <data> —</data>
(An) +	011	reg. number:An	
– (An)	100	reg. number:An	
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC) —
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn) —

, MC6803	0, and N	IC68040 only	
n,Xn)**	110	reg. number:An	(bo

(bd,PC,Xn)†	-	(bd,An,Xn)**
([bd,PC,Xn],od)	-	([bd,An,Xn],od)
([bd,PC],Xn,od)	-	([bd,An],Xn,od)

*Long only; all others are byte only **Can be used with CPU32.

MC68020

(bd,An,Xn)**

Bit Number field-Specifies the bit number.

 ([bd,An,Xn],od)
 110
 reg. number:An

 ([bd,An],Xn,od)
 110
 reg. number:An

4-28

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-29

Integer Instructions

BCLR	Test a Bit and Clear (M68000 Family) BCLR
Operation:	TEST (< bit number > of Destination) \rightarrow Z; 0 \rightarrow < bit number > of Destination
Assembler Syntax:	BCLR Dn, < ea > BCLR # < data > , < ea >
Attributes:	Size = (Byte, Long)

- Description: Tests a bit in the destination operand and sets the Z condition code appropriately, then clears the specified bit in the destination. When a data register is the destination, any of the 32 bits can be specified by a modulo 32-bit number. When a memory location is the destination, the operation is a byte operation, and the bit number is modulo 8. In all cases, bit zero refers to the least significant bit. The bit number for this operation can be specified in either of two ways:
 Immediate—The bit number is specified in a second word of the instruction.

 - 2. Register-The specified data register contains the bit number.

Condition Codes:

4-30

х	N	Z	V	С
-	-		-	-

- X Not affected.
- N Not affected.
- Z Set if the bit tested is zero; cleared otherwise. V Not affected.
- C Not affected.

BCLR

MOTOROLA



Integer Instructions BCLR

Instruction Format:

BIT NUMBER DYNAMIC, SPECIFIED IN A REGISTER

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
					FOIOTE						EFI	FECTIVE	ADDRE	SS	
U	0	0	0	к	EGISTER	<	1	1	0		MODE		R	EGISTE	R

Instruction Fields:

Register field-Specifies the data register that contains the bit number.

Effective Address field-Specifies the destination location. Only data alterable addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	-	-
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	-

MC68020. MC68030. and MC68040 only

	(bd,An,Xn)**	110	reg. number:An	(bd,PC,Xn)†	-	-
I	([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	-	-
I	([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	-	-
	*Long only; all others **Can be used with C		only.			

Test a Bit and Clear (M68000 Family)

Instruction Format:

BIT NUMBER STATIC. SPECIFIED AS IMMEDIATE DATA

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	1	0	0	0	1	0		EFI MODE	FECTIVE		ESS REGISTE	R
0	0	0	0	0	0	0	0				BIT NU	JMBER			

Instruction Fields:

Effective Address field-Specifies the destination location. Only data alterable addressing modes can be used as listed in the following tables

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	-	-
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	_

MC68020, MC68030, and MC68040 only

n)**	110	reg. number:An	(bd,PC,Xn)†	-	-
],od)	110	reg. number:An	([bd,PC,Xn],od)	-	_
n,od)	110	reg. number:An	([bd,PC],Xn,od)	-	-

*Long only; all others are byte only **Can be used with CPU32.

(bd,An,X (fbd An Xn ([bd.An].Xr

Bit Number field-Specifies the bit number

BFCHG

Test Bit Field and Change (MC68020, MC68030, MC68040) BFCHG

TEST (< bit field > of Destination) \rightarrow < bit field > of Destination Operation:

Assembler Syntax:

BFCHG < ea > {offset:width}

Unsized

Description: Sets the condition codes according to the value in a bit field at the specified effective address, then complements the field.

A field offset and a field width select the field. The field offset specifies the starting bit of the field. The field width determines the number of bits in the field.

Condition Codes:

х	Ν	Z	V	С
-	•		0	0

X — Not affected.

N — Set if the most significant bit of the field is set; cleared otherwise. Z — Set if all bits of the field are zero; cleared otherwise.

V — Always cleared.

C — Always cleared.

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	0	1	0	1	0	1	1			ECTIV			
			-				-				MODE		F	EGISTE	R
0	0	0	0	Do			OFFSET			Dw			WIDTH		

NOTE

For the MC68020, MC68030, and MC68040, all bit field instructions access only those bytes in memory that contain some portion of the bit field. The possible accesses are byte, word, 3-byte, long word, and long word with byte (for a 5-byte access).

4-32

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

BCLR

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-33

Integer Instructions

Integer Instructions

BFCHG

Test Bit Field and Change (MC68020, MC68030, MC68040)

BFCHG

Instruction Fields:

Effective Address field—Specifies the base location for the bit field. Only data register direct or control alterable addressing modes can be used as listed in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	-	-
(An) +	-	-			
– (An)	-	-			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	-
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	-	-
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	-	-
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	-	-

Do field—Determines how the field offset is specified.

0 — The offset field contains the bit field offset.

Bits 8 – 6 of the extension word specify a data register that contains the offset; bits 10 – 9 are zero.

Offset field—Specifies the field offset, depending on Do. If Do = 0, the offset field is an immediate operand; the operand value is in the range 0 - 31. If Do = 1, the offset field specifies a data register that contains the offset. The value is in the range of -2^{31} to $2^{31} - 1$.

Dw field—Determines how the field width is specified.

0 - The width field contains the bit field width


Bits 2 – 0 of the extension word specify a data register that contains the width; bits 3 – 4 are zero.

Width field—Specifies the field width, depending on Dw. If Dw = 0, the width field is an immediate operand; an operand value in the range 1 -31 specifies a field width of 1 – 31, and a value of zero specifies a width of 32. If Dw = 1, the width field specifies a data register that contains the width. The value is modulo 32; values of 1 - 31 specify field widths of 1 - 31, and a value of zero specifies a width of 32. BFCLR BFCLR Test Bit Field and Clear (MC68020, MC68030, MC68040) Operation: $0 \rightarrow <$ bit field > of Destination Assemble BFCLR < ea > {offset:width} Syntax: Attributes: Unsized

Description: Sets condition codes according to the value in a bit field at the specified effective address and clears the field.

The field offset and field width select the field. The field offset specifies the starting bit of the field. The field width determines the number of bits in the field.

Condition Codes:

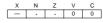

- Not affected. - Set if the most significant bit of the field is set; cleared otherwise.

- Z Set if all bits of the field are zero: cleared otherwise.
- V Always cleared. C Always cleared.

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	0	1	1	0	0	1	1		EFI	ECTIVE	E ADDRE	ESS EGISTE	R
0	0	0	0	Do			OFESET	I		Dw	1		WIDTH		N.

BFCLR

Test Bit Field and Clear (MC68020, MC68030, MC68040)

BFCLR

Instruction Fields:

Effective Address field—Specifies the base location for the bit field. Only data register direct or control alterable addressing modes can be used as listed in the following table

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	-	-
(An) +	-	-			
– (An)	-	-			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	—	-
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	-
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	-	-
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	-	-
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	—	-

Do field-Determines how the field offset is specified.

0 — The offset field contains the bit field offset.

1 — Bits 8 - 6 of the extension word specify a data register that contains the offset; bits 10 – 9 are zero.

Offset field-Specifies the field offset, depending on Do.

If Do = 0, the offset field is an immediate operand; the operand value is in the range

of 0 – 31. in D = 1, the offset field specifies a data register that contains the offset. The value is in the range of -2^{31} to $2^{31} - 1$.

Dw field—Determines how the field width is specified.

- 0 The width field contains the bit field width. Bits 2 - 0 of the extension word specify a data register that contains the width; bits 3 - 4 are zero.

Width field—Specifies the field width, depending on Dw.

If Dw = 0, the width field is an immediate operand; operand values in the range of 1 -31 specify a field width of 1 - 31, and a value of zero specifies a width of 32. If Dw = 1, the width field specifies a data register that contains the width. The value is modulo 32; values of 1 - 31 specify field widths of 1 - 31, and a value of zero specifies a width of 32. specifies a width of 32

4-36

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

BFEXTS

Extract Bit Field Signed (MC68020, MC68030, MC68040)

< bit field > of Source \rightarrow Dn

Assembler

Operation:

Syntax:

BFEXTS < ea > {offset:width},Dn

Unsiz

Description: Extracts a bit field from the specified effective address location, sign extends to 32 bits, and loads the result into the destination data register. The field offset and field width select the bit field. The field offset specifies the starting bit of the field. The field width determines the number of bits in the field.

Condition Codes:



X — Not affected.

N — Not alrected.
 N — Set if the most significant bit of the field is set; cleared otherwise.
 Z — Set if all bits of the field are zero; cleared otherwise.
 V — Always cleared.

C - Always cleared

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	0	1	0	1	1	1	1		EFFECTIVE ADDRESS MODE REGISTER			R	
0	REGISTER			Do	OFFSET				Dw	WIDTH					

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-37

Integer Instructions

BFEXTS

Integer Instructions

BFEXTS

Extract Bit Field Signed (MC68020, MC68030, MC68040)



Instruction Fields:

Effective Address field—Specifies the base location for the bit field. Only data register direct or control addressing modes can be used as listed in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	-	-
(An) +	-	-			
– (An)	-	-			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

Register field-Specifies the destination register.

Do field-Determines how the field offset is specified.

 The offset field contains the bit field offset. 1 — Bits 8 – 6 of the extension word specify a data register that contains the offset;

bits 10 – 9 are zero

Offset field—Specifies the field offset, depending on Do. If Do = 0, the offset field is an immediate operand; the operand value is in the range of 0 - 31.

If Do = 1, the offset field specifies a data register that contains the offset. The value is in the range of -2^{31} to $2^{31} - 1$.

Dw field—Determines how the field width is specified.

0 — The width field contains the bit field width.
1 — Bits 2 - 0 of the extension word specify a data register that contains the width; bits 4 - 3 are zero.

BFEXTS

Extract Bit Field Signed (MC68020, MC68030, MC68040)

Width field-Specifies the field width, depending on Dw.

If Dw = 0, the width field is an immediate operand; operand values in the range of 1 -31 specify a field width of 1 - 31, and a value of zero specifies a width of 32. If Dw = 1, the width field specifies a data register that contains the width. The value

is modulo 32; values of 1 - 31 specify field widths of 1 - 31, and a value of zero specifies a width of 32.

4-38

BFEXTU Extract Bit Field Unsigned (MC68020, MC68030, MC68040)

< bit offset > of Source \rightarrow Dn Operation:

Assemble

Syntax: BFEXTU < ea > {offset:width},Dn Unsized

Attributes:

Description: Extracts a bit field from the specified effective address location, zero extends to 32 bits, and loads the results in the bestination data register. The field offset and field width select the field. The field offset specifies the starting bit of the field. The field width determines the number of bits in the field.

Condition Codes:

х	Ν	z	v	С	
_	•	•	0	0	

- X Not affected.
- N Set if the most significant bit of the source field is set; cleared otherwise. Z Set if all bits of the field are zero; cleared otherwise.
- Z Set if all bits or a V Always cleared.
- C Always cleared.

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	0	1	0	0	1	1	1		EFI MODE	FECTIVE	ADDRE	ESS EGISTE	R
0	R	EGISTE	R	Do			OFFSET			Dw			WIDTH		

Extract Bit Field Unsigned (MC68020, MC68030, MC68040)

Instruction Fields:

```
Effective Address field—Specifies the base location for the bit field. Only data register
     direct or control addressing modes can be used as listed in the following table:
```

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	000	reg. number:Dn	(xxx).W	111	000
An	-	_	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	-	_
(An) +	-	-			
– (An)	-	-			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

Register field-Specifies the destination data register.

Do field—Determines how the field offset is specified. 0 — The offset field contains the bit field offset.

1 — Bits 8 – 6 of the extension word specify a data register that contains the offset; bits 10 - 9 are zero.

Offset field-Specifies the field offset, depending on Do. If Do = 0, the offset field is an immediate operand; the operand value is in the range

If Do = 1, the offset field specifies a data register that contains the offset. The value is in the range of -2^{31} to $2^{31} - 1$.

Dw field—Determines how the field width is specified. 0 — The width field contains the bit field width. 1 — Bits 2 – 0 of the extension word specify a data register that contains the width; bits 4 – 3 are zero.

4-40

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

BFEXTU

BFEXTU

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-41

Integer Instructions

BFFFO

Integer Instructions

BFEXTU

Extract Bit Field Unsigned (MC68020, MC68030, MC68040)

Width field-Specifies the field width, depending on Dw.

If Dw = 0, the width field is an immediate operand; operand values in the range of 1 -31 specify a field width of 1 - 31, and a value of zero specifies a width of 32. If Dw = 1, the width field specifies a data register that contains the width. The value is modulo 32; values of 1 - 31 specify field widths of 1 - 31, and a value of zero specifies a width of 32. **BFFFO** < bit offset > of Source Bit Scan \rightarrow Dn Operation: BFFFO < ea > {offset:width},Dn Syntax: Unsized Description: Searches the source operand for the most significant bit that is set to a value of one. The bit offset of that bit (the bit offset in the instruction plus the offset of the first one bit) is placed in Dn. If no bit in the bit field is set to one, the value in Dn is the field offset plus the field width. The instruction sets the condition codes according to the bit field value. The field offset and field width select the field. The field offset specifies the starting bit of the field. The field width determines the number of bits in the field.

Condition Codes:





X — Not affected.

N - Set if the most significant bit of the field is set; cleared otherwise.Z - Set if all bits of the field are zero; cleared otherwise.Z V

- Always cleared.
- C Always cleared.

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	0	1	0	0	1	1	1		EFF	ECTIVE		ESS EGISTE	R
0	F	EGISTE	R	Do			OFFSET	-		Dw WIDTH					

Find First One in Bit Field (MC68020, MC68030, MC68040)

Assemble

Attributes:

BFFFO

4-44

Integer Instructions

Find First One in Bit Field (MC68020, MC68030, MC68040)

BFFFO

Instruction Fields:

Effective Address field—Specifies the base location for the bit field. Only data register direct or control addressing modes can be used as listed in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	-	-
(An) +	-	-			
– (An)	-	-			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

Register field-Specifies the destination data register operand.

Do field—Determines how the field offset is specified 0 — The offset field contains the bit field offset.

1 — Bits 8 – 6 of the extension word specify a data register that contains the offset; bits 10 - 9 are zero

Offset field-Specifies the field offset, depending on Do. If Do = 0, the offset field is an immediate operand; the operand value is in the range

If Do = 0, the offset field specifies a data register that contains the offset. The value is in the range of -2^{31} to $2^{31} - 1$.

Dw field—Determines how the field width is specified.

 0 — The width field contains the bit field width.
 1 — Bits 2 - 0 of the extension word specify a data register that contains the width; bits 4 – 3 are zero.

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

Find First One in Bit Field (MC68020, MC68030, MC68040)

Width field-Specifies the field width, depending on Dw.

- If Dw = 0, the width field is an immediate operand; operand values in the range of 1
- -31 specify a field width of 1 -31, and a value of zero specifies a width of 32. If Dw = 1, the width field specifies a data register that contains the width. The value is modulo 32; values of 1 - 31 specify field widths of 1 - 31, and a value of zero specifies a width of 32.

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-45

Integer Instructions

BFINS

Registe

000

001

BFINS BFINS BFINS Insert Bit Field (MC68020, MC68030, MC68040) Insert Bit Field (MC68020, MC68030, MC68040) $Dn \rightarrow < bit field > of Destination$ Operation: Instruction Fields: Effective Address field—Specifies the base location for the bit field. Only data register direct or control alterable addressing modes can be used as listed in the following Assemble BFINS Dn, < ea > {offset:width} Syntax: table: Attributes: Unsized Addressing M Register Addressing Mode Mode Description: Inserts a bit field taken from the low-order bits of the specified data register into a bit field at the effective address location. The instruction sets the condition codes 000 reg. number:Dn (xxx).W Ar 111 (xxx).L according to the inserted value. The field offset and field width select the field. The field (An) 010 #<data: reg. number:An offset spe ecifies the starting bit of the field. The field width determines the number of bits in the field. (An) + _ - (An) Condition Codes: 101 (d₁₆,PC) (d₁₆,An) reg. number:An 110 reg. number:An (d₈,An,Xn) (d₈,PC,Xn) X N Z V C 110 reg. number:An (bd,An,Xn) (bd,PC,Xn) ([bd,An,Xn],od) 110 reg. number:An ([bd,PC,Xn],od X — Not affected. (fbd.Anl.Xn.od) 110 reg. number:An ([bd.PC].Xn.od) N — Set if the most significant bit of the field is set; cleared otherwise. Z — Set if all bits of the field are zero; cleared otherwise.

MOTOROLA

Register field-Specifies the source data register operand.

Do field—Determines how the field offset is specified.

 0 — The offset field contains the bit field offset.
 1 — Bits 8 - 6 of the extension word specify a data register that contains the offset; bits 10 - 9 are zero.

Offset field—Specifies the field offset, depending on Do. If Do = 0, the offset field is an immediate operand; the operand value is in the range

of 0 - 31.

If Do = 1, the offset field specifies a data register that contains the offset. The value is in the range of -2^{31} to $2^{31} - 1$.

Dw field—Determines how the field width is specified.

 0 — The width field contains the bit field width.
 1 — Bits 2 – 0 of the extension word specify a data register that contains the width; bits 4 – 3 are zero

V — Always cleared. C — Always cleared.

Instruction Format:

1 1 0 1 1 1 1 1 1

1

0

4-46

13

REGISTER

Do

OFFSE

4 3 2 EFFECTIVE ADDRESS

MODE

Dw

REGISTER

Integer Instructions

BFFFO

BFINS

Insert Bit Field (MC68020, MC68030, MC68040)

Width field-Specifies the field width, depending on Dw.

- If Dw = 0, the width field is an immediate operand; operand values in the range of 1 - 31 specify a field width of 1 - 31, and a value of zero specifies a width of 32. If Dw = 1, the width field specifies a data register that contains the width. The value
- is modulo 32; values of 1 31 specify field widths of 1 31, and a value of zero specifies a width of 32.

BFSET

Test Bit Field and Set (MC68020, MC68030, MC68040)

 $1 \rightarrow <$ bit field > of Destination

Operation: Assembler Syntax:


BFSET < ea > {offset:width}

Unsized Attributes

Description: Sets the condition codes according to the value in a bit field at the specified effective address, then sets each bit in the field.

The field offset and the field width select the field. The field offset specifies the starting bit of the field. The field width determines the number of bits in the field.

Condition Codes:

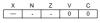

X — Not affected.

N — Set if the most significant bit of the field is set; cleared otherwise. Z — Set if all bits of the field are zero; cleared otherwise.

V — Always cleared. C — Always cleared.

Instruction Format:

	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	1	1	1	0	1	1	1	0	1	1		EFF MODE	ECTIVE	E ADDRE	ESS REGISTE	R
I	0	0	0	0	Do			OFFSET			Dw WIDTH					

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

BFINS

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-49

Integer Instructions

Integer Instructions

BFSET

Test Bit Field and Set (MC68020, MC68030, MC68040)

BFSET

Instruction Fields:

Effective Address field—Specifies the base location for the bit field. Only data register direct or control alterable addressing modes can be used as listed in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	000) reg. number:Dn (xxx).W		111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	-	-
(An) +	-	-			
– (An)	-	-			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	-
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	-	-
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	-	-
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	-	-

Do field—Determines how the field offset is specified.

0 — The offset field contains the bit field offset.

Bits 8 – 6 of the extension word specify a data register that contains the offset; bits 10 – 9 are zero.

Offset field—Specifies the field offset, depending on Do. If Do = 0, the offset field is an immediate operand; the operand value is in the range of 0 – 31.

in D = 1, the offset field specifies a data register that contains the offset. The value is in the range of -2^{31} to $2^{31} - 1$.

Dw field—Determines how the field width is specified.

0 - The width field contains the bit field width

Bits 2 – 0 of the extension word specify a data register that contains the width; bits 4 – 3 are zero.

- Width field—Specifies the field width, depending on Dw. If Dw = 0, the width field is an immediate operand; operand values in the range of 1 31 specify a field width of 1 31, and a value of zero specifies a width of 32. If Dw = 1, the width field specifies a data register that contains the width. The value is modulo 32; values of 1 - 31 specify field widths of 1 - 31, and a value of zero specifies a width of 32.


BFTST Test Bit Field (MC68020, MC68030, MC68040) < bit field > of Destination Operation: Assemble BFTST < ea > {offset:width} Syntax: Attributes: Unsized Description: Sets the condition codes according to the value in a bit field at the specified effective address location. The field offset and field width select the field. The field offset specifies the starting bit of the field. The field width determines the number of bits in the

field. Condition Codes:



- X Not affected
- Set if the most significant bit of the field is set; cleared otherwise.
- Z Set if all bits of the field are zero; cleared otherwise. V Always cleared.
- C Always cleared.

Instruction Format:

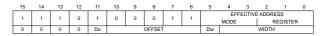

BFTST

BFTST

Test Bit Field (MC68020, MC68030, MC68040)

BFTST

Instruction Fields:

Effective Address field-Specifies the base location for the bit field. Only data register direct or control addressing modes can be used as listed in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	-	-
(An) +	-	-			
– (An)	-	-			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

Do field-Determines how the field offset is specified

 The offset field contains the bit field offset.
 Bits 8 – 6 of the extension word specify a data register that contains the offset; 1 bits 10 - 9 are zero

Offset field-Specifies the field offset, depending on Do.

If Do = 0, the offset field is an immediate operand; the operand value is in the range of 0 - 31.

To D_{1} the offset field specifies a data register that contains the offset. The value is in the range of -2^{31} to $2^{31} - 1$.

Dw field—Determines how the field width is specified. 0 — The width field contains the bit field width. 1 — Bits 2 – 0 of the extension word specify a data register that contains the width; bits 4 - 3 are zero.

Width field—Specifies the field width, depending on Dw.

If Dw = 0, the width field is an immediate operand, operand values in the range of 1 -31 specify a field width of 1 – 31, and a value of zero specifies a width of 32.
 If Dw = 1, the width field specifies a data register that contains the width. The value is modulo 32; values of 1 – 31 specify field widths of 1 – 31, and a value of zero specifies a width of 32.

4-52

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

Integer Instructions

BKPT BKPT Breakpoint (MC68EC000, MC68010, MC68020, MC68030, MC68040, CPU32)

Run Breakpoint Acknowledge Cycle; TRAP As Illegal Instruction Operation

Assemble Syntax:

BKPT # < data >

Unsized

Description: For the MC68010, a breakpoint acknowledge bus cycle is run with function codes driven high and zeros on all address lines. Whether the breakpoint acknowledge bus cycle is terminated with DTACK, BERR, or VPA, the processor always takes an illegal instruction exception. During exception processing, a debug monitor can distinguish different software breakpoints by decoding the field in the BKPT instruction. For the MC68000 and MC68008, the breakpoint cycle is not run, but an illegal instruction exception is taken.

For the MC68020, MC68030, and CPU32, a breakpoint acknowledge bus cycle is executed with the immediate data (value 0 - 7) on bits 2 - 4 of the address bus and zeros on bits 0 and 1 of the address bus. The breakpoint acknowledge bus cycle accesses the CPU space, address lines $A_2 - A_4$. If the external hardware terminates the cycle accesses the instruction on address lines $A_2 - A_4$. If the external hardware terminates the cycle with DSACKx or STERM, the data on the bus (an instruction word) is inserted into the instruction pipe and is executed after the breakpoint instruction. The breakpoint instruc-tion requires a word to be transferred so, if the first bus cycle accesses an 8- bit port, a second bus cycle is required. If the external logic terminates the breakpoint acknowl-edge bus cycle with BERR (i.e., no instruction word available), the processor takes an illegal instruction exception.

For the MC68040, this instruction executes a breakpoint acknowledge bus cycle. Regardless of the cycle termination, the MC68040 takes an illegal instruction excep-

For more information on the breakpoint instruction refer to the appropriate user's manual on bus operation

This instruction supports breakpoints for debug monitors and real- time hardware emulators

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-53

Integer Instructions

Integer Instructions

ВКРТ	Breakpoint (MC68EC000, MC68010, MC68020, MC68030, MC68040, CPU32)	ВКРТ
Condition Codes:		
Not affected.		
Instruction Formati		

Instruction Format:

15 14 13 0 1 0 12 11 10 9 8 7 6 5 4 3 2 1 0 1 0 0 0 1 0 0 1 VECTOR

Instruction Field

Vector field-Contains the immediate data, a value in the range of 0 - 7. This is the breakpoint number.

BRA BRA Branch Always (M68000 Family) $PC + d_n \rightarrow PC$ Operation: Assemble Syntax: BRA < label > Attributes: Size = (Byte, Word, Long*) *(MC68020, MC68030, MC68040 only)

Description: Program execution continues at location (PC) + displacement. The program counter contains the address of the instruction word of the BRA instruction plus two. The displacement is a twos complement integer that represents the relative distance in bytes from the current program counter to the destination program counter. If the 8-bit displacement field in the instruction word is zero, a 16-bit displacement (the word immediately following the instruction) is used. If the 8-bit displacement field in the instruction word is all ones (\$FF), the 32-bit displacement (long word immediately following the instruction) is used.

Condition Codes:

Not affected

Instruction Format:



Instruction Fields:

8-Bit Displacement field—Twos complement integer specifying the number of bytes between the branch instruction and the next instruction to be executed.

16-Bit Displacement field—Used for a larger displacement when the 8-bit displacement is equal to \$00.

32-Bit Displacement field—Used for a larger displacement when the 8-bit displacement is equal to \$FF.

NOTE

A branch to the immediately following instruction automatically uses the 16-bit displacement format because the 8-bit displacement field contains \$00 (zero offset).

BSET	Test a Bit and Set (M68000 Family)	BSET
Operation:	TEST (< bit number > of Destination) \rightarrow Z; 1 \rightarrow < b tination	oit number > of Des-

Assembler	BSET Dn, < ea >
Syntax:	BSET # < data > , < ea >
Attributes:	Size = (Byte, Long)

Description: Tests a bit in the destination operand and sets the Z condition code appropriately, then sets the specified bit in the destination operand. When a data register is the destination, any of the 32 bits can be specified by a modulo 32-bit number. When a memory location is the destination, the operation is a byte operation, and the bit number is modulo 8. In all cases, bit zero refers to the least significant bit. The bit number for this operation can be specified in either of two ways:

1. Immediate—The bit number is specified in the second word of the instruction. 2. Register-The specified data register contains the bit number

Condition Codes:

х	Ν	Z	V	С
_	-	*	-	-

- Not affected х
- N Not affected.
- Z Set if the bit tested is zero; cleared otherwise V — Not affected
- C Not affected.

Integer Instructions BSET

Instruction Format:

BSET

Test a Bit and Set (M68000 Family)

BIT NUMBER DYNAMIC, SPECIFIED IN A REGISTER

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	R	REGISTER	R	1	1	1		EF MODE	FECTIV	E ADDRE	ESS EGISTE	R

Instruction Fields:

Register field-Specifies the data register that contains the bit number.

Effective Address field—Specifies the destination location. Only data alterable addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Registe
Dn*	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	-	_
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	_

MC68020, MC68030, and MC68040 only

Γ	(bd,An,Xn)**	110	reg. number:An	(bd,PC,Xn)†	-	-
Γ	([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	-	-
	([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	-	-
	ong only; all others Can be used with Cl		nly.			

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

BSET

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-57

Integer Instructions

Integer Instructions

BSET	Test a Bit and Set	
	(M68000 Family)	

Instruction Format:

BIT NUMBER STATIC, SPECIFIED AS IMMEDIATE DATA

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
0	0	0									EFI	FECTIV	E ADDRI	ESS
0	0	0	0	L ' .	0	0	0	l '	· ·		MODE		F	REGISTE
0	0	0	0	0	0	0			-	BI	T NUMB	ER		
		v	, v		, v						1 1101110	<u> </u>		_

Instruction Fields:

Effective Address field—Specifies the destination location. Only data alterable addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Registe
Dn*	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	-	-
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	-

MC68020, MC68030, and MC68040 only

(bd,An,Xn)**	110	reg. number:An]	(bd,PC,Xn)†	-	-
([bd,An,Xn],od)	110	reg. number:An	1	([bd,PC,Xn],od)	-	-
([bd,An],Xn,od)	110	reg. number:An	1	([bd,PC],Xn,od)	-	-

*Long only; all others are byte only. **Can be used with CPU32.

Bit Number field-Specifies the bit number.

BSR BSR Branch to Subroutine (M68000 Family) $SP - 4 \rightarrow SP; PC \rightarrow (SP); PC + d_n \rightarrow PC$ Operation: Assemble BSR < label > Syntax: Attributes: Size = (Byte, Word, Long*) *(MC68020, MC68030, MC68040 only)

Description: Pushes the long-word address of the instruction immediately following the BSR instruction onto the system stack. The program counter contains the address of the instruction word plus two. Program execution then continues at location (PC) + the instruction word plus two. Program execution then continues at location (PC) + displacement. The displacement is a twos complement integer that represents the relative distance in bytes from the current program counter to the destination program counter. If the 8-bit displacement field in the instruction word is zero, a 16-bit displacement (the word immediately following the instruction) is used. If the 8-bit displacement field in the instruction word is all ones (\$FF), the 32-bit displacement (long word immediately following the instruction) is used.

Condition Codes:

Not affected

Instruction Format:

	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Γ	0 1 1 0 0 0 1 8-BIT DISPLACEMENT															
Г	16-BIT DISPLACEMENT IF 8-BIT DISPLACEMENT = \$00															
	32-BIT DISPLACEMENT IF 8-BIT DISPLACEMENT = \$FF															

BSR	Branch to Subroutine (M68000 Family)	BSR	BTST	Те (М68
Instruction Fields:			Operation:	TEST (< bit number
	nent field—Twos complement integer specifying the branch instruction and the next instruction to be		Assembler Syntax:	BTST Dn, < ea > BTST # < data > , < e
16-Bit Displace is equal to	ement field—Used for a larger displacement when th \$0.	ne 8-bit displacement	Attributes:	Size = (Byte, Long)
32-Bit Displace is equal to	ement field—Used for a larger displacement when th \$FF.	ne 8-bit displacement	appropriate	ests a bit in the destin ely. When a data registe y a modulo 32- bit numbe
	NOTE			s a byte operation, and the
uses	nch to the immediately following instruction autom the 16-bit displacement format because the cement field contains \$00 (zero offset).		either of tw 1. Imm	e least significant bit. The o ways: lediate—The bit number is ister—The specified data
			Condition Code	


Test a Bit (M68000 Family)

number > of Destination) \rightarrow Z a > a > , < ea >


destination operand and sets the Z condition code register is the destination, any of the 32 bits can be number. When a memory location is the destination, the n, and the bit number is modulo 8. In all cases, bit zero bit. The bit number for this operation can be specified in

- umber is specified in a second word of the instruction.
- ed data register contains the bit number.

Condition Codes:

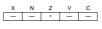



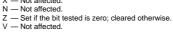

C — Not affected.

4-60

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-61

Integer Instructions

011

011

011

Integer Instructions

BTST

BTST

Instruction Format:

BIT NUMBER DYNAMIC, SPECIFIED IN A REGISTER

15 14 13 12 11 10 9 8 7 6 0 4 3 2 1 EFFECTIVE ADDRESS 0 0 0 0 REGISTER 1 0 0 MODE REGISTER

Test a Bit (M68000 Family)

Instruction Fields:

Register field-Specifies the data register that contains the bit number.

Effective Address field—Specifies the destination location. Only data addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	111	100
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011

MC68020, MC68030, and MC68040 only

1	(bd,An,Xn)**	110	reg. number:An	(bd,PC,Xn)†	111	011
	([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
	([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011
				•		

*Long only; all others are byte only. **Can be used with CPU32.

BTST



Test a Bit (M68000 Family)	BTST
(M68000 Family)	

Instruction Format:

BIT NUMBER STATIC, SPECIFIED AS IMMEDIATE DATA

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	1	0	0	0	0	0		EF MODE	FECTIVE	ADDRE	ESS EGISTE	R
0	0	0	0	0	0	0	0		BIT NUMBER						

Effective Address field—Specifies the destination location. Only data addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	-	-
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011

MC68020, MC68030, and MC68040 only

(bd,An,Xn)	110	reg. number:An	[(bd,PC,Xn)*	111				
([bd,An,Xn],od)	110	reg. number:An		([bd,PC,Xn],od)	111				
([bd,An],Xn,od)	110	reg. number:An		([bd,PC],Xn,od)	111				
*Can be used with CPU32.									

Bit Number field—Specifies the bit number.

13	12	11	10	9	8	7	6	5	4	3	2	1		
0	0	1	0	0	0	0	0		EFI MODE	FECTIVE	ADDRE	ESS EGIST		
0	0	0	0	0	0	BIT NUMBER								

Instruction Fields:

CALLM	Call Module (MC68020)	CALLM
Operation:	Save Current Module State on Stack; Load Ne Destination	ew Module State from

Assemble Syntax: CALLM # < data > , < ea > Attributes: Unsized

Description: The effective address of the instruction is the location of an external module descriptor. A module frame is created on the top of the stack, and the current module state is saved in the frame. The immediate operand specifies the number of bytes of arguments to be passed to the called module. A new module state is loaded from the descriptor addressed by the effective address.

Condition Codes:

Not affected

Instruction Format:

	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	0	0	0	0	0	1	1	0	1	1		EFF MODE	ECTIVE	ADDRE	ESS EGISTE	R
Ì	0	0	0	0	0	0	0	0	ARGUMENT COUNT							

CALLM

4-65

Integer Instructions

CAS CAS2

CALLM Instruction Fields:

Effective Address field-Specifies the address of the module descriptor. Only control addressing modes can be used as listed in the following table:

Call Module (MC68020)

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	-	-	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	-	_
(An) +	-	-			
– (An)	-	-			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

Argument Count field—Specifies the number of bytes of arguments to be passed to the called module. The 8-bit field can specify from 0 to 255 bytes of arguments. The same number of bytes is removed from the stack by the RTM instruction.

4-64

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

Integer Instructions


CAS	Compare and Swap with Operand
CAS2	(MC68020, MC68030, MC68040)
Operation:	$ \begin{array}{l} \mbox{CAS Destination} - \mbox{Compare Operand} \rightarrow \mbox{cc;} \\ \mbox{If } Z, \mbox{Update Operand} \rightarrow \mbox{Destination} \\ \mbox{Else Destination} 0 & \mbox{Compare Operand} \\ \mbox{CAS2 Destination 1} - \mbox{Compare 1} \rightarrow \mbox{cc;} \\ \mbox{If } Z, \mbox{Destination 1} - \mbox{Compare 2} \rightarrow \mbox{cc} \\ \mbox{If } Z, \mbox{Destination 2} - \mbox{Compare 2} \rightarrow \mbox{Cc} \\ \mbox{If } Z, \mbox{Destination 1} \cup \mbox{Destination 2} \rightarrow \mbox{Destination 2} \\ \mbox{Else Destination 1} \rightarrow \mbox{Compare 1; Destination 2} \rightarrow \mbox{Compare 2} \\ \end{array} $
Assembler	CAS Dc,Du, < ea >
Syntax:	CAS2 Dc1:Dc2,Du1:Du2,(Rn1):(Rn2)
Attributes:	Size = (Byte [*] , Word, Long)

Description: CAS compares the effective address operand to the compare operand (Dc). If the operands are equal, the instruction writes the update operand (Du) to the effective address operand; otherwise, the instruction writes the effective address operand to the compare operand (Dc).

CAS2 compares memory operand 1 (Rn1) to compare operand 1 (Dc1). If the oper-ands are equal, the instruction compares memory operand 2 (Rn2) to compare oper-and 2 (Dc2). If these operands are also equal, the instruction writes the update operands (Du1 and Du2) to the memory operands (Rn1 and Rn2). If either comparison fails, the instruction writes the memory operands (Rn1 and Rn2) to the compare operands (Dc1 and Dc2).

Both operations access memory using locked or read-modify-write transfer sequences, providing a means of synchronizing several processors.

Condition Codes:

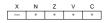

- Not affected.
- N Set if the result is negative: cleared otherwise
- Z Set if the result is negative, dealed difference.V Set if an overflow is generated; cleared otherwise.

C - Set if a borrow is generated; cleared otherwise.

Compare and Swap with Operand (MC68020, MC68030, MC68040)

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	1	SI	ZE	0	1	1		EFI MODE	FECTIVE		SS EGISTE	R
0	0	0	0	0	0	0		Du		0	0	0		Dc	

Instruction Fields:

CAS CAS2

Effective Address field—Specifies the location of the memory operand. Only memory alterable addressing modes can be used as listed in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	-	_	(xxx).W	111	000
An	-	_	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	-	_
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	-
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	-	-
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	-	-
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	-	-

Du field—Specifies the data register that contains the update value to be written to the memory operand location if the comparison is successful.

Dc field-Specifies the data register that contains the value to be compared to the memory operand.

CAS

Size field-Specifies the size of the operation.

11 — Long operation

01 — Byte operation 10 — Word operation

(An) +	011	reg. number:An			
- (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	_
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	-
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	-	-
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	-	_
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	-	_

^{*} CAS2 cannot use byte operands

CAS CAS2



CAS2

Compare and Swap with Operand (MC68020, MC68030, MC68040)

Instruction Fields:

- Size field-Specifies the size of the operation. 10 — Word operation
- 11 Long operation
- D/A1, D/A2 fields—Specify whether Rn1 and Rn2 reference data or address registers, respectively.
- 0 The corresponding register is a data register.
 1 The corresponding register is an address register
- Rn1, Rn2 fields-Specify the numbers of the registers that contain the addresses of the first and second memory operands, respectively. If the operands overlap in memory, the results of any memory update are undefined.
- Du1. Du2 fields—Specify the data registers that contain the update values to be written to the first and second memory operand locations if the comparison is successful.
- Dc1, Dc2 fields—Specify the data registers that contain the test values to be compared to the first and second memory operands, respectively. If Dc1 and Dc2 specify the same data register and the comparison fails, memory operand 1 is stored in the data register.

NOTE

The CAS and CAS2 instructions can be used to perform secure update operations on system control data structures in a multiprocessing environment.

In the MC68040 if the operands are not equal, the destination or destination 1 operand is written back to memory to complete the locked access for CAS or CAS2, respectively.

4-68

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

CHK

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

Integer Instructions

СНК	Check Register Against Bounds (M68000 Family)	
-----	--	--

Instruction Fields:

Register field-Specifies the data register that contains the value to be checked

Size field-Specifies the size of the operation.

11-Word operation 10— Long operation

Effective Address field—Specifies the upper bound operand. Only data addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register		Addressing Mode	Mode	Register
Dn	000	reg. number:Dn	1	(xxx).W	111	000
An	-	-	1	(xxx).L	111	001
(An)	010	reg. number:An	1	# <data></data>	111	100
(An) +	011	reg. number:An	1			
– (An)	100	reg. number:An	1			
(d ₁₆ ,An)	101	reg. number:An	1	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An		(d ₈ ,PC,Xn)	111	011

C68020 MC68030 and MC68040 only

1												
	(bd,An,Xn)*	110	reg. number:An		(bd,PC,Xn)*	111	011					
ſ	([bd,An,Xn],od)	110	reg. number:An		([bd,PC,Xn],od)	111	011					
	([bd,An],Xn,od)	110	reg. number:An		([bd,PC],Xn,od)	111	011					

*Can be used with CPU32


CHK Check Register Against Bounds (M68000 Family) If Dn < 0 or Dn > Source Operation:

Then TRAP Assembler CHK < ea > ,Dn Syntax: Attributes: Size = (Word, Long*)

*(MC68020, MC68030, MC68040 only)

Description: Compares the value in the data register specified in the instruction to zero and to the upper bound (effective address operand). The upper bound is a twos complement integer. If the register value is less than zero or greater than the upper bound, a CHK instruction exception (vector number 6) occurs.

Condition Codes:

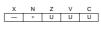

- X Not affected. N Set if Dn < 0; cleared if Dn > effective address operand; undefined otherwise
- Z Undefined. V Undefined.

C — Undefined.



	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
ſ	0	1	0	0	F	EGISTE	۲	SIZE		0		EFI MODE	FECTIVI	E ADDRE	ESS EGISTE	R

Integer Instructions

4-69

Integer Instructions

CHK

CHK2	Check Register Against Bounds (MC68020, MC68030, MC68040, CPU32)	CHK2
Operation:	If Rn < LB or Rn > UB Then TRAP	
Assembler Syntax:	CHK2 < ea > ,Rn	
Attributes:	Size = (Byte, Word, Long)	

Description: Compares the value in Rn to each bound. The effective address contains the bounds pair: the upper bound following the lower bound. The elective address contains the bounds pair: the upper bound following the lower bound. For signed comparisons, the arithmetically smaller value should be used as the lower bound. For unsigned comparisons, the logically smaller value should be the lower bound.

The size of the data and the bounds can be specified as byte, word, or long. If Rn is a data register and the operation size is byte or word, only the appropriate low-order part of Rn is checked. If Rn is an address register and the operation size is byte or word. the bounds operands are sign-extended to 32 bits, and the resultant operands are compared to the full 32 bits of An.

If the upper bound equals the lower bound, the valid range is a single value. If the reg-ister value is less than the lower bound or greater than the upper bound, a CHK instruc-tion exception (vector number 6) occurs.

Condition Codes:



- Not affected. N — Undefined.

- Z Set if Rn is equal to either bound; cleared otherwise
 V Undefined.
- C Set if Rn is out of bounds; cleared otherwise

4-70





CHK2 CHK2 Check Register Against Bounds (MC68020, MC68030, MC68040, CPU32) Instruction Format: 13 12 11 10

EFFECTIVE ADDRESS 0 0 0 0 0 SIZE 0 1 1 MODE REGISTER D/A REGISTER 1 0 0 0 0 0

Instruction Fields:

Size field-Specifies the size of the operation.

00 — Byte operation 01 — Word operation

- 10 Long operation

Effective Address field-Specifies the location of the bounds operands. Only control addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Node Register Addressing Mode			Register	
Dn	Dn — —		(xxx).W	111	000	
An	-	-	(xxx).L	111	001	
(An)	010	reg. number:An	# <data></data>	-	-	
(An) +	-	-				
– (An)	-	-				
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010	
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011	
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011	

MC68020, MC68030, and MC68040 only

([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

D/A field—Specifies whether an address register or data register is to be checked. 0 — Data register 1 — Address register

Register field-Specifies the address or data register that contains the value to be checked.

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

CLR



sembler		
ntax:	CLR < ea >	

Attributes: Size = (Byte, Word, Long)

Description: Clears the destination operand to zero. The size of the operation may be specified as byte, word, or long

Condition Codes:

As

Sy

×	N	Z	V	C
	0	1	0	0
X — I N — J Z — J V — J C — J	Alway Alway Alway	s clea s set. s clea	red. red.	

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	0	0	0	0	1	0	SI	ZE	EFFECTIVE ADDRESS MODE REGISTE		SS EGISTE	R		

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

Integer Instructions

Clear an Operand (M68000 Family)

Instruction Fields:

Size field—Specifies the size of the operation. 00— Byte operation 01— Word operation

10-Long operation

Effective Address field—Specifies the destination location. Only data alterable addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	-	-
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	_

MC68020, MC68030, and MC68040 only

(bd,An,Xn)*	110	reg. number:An	(bd,PC,Xn)*	-	-
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	-	-
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	-	-

*Can be used with CPU32

NOTE

In the MC68000 and MC68008 a memory location is read before it is cleared.

CMP CMP Compare (M68000 Family) Operation: Destination – Source \rightarrow cc Assembler CMP < ea > , Dn Syntax: Size = (Byte, Word, Long) Attributes:

Description: Subtracts the source operand from the destination data register and sets the condition codes according to the result; the data register is not changed. The size of the operation can be byte, word, or long.

Condition Codes:

X N	Z	V	С
- *	*		*

N — Set if the result is negative; cleared otherwise. Z — Set if the result is zero; cleared otherwise.

- V Set if an overflow occurs; cleared otherwise.
 C Set if a borrow occurs; cleared otherwise.

Instruction Format:

	15	14	13	12	11	10 9 8 7 6		5	4	3	2	1	0		
1	1	0	1	1	R	REGISTER OPMODE			EFI	ECTIV	ADDRE	SS			
		1 0 1	1	REGISTER			Ì	OF MODE			MODE		R	EGISTE	R

Instruction Fields:

Register field—Specifies the destination data register.

Opmode field

Byte	Word	Long	Operation
000	001	010	Dn – < ea >

4-73

Integer Instructions

Integer Instructions

CMP

Compare (M68000 Family)

Effective Address field-Specifies the source operand. All addressing modes can be used as listed in the following tables:

Addressing Mode	ddressing Mode Mode Register		Addressing Mode	Mode	Register		
Dn	000	reg. number:Dn	(xxx).W	111	000		
An*	001	reg. number:An	(xxx).L	111	001		
(An)	010	reg. number:An	# <data></data>	111	100		
(An) +	011	reg. number:An					
– (An)	100	reg. number:An					
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010		
(d ₈ ,An,Xn)	110 reg. number:An		(d ₈ ,PC,Xn)	111	011		

MC68020, MC68030, and MC68040 only

(bd,An,Xn)**	110	reg. number:An	(bd,PC,Xn)†	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

*Word and Long only. **Can be used with CPU32.

NOTE

CMPA is used when the destination is an address register. CMPI is used when the source is immediate data. CMPM is used for memory-to-memory compares. Most assemblers automatically make the distinction.

CMPA

 $\text{Destination} - \text{Source} \rightarrow \text{cc}$

Assembler

Syntax: CMPA < ea > . An

Attributes: Size = (Word, Long)

Description: Subtracts the source operand from the destination address register and sets the condition codes according to the result; the address register is not changed. The size of the operation can be specified as word or long. Word length source operands are sign- extended to 32 bits for comparison.

Compare Address (M68000 Family)

Condition Codes:

Operation:





 $\begin{array}{l} X = \operatorname{Not} \operatorname{anetceu}, \\ N = \operatorname{Set} \operatorname{if} \operatorname{the result} \operatorname{is negative; cleared otherwise.} \\ Z = \operatorname{Set} \operatorname{if} \operatorname{the result} \operatorname{is zero; cleared otherwise.} \\ V = \operatorname{Set} \operatorname{if} \operatorname{an overflow} \operatorname{is generated; cleared otherwise.} \\ C = \operatorname{Set} \operatorname{if} \operatorname{a borrow} \operatorname{is generated; cleared otherwise.} \end{array}$

Instruction Format:

	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
ſ	1	0	1	1	F	REGISTER	t		OPMOD	E		EF MODE	FECTIV	E ADDRE	ESS EGISTE	R

4-76

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

CMP

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-77

Integer Instructions

CMPA

Compare Address (M68000 Family)

CMPA

Instruction Fields:

Register field-Specifies the destination address register.

Opmode field-Specifies the size of the operation.

- 011-Word operation; the source operand is sign-extended to a long operand, and the operation is performed on the address register using all 32 bits. 111-Long operation.
- Effective Address field-Specifies the source operand. All addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	000	reg. number:Dn	(xxx).W	111	000
An	001	reg. number:An	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	111	100
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(0, , , ,			(10) - 7 /		

MC68020 MC68030 and MC68040 only


	1000020, 1100000	o, and n	1000040 Only			
ſ	(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)*	111	011
ſ	([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
	([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

*Can be used with CPU32

CMPI CMPI Compare Immediate (M68000 Family) Operation: Destination – Immediate Data \rightarrow cc Assembler CMPI # < data > , < ea > Syntax: Attributes: Size = (Byte, Word, Long)

Description: Subtracts the immediate data from the destination operand and sets the condition codes according to the result; the destination location is not changed. The size of the operation may be specified as byte, word, or long. The size of the immediate data matches the operation size.

Condition Codes:

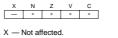

Ν Set if the result is negative; cleared otherwise.

Instruction Format:



Integer Instructions

CMPI

Compare Immediate (M68000 Family)

CMPI

Instruction Fields:

- Size field—Specifies the size of the operation.

 - 00 Byte operation 01 Word operation 10 Long operation

Effective Address field—Specifies the destination operand. Only data addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register		Addressing Mode	Mode	Register		
Dn	000	reg. number:Dn		(xxx).W	111	000		
An	-	_		(xxx).L		111	001	
(An)	010	reg. number:An	1	# <data></data>	-	-		
(An) +	011	reg. number:An	1					
- (An)	100	reg. number:An	1					
(d ₁₆ ,An)	101	reg. number:An	1	(d ₁₆ ,PC)*	111	010		
(d ₈ ,An,Xn)	110	reg. number:An	1	(d ₈ ,PC,Xn)*	111	011		

(bd,An,Xn)** 110 reg. number:An (bd,PC,Xn)† 111 01			IC68040 only	0, and M	MC68020, MC6803
	bd,PC,Xn)† 111 011	(bd,PC,Xn)†	reg. number:An	110	(bd,An,Xn)**
([bd,An,Xn],od) 110 reg. number:An ([bd,PC,Xn],od) 111 01	d,PC,Xn],od) 111 011	([bd,PC,Xn],od)	reg. number:An	110	([bd,An,Xn],od)
([bd,An],Xn,od) 110 reg. number:An ([bd,PC],Xn,od) 111 01	d,PC],Xn,od) 111 011	([bd,PC],Xn,od)	reg. number:An	110	([bd,An],Xn,od)

*PC relative addressing modes do not apply to MC68000, MC680008, or MC6801 **Can be used with CPU32.

Immediate field—Data immediately following the instruction.

If size = 00, the data is the low-order byte of the immediate word. If size = 01, the data is the entire immediate word. If size = 10, the data is the next two immediate words.



Compare Memory (M68000 Family)

Operation: Destination – Source \rightarrow cc

CMPM (Ay) + ,(Ax) +

Assembler Syntax:

Attributes: Size = (Byte, Word, Long)

Description: Subtracts the source operand from the destination operand and sets the condition codes according to the results; the destination location is not changed. The operands are always addressed with the postincrement addressing mode, using the address registers specified in the instruction. The size of the operation may be specified as byte, word, or long.

Condition Codes:



- N Set if the result is negative; cleared otherwise.
 Z Set if the result is zero; cleared otherwise.
- V Set if an overflow is generated; cleared otherwise C Set if a borrow is generated; cleared otherwise.

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	0	1	1	RE	GISTER	Ax	1	SI	ZE	0	0	1	RE	GISTER	Ay
Instruction Fields:															

ruction F	ieiu	5.									
Register	Ax	field-(always	the	destination)	Specifies	an	address	register	in	the	
pos	tinc	rement address	ing r	node.							

Size field—Specifies the size of the operation.

- 00 Byte operation 01 Word operation
- 10 Long operation

Register Ay field-(always the source) Specifies an address register in the postincrement addressing mode

4-80

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-81

Integer Instructions

CMP2	Compare Register Against Bounds (MC68020, MC68030, MC68040, CPU32)	CMP2
Operation:	Compare Rn < LB or Rn > UB and Set Condition Codes	
Assembler Syntax:	CMP2 < ea > ,Rn	
Attributes:	Size = (Byte, Word, Long)	

Description: Compares the value in Rn to each bound. The effective address contains the bounds pair: upper bound following the lower bound. For signed comparisons, the arithmetically smaller value should be used as the lower bound. For unsigned comparisons, the logically smaller value should be the lower bound.

The size of the data and the bounds can be specified as byte, word, or long. If Rn is a data register and the operation size is byte or word, only the appropriate low-order part of Rn is checked. If Rn is an address register and the operation size is byte or word, the bounds operands are sign-extended to 32 bits, and the resultant operands are compared to the full 32 bits of An.

If the upper bound equals the lower bound, the valid range is a single value

NOTE

This instruction is identical to CHK2 except that it sets condition codes rather than taking an exception when the value in Rn is out of bounds.

Condition Codes:

X N Z V C — U * U *

- X Not affected.
- N Undefined.
- Z Set if Rn is equal to either bound; cleared otherwise.
- V Undefined.
- C Set if Rn is out of bounds: cleared otherwise

CMP2

MOTOROLA

CMP2

Integer Instructions

CMP2 Compare Register Against Bounds (MC68020, MC68030, MC68040, CPU32)										(CM	P2				
Instru	uction	Forn	nat:													
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	

15	14	13	12	11	10	9	8		6	5	4	3	2	1	0
0	0	0	0	0	91	ZE	0	1	1		EFI	FECTIVE	ADDRE	SS	
0	0	0		0	5	20	0				MODE		F	EGISTE	R
D/A	R	EGISTE	R	0	0	0	0	0	0	0	0	0	0	0	0

Instruction Fields:

Size field-Specifies the size of the operation.

00 — Byte operation 01 — Word operation

10 — Long operation

Effective Address field-Specifies the location of the bounds pair. Only control addressing modes can be used as listed in the following tables

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	-	_	(xxx).W	111	000
An	-	_	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	-	-
(An) +	-	-			
– (An)	-	-			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011

MC68020, MC68030, and MC68040 only

([bd,A	.n,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,A	n],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

D/A field—Specifies whether an address register or data register is compared. 0 — Data register

1 — Address register

Register field-Specifies the address or data register that contains the value to be checked.

Integer Instructions CMPM

срВсс	Branch on Coprocessor Condition (MC68020, MC68030)	срВсс	cpDBcc	CPDBCC Test Coprocessor Condition Decrement and Branch (MC68020, MC68030)						
Operation:	If cpcc True Then Scan PC + $d_n \rightarrow PC$		Operation:	lf cpcc False Then (Dn – 1 →		-	n Scan I	PC + c	$I_n \rightarrow PC$)	
Assembler Syntax:	cpBcc < label >		Assembler Syntax:	cpDBcc Dn, < label	>					
Attributes:	Size = (Word, Long)		Attributes:	Size = (Word)						
location scar displacement the relative d displacement		address of the first ger that represents ogram counter. The	next instruction decremented instruction. If the by the value of the scan PC complement in the destination	e specified coprocess on. Otherwise, the l by one. If the result he result is not equal if the scan PC plus th is the address of the teger that represent in program counter. T tion word that follows	low-order we is equal to - to - 1, execu- ne sign-exter displacements the relative The coproces	ord in t - 1, exe ution cor ided 16- ent word distanc ssor det	the spe- cution c ntinues a -bit displ d. The d ce in byte termines	cified continu at the l lacem lisplac es fror	data regis les with the ocation ind ent. The va ement is a n the scan	ster e ne licate alue a two PC 1
Instruction Form	nat:		Condition Codes:							
15 14 13	12 11 10 9 8 7 6 5 4 3	2 1 0	Not affected.							
15 14 13	COPPOCESSOP	SOR CONDITION	Instruction Forma	t:						
	WORD OR		15 14 13	12 11 10 9	8 7	6 5	4	3	2 1	0
	LONG-WORD DISPLACEMENT		1 1 1	1 COPROCESSOR ID	0 0	1 0	0	1	REGISTE	ER
Instruction Field	ls:		0 0 0	0 0 0 0 OPTIONAL COPROCE	0 0	0		OCESSC	R CONDITION	
Coprocessor	r ID field—Identifies the coprocessor for this operation.	Coprocessor ID of			SSOR-DEFINED E		WORDS			
	sults in an F-line exception for the MC68030.		Instruction Fields							
0 — The	Specifies the size of the displacement. displacement is 16 bits. displacement is 32 bits.		000 resu	D field—Identifies the Its in an F-line excep	tion for the N	IC6803	0.	tion; c	oprocessor	r ID (
			Pogistor field	_Specifies the data r	hagu rateinar	as the	counter			

Coprocessor Condition field-Specifies the coprocessor condition to be tested. This field is passed to the coprocessor, which provides directives to the main processor for processing this instruction.

16-Bit Displacement field-The displacement value occupies 16 bits.

32-Bit Displacement field-The displacement value occupies 32 bits.

4-84

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

Integer Instructions **cpGEN cpGEN** Coprocessor General Function (MC68020, MC68030) Pass Command Word to Coprocessor Operation: Assemble cpGEN < parameters as defined by coprocessor > Syntax: Unsized Attributes:

Description: Transfers the command word that follows the operation word to the specified coprocessor. The coprocessor determines the specific operation from the command word. Usually a coprocessor defines specific instances of this instruction to provide its instruction set.

Condition Codes:

May be modified by coprocessor; unchanged otherwise.

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COF	ROCES	SOR	0	0	0		EFF MODE	ECTIV	E ADDRE	ESS EGISTE	R
	COPROCESSOR-DEPENDENT COMMAND WORD														
OPTIONAL EFFECTIVE ADDRESS OR COPROCESSOR-DEFINED EXTENSIONWORDS															

Instruction Fields:

- Coprocessor ID field-Identifies the coprocessor for this operation; note that coprocessor ID of 000 is reserved for MMU instructions for the MC68030.
- Effective Address field-Specifies the location of any operand not resident in the coprocessor. The allowable addressing modes are determined by the operation to be performed.
- Coprocessor Command field—Specifies the coprocessor operation to be performed. This word is passed to the coprocessor, which in turn provides directives to the main processor for processing this instruction.

cpScc cpScc Set on Coprocessor Condition (MC68020, MC68030) Operation: If cpcc True Then 1s \rightarrow Destination Else 0s \rightarrow Destination Assembler Syntax: cpScc < ea > Size = (Byte) Attributes: Description: Tests the specified coprocessor condition code. If the condition is true, the byte specified by the effective address is set to TRUE (all ones); otherwise, that byte is set to FALSE (all zeros). The coprocessor determines the specific condition from the condition word that follows the operation word.

Condition Codes:

Not affected

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
				COF	ROCES	SOR	0	0	4		EFI	FECTIVE	ADDRE	SS	
1	1	1	1		ID		0	0	1		MODE		F	EGISTE	R
0	0	0	0	0	0	0	0	0	0	COPROCESSOR CONDITION					
		OP	TIONAL	EFFECT	TIVE AD	DRESS	OR COP	ROCES	SOR-DE	FINED	EXTENSI	ONWOR	DS		

4-86

CC

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COF	PROCES	SOR	0	0	1	0 0 1 REGISTER				R	
0	0	0	0	0	0	0	0	0	0	COPROCESSOR CONDITION					
				OPTIC	ONAL CO	PROCE	SSOR-D	EFINED	EXTEN	ENSION WORDS					
	16-BIT DISPLACEMENT														

Register field—Specifies the data register used as the counter.

- Coprocessor Condition field-Specifies the coprocessor condition to be tested. This field is passed to the coprocessor, which provides directives to the main processor for processing this instruction.
- Displacement field—Specifies the distance of the branch (in bytes).

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-85

Integer Instructions

Instru

cpScc	Set o

Integer Instructions

pScc	Set on Coprocessor Condition (MC68020, MC68030)	cpScc
truction Fields:		
Coprocessor ID	field—Identifies the coprocessor for this operation	n. Coprocessor ID of

of 000 results in an F-line exception for the MC68030.

Effective Address field-Specifies the destination location. Only data alterable addressing modes can be used as listed in the following table

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	-	-
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	_
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	-
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	-	-
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	-	_
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	-	_

Coprocessor Condition field-Specifies the coprocessor condition to be tested. This field is passed to the coprocessor, which in turn provides directives to the main processor for processing this instruction.

CPTRAPCC Trap on Coprocessor Condition CPTRAPCC (MC68020, MC68030)

Operation: If cpcc True Then TRAP

Assembler	cpTRAPcc
Syntax:	cpTRAPcc # < data >
Gyntax.	

Unsized or Size = (Word, Long) Attributes:

Description: Tests the specified coprocessor condition code; if the selected coprocessor condition is true, the processor initiates a cpTRAPcc exception, vector number 7. The program counter value placed on the stack is the address of the next instruction. If the selected condition is not true, no operation is performed, and execution continues with the next instruction. The coprocessor determines the specific condition from the condition word that follows the operation word. Following the condition word is a user-defined data operand specified as immediate data to be used by the trap handler.

Condition Codes:

Not affected.

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COF	ROCES	SOR	0	0	1	1	1	1		OPMODE	
0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 COPROCESSOR CONDITION														
OPTIONAL COPROCESSOR-DEFINED EXTENSION WORDS															
OPTIONAL WORD															
		OR LONG-WORD OPERAND													

Instruction Fields:

Coprocessor ID field—Identifies the coprocessor for this operation; coprocessor ID of 000 results in an F-line exception for the MC68030.

Opmode field—Selects the instruction form. 010—Instruction is followed by one operand word. 011—Instruction is followed by two operand words. 100—Instruction has no following operand words.

Coprocessor Condition field-Specifies the coprocessor condition to be tested. This field is passed to the coprocessor, which provides directives to the main processor for processing this instruction.

4-88

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-89

Integer Instructions

Integer Instructions

DBcc	Test Condition, Decrement, and Branch (M68000 Family)	DBcc
Operation:	If Condition False Then (Dn – 1 \rightarrow Dn; If Dn \neq – 1 Then PC + d _n \rightarrow PC)	
Assembler Syntax:	DBcc Dn, < label >	
Attributes:	Size = (Word)	
Decorintion: Con	trols a loop of instructions. The parameters are a condition	codo o doto


register (counter), and a displacement value. The instruction first tests the condition for termination; if it is true, no operation is performed. If the termination condition is not true, the low-order 16 bits of the counter data register decrement by one. If the result is - 1, execution continues with the next instruction. If the result is not equal to - 1, execution continues at the location indicated by the current value of the program counter plus the sign-extended 16-bit displacement. The value in the program counter is the address of the instruction word of the DBcc instruction plus two. The displacement is a twos complement integer that represents the relative distance in bytes from the current program counter to the destination program counter. Condition code cc specifies one of the following conditional tests (refer to Table 3-19 for more information on these conditional tests):

Mnemonic	Condition	Mnemonic	Condition
CC(HI)	Carry Clear	LS	Low or Same
CS(LO)	Carry Set	LT	Less Than
EQ	Equal	MI	Minus
F	False	NE	Not Equal
GE	Greater or Equal	PL	Plus
GT	Greater Than	т	True
н	High	VC	Overflow Clear
LE	Less or Equal	VS	Overflow Set

Condition Codes:

4-90

Not affected.

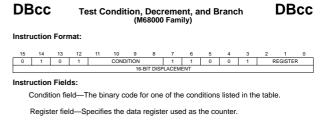

Displacement field-Specifies the number of bytes to branch.

NOTE

The terminating condition is similar to the UNTIL loop clauses of high-level languages. For example: DBMI can be stated as "decrement and branch until minus".

Most assemblers accept DBRA for DBF for use when only a count terminates the loop (no condition is tested).

A program can enter a loop at the beginning or by branching to the trailing DBcc instruction. Entering the loop at the beginning is useful for indexed addressing modes and dynamically specified bit operations. In this case, the control index count must be one less than the desired number of loop executions. However, when entering a loop by branching directly to the trailing DBcc instruction, the control count should equal the loop execution count. In this case, if a zero count occurs, the DBcc instruction does not branch, and the main loop is not executed.

DIVS, DIVSL Signed Divide (M68000 Family) **DIVS, DIVSL** Operation: $\text{Destination} + \text{Source} \rightarrow \text{Destination}$ DIVS.W < ea > ,Dn32/16 → 16r - 16q Assemble Syntax: *Applies to MC68020, MC68030, MC68040, CPU32 only

Size = (Word, Long) Attributes

Description: Divides the signed destination operand by the signed source operand and stores the signed result in the destination. The instruction uses one of four forms. The word form of the instruction divides a long word by a word. The result is a quotient in the lower word (least significant 16 bits) and a remainder in the upper word (most significant 16 bits). The sign of the remainder is the same as the sign of the dividend.

The first long form divides a long word by a long word. The result is a long quotient; the remainder is discarded.

The second long form divides a quad word (in any two data registers) by a long word. The result is a long-word quotient and a long-word remainder

The third long form divides a long word by a long word. The result is a long-word quotient and a long-word remainde

Two special conditions may arise during the operation:

1. Division by zero causes a trap.

2. Overflow may be detected and set before the instruction completes. If the instruction detects an overflow, it sets the overflow condition code, and the oper-ands are unaffected.

Condition Codes:

X N Z V C

X-Not affected.

- N Set if the quotient is negative: cleared otherwise: undefined if overflow or divide by zero occurs. – Set if the quotient is zero; cleared otherwise; undefined if overflow or divide by
- Ζzero occurs
- V Set if division overflow occurs; undefined if divide by zero occurs; cleared oth-
- erwise. C - Always cleared.

4-92

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

DIVS, DIVSL

DIVS, DIVSL

Signed Divide (M68000 Family)

DIVS, DIVSL

Integer Instructions

Instruction Format:

WORD

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	0	0	0	F	EGISTE	R	1	1	1	EFFECTIVE ADDRESS MODE REGISTER				R	
										REGISTER					

Instruction Fields:

Register field-Specifies any of the eight data registers. This field always specifies the destination operand

Effective Address field—Specifies the source operand. Only data alterable addressing modes can be used as listed in the following tables:

ddressing Mode	Mode	Register Addressing Mode		Mode	Register
Dn	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	111	100
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011

MC68020, MC68030, and MC68040 only

(bd,An

([bd,An,)

([bd,An], *Can be us

,Xn)*	110	reg. number:An	(bd,PC,Xn)*	111	011
Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
,Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011
ed with CF	PU32.				

NOTE

Overflow occurs if the quotient is larger than a 16-bit signed integer.

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-93

Integer Instructions

DIVS, DIVSL

Signed Divide (M68000 Family)

Instruction Format:

								LO	NG							
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
ſ	0	1	0	0	1	1	0	0	0	1		EFI MODE	FECTIVE	ADDRE	ESS EGISTE	R
ľ	0	RE	GISTER	Dq	1	SIZE	0	0	0	0	0	0	0	RE	GISTER	Dr

Instruction Fields:

Effective Address field—Specifies the source operand. Only data alterable addressing modes can be used as listed in the following tables:

MC68020, MC68030, and MC68040 only

Addressing Mode	Mode	Register	Addressing Mode	Mode	Registe
Dn	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	111	100
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011

MC68020, MC68030, and MC68040 only

([bd,An],Xn,od) 110 reg. number:An ([bd,PC],Xn,od) 111 011	([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
	([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

Register Dq field—Specifies a data register for the destination operand. The low-order 32 bits of the dividend comes from this register, and the 32-bit quotient is loaded into this register

Size field-Selects a 32- or 64-bit division operation.

0 — 32-bit dividend is in register Dq.
1 — 64-bit dividend is in Dr – Dq.

4-94



Signed Divide (M68000 Family)

DIVS, DIVSL

Register Dr field-After the division, this register contains the 32-bit remainder. If Dr and Dq are the same register, only the quotient is returned. If the size field is 1, this field also specifies the data register that contains the high-order 32 bits of the dividend.

NOTE

Overflow occurs if the quotient is larger than a 32-bit signed integer.

Unsigned Divide (M68000 Family) **DIVU, DIVUL DIVU, DIVUL** Operation: Destination + Source \rightarrow Destination DIVU.W < ea > ,Dn32/16 → 16r - 16q Assemble *DIVU.L < ea > ,Dq *DIVU.L < ea > ,Dr:Dq $\begin{array}{c} 32/32 \rightarrow 32q \\ 64/32 \rightarrow 32r - \end{array}$ Syntax: $\begin{array}{ll} ^* DIVU.L < ea > , Dq & 32/32 \rightarrow 32q \\ ^* DIVU.L < ea > , Dr:Dq & 64/32 \rightarrow 32r - 32q \\ ^* DIVUL.L < ea > , Dr:Dq & 32/32 \rightarrow 32r - 32q \end{array}$ *Applies to MC68020, MC68030, MC68040, CPU32 only Size = (Word, Long) Attributes Divides the unsigned destination operand by the unsigned source Description: operand and stores the unsigned result in the destination operand by the unsigned source operand and stores the unsigned result in the destination. The instruction uses one of four forms. The word form of the instruction divides a long word by a word. The result is a quotient in the lower word (least significant 16 bits) and a remainder in the upper word (most significant 16 bits). The first long form divides a long word by a long word. The result is a long quotient; the remainder is discarded.


The second long form divides a guad word (in any two data registers) by a long word The result is a long-word quotient and a long-word remainder

The third long form divides a long word by a long word. The result is a long-word quotient and a long-word remainde

Two special conditions may arise during the operation:

- 1. Division by zero causes a trap.
- 2. Overflow may be detected and set before the instruction completes. If the instruction detects an overflow, it sets the overflow condition code, and the oper-ands are unaffected.

Condition Codes:

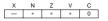

- X Not affected.
 N Set if the quotient is negative; cleared otherwise; undefined if overflow or divide by zero occurs. – Set if the quotient is zero; cleared otherwise; undefined if overflow or divide by Z -
- zero occurs
- V Set if division overflow occurs; cleared otherwise; undefined if divide by zero occurs.
- C Always cleared.

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

DIVU, DIVUL

Unsigned Divide (M68000 Family)

DIVU, DIVUL

Instruction Format:

WORD

15	14	13	12	11	10	9	8	7	6	5	4	3	2 1 0							
<u> </u>			0	0	0	0	0	DEGIGTED	DEOLOTED	DECISTS	DECISTED					EF	FECTIV	E ADDRE	SS	
1	0	0	0	R R	EGISTE	ĸ	0	1	1		MODE		R	EGISTE	R					

Register field-Specifies any of the eight data registers; this field always specifies the destination operand.

Effective Address field—Specifies the source operand. Only data addressing modes can be used as listed in the following tables:

MC68020, MC68030, and MC68040 only

Addressing Mode	Mode	Register	Addressing Mode	Mode
Dn	000	reg. number:Dn	(xxx).W	111
An	-	-	(xxx).L	111
(An)	010	reg. number:An	# <data></data>	111
(An) +	011	reg. number:An		
– (An)	100	reg. number:An		
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111

MC68020, MC68030, and MC68040 only

(bd,An,Xn)*	110	reg. number:An	(bd,PC,Xn)*	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011
**Can be used with C	PU32.				

NOTE

Overflow occurs if the quotient is larger than a 16-bit signed integer.

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

Integer Instructions

DIVU, DIVUL

Unsigned Divide (M68000 Family)

Instruction Format:

	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	0	1	0	0	1	1	0	0	0	1		EFFECTIVE			SS EGISTER	۶.
[0	RE	GISTER	Dq	0	SIZE	0	0	0	0	0 0 0 R		RE	GISTER	Dr	

LONG

Instruction Fields:

Effective Address field-Specifies the source operand. Only data addressing modes can be used as listed in the following tables

MC68020, MC68030, and MC68040 only

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	111	100
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)*	110	reg. number:An	(bd,PC,Xn)*	111	011

MC68020, MC68030, and MC68040 only

([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

Register Dq field—Specifies a data register for the destination operand. The low-order 32 bits of the dividend comes from this register, and the 32-bit quotient is loaded into this register

Size field-Selects a 32- or 64-bit division operation.

0 — 32-bit dividend is in register Dq.
1 — 64-bit dividend is in Dr – Dq.

4-98



Unsigned Divide (M68000 Family)

Integer Instructions

4-97

DIVU, DIVUL

Register Dr field-After the division, this register contains the 32-bit remainder. If Dr and Dq are the same register, only the quotient is returned. If the size field is 1, this field also specifies the data register that contains the high-order 32 bits of the dividend.

NOTE

Overflow occurs if the quotient is larger than a 32-bit unsigned integer.

Register

000 001

100

010 011

EOR	Exclusive-OR Logical (M68000 Family)	EOR	EOR	E	clusive-OR L (M68000 Fam	ogical illy)		EOF
peration: ssembler	Source \oplus Destination \rightarrow Destination		Effective Address can be used		the destinat the following tab		able addr	essing mode
yntax:	EOR Dn, < ea >		Addressing	ode Mode	Register	Addressing Mode	Mode	Register
ttributes:	Size = (Byte, Word, Long)		Dn	000	reg. number:Dn	(xxx).W	111	000
			An	-	-	(xxx).L	111	001
	rforms an exclusive-OR operation on the destination		(An)	010	reg. number:An	# <data></data>	-	-
	rand and stores the result in the destination locat		(An) +	011	reg. number:An			
	nay be specified to be byte, word, or long. The source or. The destination operand is specified in the effective		- (An)	100	reg. number:An			
data registe			(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	_
ondition Code	'S:		(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	_
X N	z v c		MC68020, MC	68030, and	MC68040 only			
- *	* 0 0		(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)*	-	_
X — Not a	affected.		([bd,An,Xn],d		reg. number:An	([bd,PC,Xn],od)	_	_
	f the most significant bit of the result is set; cleared of	therwise.	([bd,An],Xn,d		reg. number:An	([bd,PC],Xn,od)	-	_
	f the result is zero; cleared otherwise. ys cleared.		*Can be used w	th CPU32.	1]			
	ys cleared.				NOTE			
struction Forr	nat: WORD					are not allowe ce is immediate d		
15 14 13 1 0 1 Instruction Field	1 REGISTER OPMODE EFFE MODE	3 2 1 0 CTIVE ADDRESS REGISTER						
	d—Specifies any of the eight data registers.							
Opmode fie								
Opiniode lie								
Byte 100	Word Long Operation 101 110 < ea > ⊕ Dn → < ea >							
						DEFENSION IN THE		
00	M68000 FAMILY PROGRAMMER'S REFERENCE MANUA	AL MOTOROLA	MOTOROLA M68	DOO FAMILY	PROGRAMMER'S	REFERENCE MANU	IAL	4-

Integer Instructions Integer Instructions EORI Exclusive-OR Immediate (M68000 Family) EORI EORI EORI Exclusive-OR Immediate (M68000 Family) Immediate Data \oplus Destination \rightarrow Destination Instruction Fields: Operation: Size field—Specifies the size of the operation. 00— Byte operation 01— Word operation Assembler Syntax: EORI # < data > , < ea > 10-Long operation Attributes: Size = (Byte, Word, Long) Effective Address field—Specifies the destination operand. Only data alterable addressing modes can be used as listed in the following tables: **Description:** Performs an exclusive-OR operation on the destination operand using the immediate data and the destination operand and stores the result in the destination location. The size of the operation may be specified as byte, word, or long. The size of the immediate data matches the operation size. Condition Codes: X N Z V C — * * 0 0

X — Not affected. N — Set if the most significant bit of the result is set; cleared otherwise.

- V Set if the result is zero; cleared otherwise.
 V Always cleared.
 C Always cleared.

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0								SL	70		EFI	ECTIVE	ADDRE	ESS	
0		0				l '	0	31.	26		MODE		F	REGISTE	R
16-BIT WORD DATA											8-BIT BY	TE DAT/	A.		
32-BIT LONG DATA															

Addressing Mode	Mode	Register	Addressing Mode	Mode	Registe
Dn	000	reg. number:Dn	(xxx).W	111	000
An	-	_	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	-	_
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	_
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	—	-

MC68020, MC68030, and MC68040 only

	.,				
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)*	-	-
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	-	-
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	-	-
*Can be used with CF	PU32.				

Immediate field—Data immediately following the instruction. If size = 00, the data is the low-order byte of the immediate word. If size = 01, the data is the entire immediate word.

If size = 10, the data is next two immediate words.

Integer Instructions

EORI to CCR	Exclusive-OR Immediate	EORI to CCR	EXG	Exchange Registers (M68000 Family)	EXG
	to Condition Code (M68000 Family)		Operation:	$Rx \leftrightarrow Ry$	
Operation:	Source \oplus CCR \rightarrow CCR		Assembler Syntax:	EXG Dx,Dy EXG Ax,Ay EXG Dx,Ay	
Assembler Syntax:	EORI # < data > ,CCR		Attributes:	Size = (Long)	
Attributes:	Size = (Byte)		types of ex		ruction performs three
immediate c	forms an exclusive-OR operation on the condition perand and stores the result in the condition code register). All implemented bits of the condition cod	register (low-order byte	2. Exc	hange data registers. hange address registers. hange a data register and an address register.	
Condition Code	5:		Condition Cod	es:	
X N * *	Z V C * * *		Not affecte Instruction For		
N — Chan Z — Chan V — Chan	12 11 10 9 8 7 6 5 4 0 1 0 1 0 0 0 1 1	ed otherwise. ed otherwise. ed otherwise.	the m speci Opmode fi 01000	K field—Specifies either a data register or an address ode. If the exchange is between data and address reg lies the data register. eld—Specifies the type of exchange. Data registers Address registers Data register and address register	isters, this field always
			Register R	y field—Specifies either a data register or an address	register depending on

Register Ry field—Specifies either a data register or an address register depending on the mode. If the exchange is between data and address registers, this field always specifies the address register.

4-104

4-106

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-105

EXT, EX	B Sign-Extend	EXT, EXTB	ILLEGAL	
Operation:	(M68000 Family) Destination Sign-Extended \rightarrow Destination	n	Operation:	($\overline{M}68000$ Family) *SSP - 2 \rightarrow SSP: Vector Offset \rightarrow (SSP):
Assembler Syntax:	EXT.W Dnextend byte to word EXT.L Dnextend word to long word EXTB.L Dnextend byte to long word (MC		opolatoni	$\begin{split} & \text{SSP} - 4 \rightarrow \text{SSP}; \text{PC} \rightarrow (\text{SSP}); \\ & \text{SSP} - 2 \rightarrow \text{SSP}; \text{SR} \rightarrow (\text{SSP}); \\ & \text{Illegal Instruction Vector Address} \rightarrow \text{PC} \end{split}$
	MC68040, CPU32)	68020, MC68030		*The MC68000 and MC68008 cannot write the vector offset and format code to the system stack.
Attributes:	Size = (Word, Long) nds a byte in a data register to a word or a	long word, or a word in a data	Assembler Syntax:	ILLEGAL
register to a lo	ong word, by replicating the sign bit to the l, bit 7 of the designated data register is co	left. If the operation extends a	Attributes:	Unsized
register. If the register is cop	, bit 7 of the designated data register is of operation extends a word to a long word ied to bits $31 - 16$ of the data register. The gister to bits $31 - 8$ of the data register.	bit 15 of the designated data	instruction bit	es an illegal instruction exception, vector number 4. All other illega patterns are reserved for future extension of the instruction set an used to force an exception.
Condition Codes:			Condition Codes:	
X N	Z V C		Not affected.	
- *	* 0 0		Instruction Forma	t:
	he result is negative; cleared otherwise. he result is zero; cleared otherwise. a cleared.			12 11 10 9 8 7 6 5 4 3 2 1 0 0 1 0 1 0 1 1 1 1 1 1 0 0
Instruction Forma	it:			
15 14 13 0 1 0	12 11 10 9 8 7 6 5 0 1 0 0 OPMODE 0	4 3 2 1 0 0 0 REGISTER		
Instruction Fields	:			
	-Specifies the size of the sign-extension extend low-order byte of data register to v			

010—Sign-extend low-order byte of data register to word. 011—Sign-extend low-order word of data register to word. 111—Sign-extend low-order word of data register to long.

Register field—Specifies the data register is to be sign-extended.

MOTOROLA

JMP	Jump (M68000 Family)	JMP
Operation:	Destination Address \rightarrow PC	

Assembler	
Syntax:	JMP < ea >

Unsized

Attributes:

Description: Program execution continues at the effective address specified by the instruction. The addressing mode for the effective address must be a control addressing mode.

Condition Codes:

Not affected.

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0		0	0	4		4	0	4	4	EFFECTIVE ADDRESS					
0	· ·	0	0				0				MODE		R	EGISTE	R

Instruction Field:

Effective Address field—Specifies the address of the next instruction. Only control addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	-	-	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	-	-
(An) +	-	-			
– (An)	-	-			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011

MC68020, MC6803	0, and N	1C68040 only			
(bd,An,Xn)*	110	reg. number:An	(bd,PC,Xn)*	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

*Can be used with CPU32

4-108

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

LEA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

Integer Instructions

LEA	Load Effective Address (M68000 Family)
Operation:	$<$ ea $> \rightarrow$ An
Assembler Syntax:	LEA < ea > ,An
Attributes:	Size = (Long)

Description: Loads the effective address into the specified address register. All 32 bits of the address register are affected by this instruction.

Condition Codes:

Not affected.

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	0	0	F	REGISTER		1	1 1	1		EF	FECTIVE	ADDRE		
		Ů	Ŭ				· ·		· ·	MODE		R	EGISTE	R	

Instruction Fields:

Register field—Specifies the address register to be updated with the effective address.

Effective Address field-Specifies the address to be loaded into the address register. Only control addressing modes can be used as listed in the following tables

Addressing Mode	Mode	Register	Addressing Mode	Mode	Registe
Dn	-	-	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	-	-
(An) +	-	-			
– (An)	-	-			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011

MC68020,	MC68030,	and	MC68040	only

(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)*	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

*Can be used with CPU32.

Integer Instructions

JSR

JSR Jump to Subroutine (M68000 Family)

JSR < ea >

SP – 4 \rightarrow Sp; PC \rightarrow (SP); Destination Address \rightarrow PC

Operation: Assembler Syntax:

Unsized

Attributes

Description: Pushes the long-word address of the instruction immediately following the JSR instruction onto the system stack. Program execution then continues at the address specified in the instruction.

Condition Codes:

Not affected.

Instruction Format:



Instruction Field:

Effective Address field—Specifies the address of the next instruction. Only control addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	-	-	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	-	-
(An) +	-	-			
– (An)	-	-			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011

MC68020, MC68030, and MC68040 only

(bc	l,An,Xn)*	110	reg. number:An		(bd,PC,Xn)*	111	011				
([bd,	An,Xn],od)	110	reg. number:An		([bd,PC,Xn],od)	111	011				
([bd,	An],Xn,od)	110	reg. number:An		([bd,PC],Xn,od)	111	011				
*Can be	*Can be used with CPU32.										

4-109

Integer Instructions

LINK	Link and Allocate (M68000 Family)
Operation:	$SP-4 \rightarrow SP; An \rightarrow (SP); SP \rightarrow An; SP + d_n \rightarrow SP$
Assembler Syntax:	LINK An, # < displacement >
Attributes:	Size = (Word, Long*)
	*MC68020, MC68030, MC68040 and CPU32 only.
loads the	ushes the contents of the specified address register onto the stack. Then updated stack pointer into the address register. Finally, adds the int value to the stack pointer. For word-size operation, the displacement is

the sign-extended word following the operation word. For long size operation, the displacement is the long word following the operation word. For long size operation, the displacement is the long word on the stack. The user should specify a negative displacement in order to allocate stack area.

Condition Codes:

Not affected.

Instruction Format:

WORD 15 14 13 12 11 0 1 0 0 1

Instruction Format:



LINK

Link and Allocate (M68000 Family)

LINK

Instruction Fields:

Register field—Specifies the address register for the link.

Displacement field-Specifies the twos complement integer to be added to the stack pointer.

NOTE

LINK and UNLK can be used to maintain a linked list of local data and parameter areas on the stack for nested subroutine calls.

LSL, LSR



Destination Shifted By Count \rightarrow Destination Operation:

LSd Dx,Dy Assemble Syntax:

LSd # < data > ,Dy LSd < ea > where d is direction, L or R Attributes:

Size = (Byte, Word, Long)

Description: Shifts the bits of the operand in the direction specified (L or R). The carry bit receives the last bit shifted out of the operand. The shift count for the shifting of a register is specified in two different ways:

 Immediate—The shift count (1 – 8) is specified in the instruction.

2. Register-The shift count is the value in the data register specified in the instruction modulo 64

The size of the operation for register destinations may be specified as byte, word, or long. The contents of memory, < ea >, can be shifted one bit only, and the operand size is restricted to a word.

The LSL instruction shifts the operand to the left the number of positions specified as the shift count. Bits shifted out of the high-order bit go to both the carry and the extend bits; zeros are shifted into the low-order bit



The LSR instruction shifts the operand to the right the number of positions specified as the shift count. Bits shifted out of the low-order bit go to both the carry and the extend bits; zeros are shifted into the high-order bit.



4-112

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

LSL, LSR



M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-113

Integer Instructions

LSL, LSR

Integer Instructions

LSL, LSR

Logical Shift (M68000 Family)

Condition Codes:

X N Z V C

- Set according to the last bit shifted out of the operand; unaffected for a shift Х
- count of zero.
- N Set if the result is negative; cleared otherwise
 Z Set if the result is zero; cleared otherwise.
- Always cleared.
- C Set according to the last bit shifted out of the operand; cleared for a shift count of zero.

Instruction Format:

REGISTER SHIFTS



Instruction Fields:

- Count/Register field
 - If i/r = 0, this field contains the shift count. The values 1 7 represent shifts of 1 7; value of zero specifies a shift count of eight.
 - If i/r = 1, the data register specified in this field contains the shift count (modulo 64)
- dr field—Specifies the direction of the shift. 0 Shift right 1 Shift left

Size field-Specifies the size of the operation.

- 00 Byte operation 01 Word operation
- 10 Long operation i/r field If i/r = 0, specifies immediate shift count.
- If i/r = 1, specifies register shift count

Register field-Specifies a data register to be shifted.





Instruction Fields:

dr field—Specifies the direction of the shift. 0 — Shift right 1 — Shift left

Effective Address field—Specifies the operand to be shifted. Only memory alterable addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	-	-	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	-	-
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	_	-


MC68020, MC68030, and MC68040 only

(bd,An,Xn)*	110	reg. number:An	(bd,PC,Xn)*	-	-
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	-	-
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	-	-
an be used with CF	PU32.				

LSL, LSR

Logical Shift (M68000 Family)

MEMORY SHIFTS

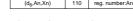

LSL, LSR



MOVE	Move Data from Source to Destination (M68000 Family)	MOVE
Operation:	Source \rightarrow Destination	
Assembler Syntax:	MOVE < ea > , < ea >	
Attributes:	Size = (Byte, Word, Long)	
	es the data at the source to the destination location and se ng to the data. The size of the operation may be specified tion Codes:	

- X Not affected. N Set if the result is negative; cleared otherwise. Z Set if the result is zero; cleared otherwise.
- V Always cleared.
 C Always cleared.

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0		SI	70			DESTI	NATION					SOU	RCE		
0	0	314	26	R	EGISTE	R	1	MODE			MODE		R	EGISTEI	R

Instruction Fields:

Size field—Specifies the size of the operand to be moved.

- 01 Byte operation 11 Word operation 10 Long operation

Register

000

001

MOVE Move Data from Source to Destination (M68000 Family)

MOVE

Destination Effective Address field—Specifies the destination location. Only data alterable addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register		Addressing Mode	Mode
Dn	000	reg. number:Dn		(xxx).W	111
An	-	-		(xxx).L	111
(An)	010	reg. number:An	1	# <data></data>	-
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An		(d ₁₆ ,PC)	-
(d _e .An.Xn)	110	rea. number:An	1	(d _e .PC.Xn)	_

MC68020. MC68030. and MC68040 only (bd,An,Xn)* 110 re ([bd,An,Xn],od) 110 re ([bd,An,Xn],od) 110 re

*Can be used with CPU32.

eg. number:An	(bd,PC,Xn)*	-	-
eg. number:An	([bd,PC,Xn],od)	-	-
eg. number:An	([bd,PC],Xn,od)	-	-

(d₈,PC,Xn)

4-116

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOVE

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-117

Integer Instructions

Integer Instructions

MOVE Move Data from Source to Destination (M68000 Family)

Source Effective Address field-Specifies the source operand. All addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register		Addressing Mode	Mode	Register
Dn	000	reg. number:Dn		(xxx).W	111	000
An	001	reg. number:An	1	(xxx).L	111	001
(An)	010	reg. number:An		# <data></data>	111	100
(An) +	011	reg. number:An				
– (An)	100	reg. number:An	1			
(d ₁₆ ,An)	101	reg. number:An	1	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	1	(d ₈ ,PC,Xn)	111	011

MC68020, MC68030, and MC68040 only

(bd,An,Xn)**	110	reg. number:An	(bd,PC,Xn)**	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

*For byte size operation, address register direct is not allowed. **Can be used with CPU32.

NOTE

Most assemblers use MOVEA when the destination is an address register

MOVEQ can be used to move an immediate 8-bit value to a data register.

MOVEA	Move Address (M68000 Family)	MOVEA
Operation:	Source \rightarrow Destination	
Assembler Syntax:	MOVEA < ea > ,An	
Attributes:	Size = (Word, Long)	
	es the contents of the source to the destination addres ion is specified as word or long. Word-size source of	

extended to 32-bit quantities. Condition Codes:

Not affected.

Instruction Format:

1	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	0 0 SIZE	DESTINATION	0			SOURCE										
1			R	EGISTE	R		0			MODE		R	EGISTE	R		

Instruction Fields:

Size field—Specifies the size of the operand to be moved. 11 — Word operation; the source operand is sign-extended to a long operand and all 32 bits are loaded into the address register.

10 — Long operation.

Destination Register field—Specifies the destination address register.

MOVEA

Move Address (M68000 Family)



Effective Address field—Specifies the location of the source operand. All addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register]	Addressing Mode	Mode	Registe
Dn	000	reg. number:Dn	1	(xxx).W	111	000
An	001	reg. number:An	1	(xxx).L	111	001
(An)	010	reg. number:An	1	# <data></data>	111	100
(An) +	011	reg. number:An	1			
– (An)	100	reg. number:An	1			
(d ₁₆ ,An)	101	reg. number:An	1	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	1	(d ₈ ,PC,Xn)	111	011

MC68020, MC68030, and MC68040 only

(bd,An,Xn)*	110	reg. number:An		(bd,PC,Xn)*	111	011
([bd,An,Xn],od)	110	reg. number:An		([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An		([bd,PC],Xn,od)	111	011

*Can be used with CPU32.

MOVE from CCR

R Move from the fr Condition Code Register (MC68010, MC68020, MC68030, MC68040, CPU32)

Operation: $\mathsf{CCR} \to \mathsf{Destination}$

Assembler MOVE CCR. < ea > Syntax:

Attributes: Size = (Word)

Description: Moves the condition code bits (zero-extended to word size) to the destination location. The operand size is a word. Unimplemented bits are read as zeros

Condition Codes

Not affected.

Instruction Format:

	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
- 1											EFFECTIVE		E ADDRE	SS		
	0	1	0	0	0	0	1	0	1	1		MODE		R	EGISTE	R



M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-121

Integer Instructions

MOVE

to CCR

Integer Instructions

MOVE from CCR



R Move from the fr Condition Code Register (MC68010, MC68020, MC68030, MC68040, CPU32)

Instruction Field:

Effective Address field—Specifies the destination location. Only data alterable addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register	
Dn	000	reg. number:Dn	(xxx).W	111	000	
An	-	-	(xxx).L	111	001	
(An)	010	reg. number:An	# <data></data>	-	-	
(An) +	011	reg. number:An				
– (An)	100	reg. number:An				
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	-	
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	-	

MC68020 MC68030 and MC68040 only

	o, ana n					
(bd,An,Xn)*	110	reg. number:An		(bd,PC,Xn)*	-	-
([bd,An,Xn],od)	110	reg. number:An		([bd,PC,Xn],od)	-	-
([bd,An],Xn,od)	110	reg. number:An		([bd,PC],Xn,od)	-	-

*Can be used with CPU32.

NOTE

MOVE from CCR is a word operation. ANDI, ORI, and EORI to CCR are byte operations.



Operation:

Move to Condition Code Register (M68000 Family)


Source \rightarrow CCR

Assembler Syntax: MOVE < ea > .CCR

Attributes: Size = (Word)

Description: Moves the low-order byte of the source operand to the condition code register. The upper byte of the source operand is ignored; the upper byte of the status register is not altered.

Condition Codes:

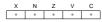

X — Set to the value of bit 4 of the source operand. N — Set to the value of bit 3 of the source operand.

- V = Set to the value of bit 2 of the source operand.V = Set to the value of bit 2 of the source operand.C = Set to the value of bit 1 of the source operand.C = Set to the value of bit 0 of the source operand.

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	0	0	0	1	0	0	1	1	EFFECTIVE ADDRESS					
											MODE		К	EGISTE	:R

Integer Instructions

MOVE to CCR

Move to Condition Code Register (M68000 Family)



Instruction Field:

Effective Address field-Specifies the location of the source operand. Only data addressing modes can be used as listed in the following tables

Addressing Mode	Mode	Register	Addressing Mode	Mode	Re
Dn	000	reg. number:Dn	(xxx).W	111	0
An	-	-	(xxx).L	111	00
(An)	010	reg. number:An	# <data></data>	111	10
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	01
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	01

MC68020, MC68030, and MC68040 only

(bd,An,Xn)*	110	reg. number:An	(bd,PC,Xn)*	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

*Can be used with CPU32.

NOTE

MOVE to CCR is a word operation. ANDI, ORI, and EORI to CCR are byte operations

Operation:

Syntax:

Move from the Status Register (MC68000, MC68008)

SR → Destination

Assembler MOVE SR, < ea >

Attributes: Size = (Word)

Description: Moves the data in the status register to the destination location. The destination is word length. Unimplemented bits are read as zeros.

Condition Codes:

Not affected

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0		0	0	0		0	0		4		EFI	FECTIV	E ADDRE	SS	
0	'				0	0	0				MODE		R	EGISTE	R

Instruction Fields:

Effective Address field-Specifies the destination location. Only data alterable addressing modes can be used as listed in the following table:

Addressing Mode Mode Register Addressing Mode Mode

Dn	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	-	-
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	-

NOTE

Use the MOVE from CCR instruction to access only the condition codes. Memory destination is read before it is written to

4-124

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-125

Integer Instructions

MOVE16

Integer Instructions

MOVE16	Move 16-Byte Block (MC68040)	MOVE16
Operation:	Source Block \rightarrow Destination Block	
Assembler Syntax:	MOVE16 (Ax) + ,(Ay) + MOVE16 (xxx) L,(An) MOVE16 (xxx).L,(An) + MOVE16 (An),(xxx).L MOVE16 (An) + ,(xxx).L	

Attributes: Size = (Line)

Description: Moves the source line to the destination line. The lines are aligned to 16-byte boundaries. Applications for this instruction include coprocessor communications, memory initialization, and fast block copy operations.

MOVE16 has two formats. The postincrement format uses the postincrement address-ing mode for both source and destination; whereas, the absolute format specifies an absolute long address for either the source or destination.

Line transfers are performed using burst reads and writes, which begin with the long word pointed to by the effective address of the source and destination, respectively. An address register used in the postincrement addressing mode is incremented by 16 after the transfer.

Example: MOVE16 (A0) + \$FE802 A0 = \$1400F

The line at address \$14000 is read into a temporary holding register by a burst read transfer starting with long-word \$14000. Address values in A0 of \$14000 – \$1400F cause the same line to be read, starting at different long words. The line is then written to the line at address \$FE800 beginning with long-word \$FE800 after the instruction A0 contains \$1401E contains \$1401F.

Source line at \$14000

	\$14000	\$14004	\$14008	\$1400C
ſ	LONG WORD 0	LONG WORD 1	LONG WORD 2	LONG WORD 3

Destination line at \$FE8000:

 \$FE800
 \$FE804
 \$FE808
 \$FE80C

 LONG WORD 0
 LONG WORD 1
 LONG WORD 2
 LONG WORD 3

MOVE16

Move 16-Byte Block (MC68040)

```
Condition Codes:
```

Not affected

Instruction Format:

POSTINCREMENT SOURCE AND DESTINATION

1	5	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1		1	1	1	0	1	1	0	0	0	1	0	0	RE	GISTER	Ax
1		RE	GISTER	t Ay	0	0	0	0	0	0	0	0	0	0	0	0

Instruction Fields: Register Ax-Specifies a source address register for the postincrement addressing mode

Register Ay-Specifies a destination address register for the postincrement addressing mode

Instruction Format:

Absolute Long Address Source or Destination

 15
 14
 13
 12
 11
 10
 9
 8
 7
 6
 5
 4
 3

 1
 1
 1
 1
 0
 1
 1
 0
 0
 0
 0
 OPMODE
 REGISTER A

Instruction Fields:

Opmode field—Specifies the addressing modes used for source and destination

Opmode	Source	Destinati on	Assembler Syntax
0.0	(Ay) +	(xxx).L	MOVE16 (Ay) + ,(xxx).L
0 1	(xxx).L	(Ay) +	MOVE16 (xxx).L,(Ay) +
10	(Ay)	(xxx).L	MOVE16 (Ay),(xxx).L
11	(xxx).L	(Ay)	MOVE16 (xxx).L,(Ay)

Register Ay-Specifies an address register for the indirect and postincrement addressing mode used as a source or destination

32-Bit Address field—Specifies the absolute address used as a source or destination.

from SR

Register

MOVEM Move Multiple Registers (M68000 Family) Operation: $\text{Registers} \rightarrow \text{Destination; Source} \rightarrow \text{Registers}$

Assembler	MOVEM < list > , < ea >
Syntax:	MOVEM < ea > , < list >
Attributes:	Size = (Word, Long)

Description: Moves the contents of selected registers to or from consecutive memory locations starting at the location specified by the effective address. A register is selected if the bit in the mask field corresponding to that register is set. The instruction size determines whether 16 or 32 bits of each register are transferred. In the case of a word transfer to either address or data registers, each word is sign-extended to 32 bits, and the resulting long word is loaded into the associated register.

Selecting the addressing mode also selects the mode of operation of the MOVEM instruction, and only the control modes, the predecrement mode, and the postincer-ment mode are valid. If the effective address is specified by one of the control modes, the registers are transferred starting at the specified address, and the address is incre-mented by the operand length (2 or 4) following each transfer. The order of the regis-ters is from D0 to D7, then from A0 to A7.

If the effective address is specified by the predecrement mode, only a register-to-memory operation is allowed. The registers are stored starting at the specified address minus the operand length (2 or 4), and the address is decremented by the operand length following each transfer. The order of storing is from A7 to A0, then from D7 to D0. When the instruction has completed, the decremented address register contains the address of the last operand stored. For the MC68020, MC68030, MC68040, and CPU32, if the addressing register is also moved to memory, the value written is the ini-tial register value decremented by the size of the operation. The MC68000 and MC68010 write the initial register value (not decremented).

If the effective address is specified by the postincrement mode, only a memory-to-reg-ister operation is allowed. The registers are loaded starting at the specified address; the address is incremented by the operand length (2 or 4) following each transfer. The order of loading is the same as that of control mode addressing. When the instruction has completed, the incremented address register contains the address of the last oper-and loaded plus the operand length. If the addressing register is also loaded from memory, the memory value is ignored and the register is written with the postincre-mented effective address.

4-128

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOVEM

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-129

Integer Instructions

MOVEP

Integer Instructions

MOVEM

Move Multiple Registers (M68000 Family)

MOVEM

For memory-to-register transfers, only control addressing modes or the postincrement addressing mode can be used as listed in the following tables:

Addressing Mode	ing Mode Mode Register		Addressing Mode	Mode	Register		
Dn	-	-	(xxx).W	111	000		
An	-	-	(xxx).L	111	001		
(An)	010	reg. number:An	# <data></data>	-	-		
(An) +	011	reg. number:An					
– (An)	-	-					
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010		
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011		

MC68020. MC68030, and MC68040 only

(bd,An,Xn)*	110	reg. number:An		(bd,PC,Xn)*	111	011	
([bd,An,Xn],od)	110	reg. number:An		([bd,PC,Xn],od)	111	011	
([bd,An],Xn,od)	110	reg. number:An		([bd,PC],Xn,od)	111	011	
*Can be used with CF	*Can be used with CPU32.						

Register List Mask field—Specifies the registers to be transferred. The low-order bit corresponds to the first register to be transferred; the high-order bit corresponds to the last register to be transferred. Thus, for both control modes and postincrement mode addresses, the mask correspondence is:

 15
 14
 13
 12
 11
 10
 9
 8
 7
 6
 5
 4
 3
 2
 1
 0

 A7
 A6
 A5
 A4
 A3
 A2
 A1
 A0
 D7
 D6
 D5
 D4
 D3
 D2
 D1
 D0
 For the predecrement mode addresses, the mask correspondence is reversed

15															
D0	D1	D2	D3	D4	D5	D6	D7	A0	A1	A2	A3	A4	A5	A6	A7

Move Peripheral Data (M68000 Family) Source \rightarrow Destination Operation: MOVEP Dx,(d<u>16</u>,Ay) MOVEP (d<u>16</u>,Ay),Dx Assemble Syntax: Attributes: Size = (Word, Long) Description: Moves data between a data register and alternate bytes within the address space starting at the location specified and incrementing by two. The high-order byte

of the data register is transferred first, and the low-order byte is transferred last. The memory address is specified in the address register indirect plus 16-bit displacement addressing mode. This instruction was originally designed for interfacing 8-bit peripherals on a 16-bit data bus, such as the MC68000 bus. Although supported by the MC68020, MC68030, and MC68040, this instruction is not useful for those processors with an external 32-bit bus.

Example: Long transfer to/from an even address

Byte Organization in Register

 31
 24
 23
 16
 15
 8
 7
 0

 HIGH ORDER
 MID UPPER
 MID LOWER
 LOW ORDER
 Byte Organization in

16-Bit Memory (Low Address at Top)

15	8	7	0
HIGH ORD	DER		
MID UPP	ER		
MID LOW	ER		
LOW ORD	DER		

Integer Instructions

MOVEM Move Multiple Registers (M68000 Family)

Condition Codes

Not affected.

Instruction Format

MOVEM

13 12 EFFECTIVE ADDRESS 1 SIZE 0 1 0 0 1 dr 0 0 MODE REGISTER

Instruction Fields:

dr field-Specifies the direction of the transfer.

0 — Register to memory.
 1 — Memory to register.

Size field—Specifies the size of the registers being transferred.

0 — Word transfer 1 — Long transfer

Effective Address field—Specifies the memory address for the operation. For register-to-memory transfers, only control alterable addressing modes or the predecrement addressing mode can be used as listed in the following tables:

Addressing Mode	Mode	Register	Addressing
Dn	-	-	(xxx).W
An	-	-	(xxx).L
(An)	010	reg. number:An	# <data:< td=""></data:<>
(An) +	-	-	
– (An)	100	reg. number:An	
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,X

r	Addressing Mode	Mode	Register
	(xxx).W	111	000
	(xxx).L	111	001
:An	# <data></data>	-	-
:An			
:An	(d ₁₆ ,PC)	-	-
:An	(d ₈ ,PC,Xn)	-	-




er:An	(bd,PC,Xn)*	-	-
er:An	([bd,PC,Xn],od)	-	-
er:An	([bd,PC],Xn,od)	-	-

([bd,An],Xn,od) 110 reg. number Can be used with CPU32

MOVEP

4-131

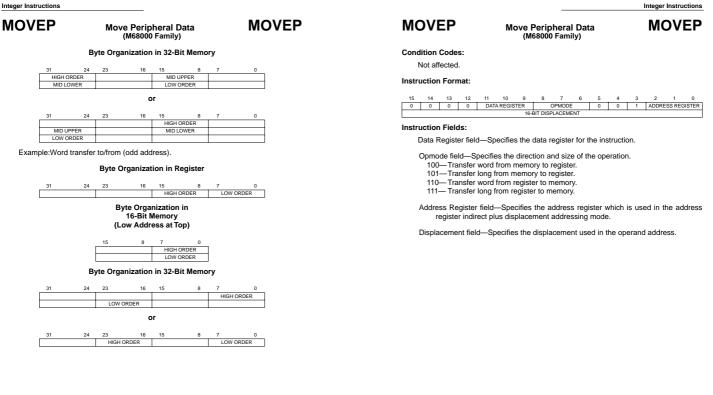

4-132


M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-133

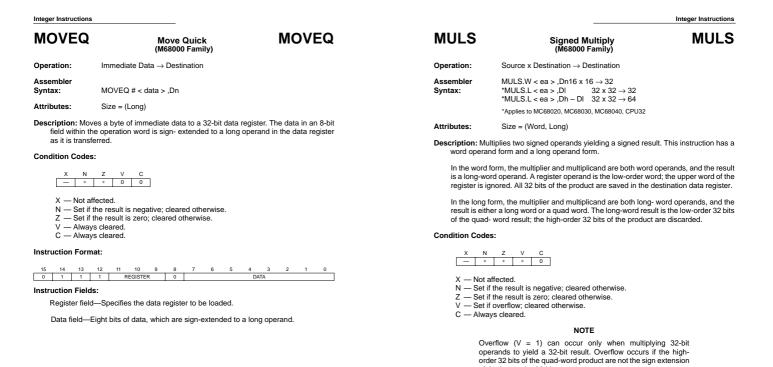

4-134

of the low- order 32 bits

MULS

Signed Multiply (M68000 Family)

Instruction Format:

							WC	RD							
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	0	0	R	REGISTE	R	1	1	1		EFI	ECTIVE	ADDRE	SS	

Instruction Fields:

Register field—Specifies a data register as the destination.

Effective Address field—Specifies the source operand. Only data alterable addressing modes can be used as listed in the following tables:

Addressing Mode	Addressing Mode Mode Regist		Addressing Mode	Mode	Register	
Dn	000	reg. number:Dn	(xxx).W	111	000	
An	-	-	(xxx).L	111	001	
(An)	010	reg. number:An	# <data></data>	111	100	
(An) +	011	reg. number:An				
– (An)	100	reg. number:An				
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010	
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011	

MC68020, MC68030, and MC68040 only

(bd,An,Xn)*	110	reg. number:An	(bd,PC,Xn)*	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011
*Can be used with CF	PU32.				

MULS

Signed Multiply (M68000 Family)

Instruction Format:

LONG

	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
ſ	0	1	0	0	1	1	0	0	0	0	EFFECTI				ESS EGISTE	R
ſ	0	RE	GISTER	DI	1	SIZE	0	0	0	0	0 0 0			RE	GISTER	Dh

Instruction Fields:

Effective Address field-Specifies the source operand. Only data addressing modes can be used as listed in the following tables:

Addressing M	lode	Mode	Register		Addressing Mode	Mode	Register
Dn		000	reg. number:Dn		(xxx).W	111	000
An		-	-	1	(xxx).L	111	001
(An)		010	reg. number:An	1	# <data></data>	111	100
(An) +		011	reg. number:An	1			
– (An)		100	reg. number:An				
(d ₁₆ ,An)		101	reg. number:An	1	(d ₁₆ ,PC)	111	010
(d _e .An.Xn		110	rea. number:An		(d _e .PC.Xn)	111	011

MC68020, MC68030, and MC68040 only 110 reg. nu (bd,An,Xn)* ([bd,An,Xn],od) 110 reg. nur ([bd,An],Xn,od) 110 reg. nur

mber:An	(bd,PC,Xn)*	111	011
mber:An	([bd,PC,Xn],od)	111	011
imber:An	([bd,PC],Xn,od)	111	011

Register DI field—Specifies a data register for the destination operand. The 32-bit multiplicand comes from this register, and the low-order 32 bits of the product are loaded into this register.

- Size field-Selects a 32- or 64-bit product.
- 0 32-bit product to be returned to register DI.

1 — 64-bit product to be returned to Dh – Dl.

*Can be used with CPU32.

Register Dh field—If size is one, specifies the data register into which the high-order 32 bits of the product are loaded. If Dh = Dl and size is one, the results of the operation are undefined. Otherwise, this field is unused.

4-136

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MULS

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-137

Integer Instructions

MULU

Integer Instructions MULU MULU Unsigned Multiply (M68000 Family) Operation: Source x Destination \rightarrow Destination $\begin{array}{l} MULU.W < ea > , Dn16 x \ 16 \rightarrow 32 \\ ^{*}MULU.L < ea > , Dl \qquad 32 x \ 32 \rightarrow 32 \\ ^{*}MULU.L < ea > , Dh - Dl \qquad 32 x \ 32 \rightarrow 64 \end{array}$ Assemble Syntax: *Applies to MC68020, MC68030, MC68040, CPU32 only Size = (Word, Long)

Attributes:

Description: Multiplies two unsigned operands yielding an unsigned result. This instruction has a word operand form and a long operand form.

In the word form, the multiplier and multiplicand are both word operands, and the result is a long-word operand. A register operand is the low-order word; the upper word of the register is ignored. All 32 bits of the product are saved in the destination data register.

In the long form, the multiplier and multiplicand are both long- word operands, and the result is either a long word or a quad word. The long-word result is the low-order 32 bits of the quad- word result; the high-order 32 bits of the product are discarded.

Condition Codes:

X N Z V C

- X Not affected.
- N Set if the result is negative; cleared otherwiseZ Set if the result is zero; cleared otherwise.V Set if overflow; cleared otherwise.
- C Always cleared.

NOTE

Overflow (V = 1) can occur only when multiplying 32-bit operands to yield a 32-bit result. Overflow occurs if any of the high-order 32 bits of the quad-word product are not equal to zero

MULU

Instruction Format:

Unsigned Multiply (M68000 Family)

WORD



Instruction Fields:

Register field—Specifies a data register as the destination.

Effective Address field-Specifies the source operand. Only data addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	111	100
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011

MC68020. MC68030. and MC68040 only

(bd,An,Xn)*	110	reg. number:An	(bd,PC,Xn)*	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011
Can be used with CF	PU32.				

MULU

Unsigned Multiply (M68000 Family)

MULU

MOTOROLA

Instruction Format:

LONG 15 14 13 12 11 10 8 6 9 0 EFFECTIVE ADDRESS 0 1 0 0 1 | 1 | 0 0 0 0 MODE REGISTER D REGISTER D 0 SIZE 0 0 0 0 0 0

Instruction Fields:

Effective Address field-Specifies the source operand. Only data addressing modes can be used as listed in the following tables

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	111	100
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011

MC68020, MC6803	0, and N	IC68040 only				
(bd,An,Xn)*	110	reg. number:An		(bd,PC,Xn)*	111	011
([bd,An,Xn],od)	110	reg. number:An	1	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	1	([bd,PC],Xn,od)	111	011

*Can be used with CPU32.

Register DI field—Specifies a data register for the destination operand. The 32-bit multiplicand comes from this register, and the low-order 32 bits of the product are loaded into this register.

Size field-Selects a 32- or 64-bit product.

0 - 32-bit product to be returned to register DI.

1 — 64-bit product to be returned to Dh - Dl.

Register Dh field—If size is one, specifies the data register into which the high-order 32 bits of the product are loaded. If Dh = Dl and size is one, the results of the operation are undefined. Otherwise, this field is unused.

4-140

Integer Instructions

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

Operation:

Syntax:

Assembler

NBCD < ea >

Attributes: Size = (Byte)

Description: Subtracts the destination operand and the extend bit from zero. The operation is performed using binary-coded decimal arithmetic. The packed binary-coded decimal result is saved in the destination location. This instruction produces the tens complement of the destination if the extend bit is zero or the nines complement if the extend bit is one. This is a byte operation only.

Condition Codes:

X N Z V C * U * U *

X –

- Set the same as the carry bit.

N — Undefined. Z — Cleared if the result is nonzero; unchanged otherwise. V — Undefined.

 $0-Destination_{10}-X \rightarrow Destination$

C — Set if a decimal borrow occurs; cleared otherwise.

NOTE

Normally the Z condition code bit is set via programming before the start of the operation. This allows successful tests for zero results upon completion of multiple-precision operations.

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-141

Integer Instructions

IBCD	Negat	e Decir (M680	nal wi 00 Fam		tend	I		ľ	IB	CD
struction Format:										
15 14 13 12	11 10	9 8	7	6	5	4	3	2	1	0
0 1 0 0	1 0	0 0	0	0		EFF MODE	ECTIVE	ADDRE R	ESS EGISTE	R
struction Fields: Effective Addres	s field—Sp nodes can b								a alte	erable

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	-	-
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	_

MC68030 and MC68040 only мс

11000020, 1100000	o, and n	1000040 01119			
(bd,An,Xn)*	110	reg. number:An	(bd,PC,Xn)*	-	-
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	-	-
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	-	-

*Can be used with CPU32.

NEG NEG Negate (M68000 Family) Operation: $0 - Destination \rightarrow Destination$ Assemble NEG < ea > Syntax: Size = (Byte, Word, Long) Attributes: Description: Subtracts the destination operand from zero and stores the result in the destination location. The size of the operation is specified as byte, word, or long.

Condition Codes:

N - Set if the result is negative; cleared otherwise.

- V Set if the result is zero; cleared otherwise.
 V Set if an overflow occurs; cleared otherwise.
 C Cleared if the result is zero; set otherwise.

Instruction Format:



4-142

NBCD Negate Decimal with Extend (M68000 Family)

NEG

Negate (M68000 Family)

Instruction Fields:

- Size field—Specifies the size of the operation.

 - 00 Byte operation 01 Word operation 10 Long operation

Effective Address field—Specifies the destination operand. Only data alterable addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	-	-
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	_

		o, and i	1000040 Only			
[(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)*	-	-
ſ	([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	-	-
	([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	-	-
	Con be used with CE					

Can be used with CPU32

NEGX

Negate with Extend (M68000 Family)

Operation: $0-\text{Destination}-X \rightarrow \text{Destination}$


Assembler Syntax:

NEGX < ea >

Attributes: Size = (Byte, Word, Long)

Description: Subtracts the destination operand and the extend bit from zero. Stores the result in the destination location. The size of the operation is specified as byte, word, or long.

Condition Codes:

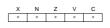

Х - Set the same as the carry bit.

- N Set if the result is negative; cleared otherwise.
- V Set if an eresult is negative, cleared otherwise.
 V Set if an overflow occurs; cleared otherwise.
 C Set if a borrow occurs; cleared otherwise.

NOTE

Normally the Z condition code bit is set via programming before the start of the operation. This allows successful tests for zero results upon completion of multiple-precision operations.

4-144

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

REGISTER

NEG

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-145

Integer Instructions

Integer Instructions NECY Negata with Extend

NE	G)	(N		e wi			1			١	NE(GX
Instru	uctior	n Forr	nat:												
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	0	0	0	0	0	0	er	75		EF	FECTIVE	ADDRE	SS	

0

1 Instruction Fields

0

Size field-Specifies the size of the operation.

00 — Byte operation 01 — Word operation

10 — Long operation

0 0 0 0 0

Effective Address field-Specifies the destination operand. Only data alterable addressing modes can be used as listed in the following tables:

SIZE

MODE

Addressing Mode	Mode	Register	Addressing Mode	Mode	Regist
Dn	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	-	-
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	_

MC68020, MC68030, and MC68040 only


(bd,An,Xn)*	110	reg. number:An		(bd,PC,Xn)*	-	-
([bd,An,Xn],od)	110	reg. number:An		([bd,PC,Xn],od)	-	-
([bd,An],Xn,od)	110	reg. number:An	1	([bd,PC],Xn,od)	-	-
*Can be used with CF	PU32.					

NOP NOP No Operation (M68000 Family) Operation: None Assemble Syntax: NOP Attributes: Unsized Description: Performs no operation. The processor state, other than the program counter, is unaffected. Execution continues with the instruction following the NOP instruction. The NOP instruction does not begin execution until all pending bus cycles have completed. This synchronizes the pipeline and prevents instruction overlap.

Condition Codes:

Not affected.

Instruction Format:

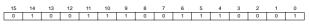

Destination \rightarrow Destination	
DT < ea >	
ze = (Byte, Word, Long)	
2	OT < ea > ze = (Byte, Word, Long) is the ones complement of the destination op nation location. The size of the operation is sp

Condition Codes:

Ν Z V C * 0 0 Х - * -

- Not affected.
- X Not affected. N Set if the result is negative; cleared otherwise.
- Z Set if the result is zero; cleared otherwise. V Always cleared.
- C Always cleared.

Instruction Format:

_	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	0	4	0	0	0			0	SL	76		EFF	ECTIVE	ADDRE	SS	
	0		0	0	0			0	31	2.E		MODE		R	EGISTE	R

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL



NOT

Register

000 001

NOT

Logical Complement (M68000 Family)

Instruction Fields:

Size field—Specifies the size of the operation.

00— Byte operation 01— Word operation 10— Long operation

Effective Address field—Specifies the destination operand. Only data alterable addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register	Addressing M
Dn	000	reg. number:Dn	(xxx).W
An	-	_	(xxx).L
(An)	010	reg. number:An	# <data></data>
(An) +	011	reg. number:An	
- (An)	100	reg. number:An	
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)

MC68020, MC68030, and MC68040 only (bd,An,Xn)* 110 ([bd,An,Xn],od) 110 ([bd,An],Xn,od) 110

_				
	reg. number:An	(bd,PC,Xn)*	-	—
	reg. number:An	([bd,PC,Xn],od)	-	-
	reg. number:An	([bd,PC],Xn,od)	-	_

*Can be used with CPU32.

4-149

Integer Instructions

4-148

OR	Inclusive-OR Logical (M68000 Family)	OR
Operation:	Source V Destination \rightarrow Destination	
Assembler Syntax:	OR < ea > ,Dn OR Dn, < ea >	
Attributes:	Size = (Byte, Word, Long)	

Description: Performs an inclusive-OR operation on the source operand and the destination operand and stores the result in the destination location. The size of the operation is specified as byte, word, or long. The contents of an address register may not be used as an operand.

Condition Codes:

X N Z V C

- X Not affected. N Set if the most significant bit of the result is set; cleared otherwise. Z — Set if the result is zero; cleared otherwise. V — Always cleared.
- C Always cleared.

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
					FOIOTE			OPMOD	-		EFI	FECTIVE	ADDRE	SS	
1	0	0	0	"	CEGISTE	n,	I '	OPMODI	-		MODE		R	EGISTE	R

Instruction Fields:

4-150

Register field—Specifies any of the eight data registers. Opmode field

Byte	Word	Long	Operation
000	001	010	$< ea > V Dn \rightarrow Dn$
100	101	110	Dn V < ea > \rightarrow < ea >

OR

MOTOROLA

Integer Instructions

OR

Effective Address field—If the location specified is a source operand, only data addressing modes can be used as listed in the following tables:

Inclusive-OR Logical (M68000 Family)

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

Addressing Mode	Mode	Register	Addressing Mode	Mode	Regist
Dn	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	111	100
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011

MC68020, MC68030, and MC68040 only

(bd,An,Xn)*	110	reg. number:An		(bd,PC,Xn)*	111	011				
([bd,An,Xn],od)	110	reg. number:An		([bd,PC,Xn],od)	111	011				
([bd,An],Xn,od)	110	reg. number:An		([bd,PC],Xn,od)	111	011				
*Can be used with CPU32.										

MOTOROLA

OR

Inclusive-OR Logical	
(M68000 Family)	

If the location specified is a destination operand, only memory alterable addressing modes can be used as listed in the following tables:

Addressing Mode Mode Registe		Register	Addressing Mode	Mode	Register	
Dn	-	-	(xxx).W	111	000	
An	-	-	(xxx).L	111	001	
(An)	010	reg. number:An	# <data></data>	-	-	
(An) +	011	reg. number:An				
– (An)	100	reg. number:An				
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	-	
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	-	

MC68020, MC68030, and MC68040 only

	.,					
(bd,An,Xn)*	110	reg. number:An	Γ	(bd,PC,Xn)*	-	-
([bd,An,Xn],od)	110	reg. number:An		([bd,PC,Xn],od)	-	-
([bd,An],Xn,od)	110	reg. number:An		([bd,PC],Xn,od)	-	-

*Can be used with CPU32.

NOTE

If the destination is a data register, it must be specified using the destination Dn mode, not the destination < ea > mode.

Most assemblers use ORI when the source is immediate data

ORI

ORI Inclusive-OR (M68000 Family)

Immediate Data V Destination \rightarrow Destination Operation:

Assembler Syntax:

ORI # < data > , < ea >

Size = (Byte, Word, Long) Attributes:

Description: Performs an inclusive-OR operation on the immediate data and the destination operand and stores the result in the destination location. The size of the operation is specified as byte, word, or long. The size of the immediate data matches the operation size.

Condition Codes:

X — Not affected. $\begin{array}{l} N & - \operatorname{Set} i \text{ the most significant bit of the result is set; cleared otherwise.} \\ Z & - \operatorname{Set} if the result is zero; cleared otherwise. \\ V & - Always cleared. \end{array}$

C — Always cleared.

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0				
0		0		0	0		0 0	0 0	0 0		0 0		ZE		EFI	FECTIVE	ADDRE	SS	
0	0	0				0			0	SIZE			MODE		R	EGISTE	R		
	16-BIT WORD DATA								8-BIT BYTE DATA										
	32-BIT LONG DATA																		

4-152

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

ORI

OR

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-153

Integer Instructions

Integer Instructions

ORI

Inclusive-OR (M68000 Family)

Instruction Fields:

Size field—Specifies the size of the operation. 00— Byte operation 01— Word operation

10— Long operation

Effective Address field—Specifies the destination operand. Only data alterable addressing modes can be used as listed in the following tables:

Addressing Mode	ddressing Mode Mode Register		Addressing Mode	Mode	Register	
Dn	000	reg. number:Dn	(xxx).W	111	000	
An	-	-	(xxx).L	111	001	
(An)	010	reg. number:An	# <data></data>	-	-	
(An) +	011	reg. number:An				
– (An)	100	reg. number:An				
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	-	
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	_	

MC68020, MC68030, and MC68040 only

(bd,An,Xn)*	110	reg. number:An	(bd,PC,Xn)*	-	-
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	-	-
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	-	-

*Can be used with CPU32.

Immediate field—Data immediately following the instruction. If size = 00, the data is the low-order byte of the immediate word. If size = 01, the data is the entire immediate word.

If size = 10, the data is the next two immediate words

ORI to CCR	Inclusive-OR Immediate to Condition Codes (M68000 Family)	ORI to CCR						
Operation:	Source V CCR \rightarrow CCR							
Assembler Syntax:	ORI # < data > ,CCR							
Attributes:	Size = (Byte)							
Description: Performs an inclusive-OR operation on the immediate operand and the condition codes and stores the result in the condition code register (low-order byte of the status register). All implemented bits of the condition code register are affected.								
Condition Codes	:							

х	Ν	z	V	С	
*		*		*	
X — 1	Set if I	bit 4 o	f imm	ediate	operand is one: unchai

X — Set if bit 4 of immediate operand is one; unchanged otherwise.
N — Set if bit 3 of immediate operand is one; unchanged otherwise.
Z — Set if bit 2 of immediate operand is one; unchanged otherwise.
V — Set if bit 1 of immediate operand is one; unchanged otherwise.

C — Set if bit 0 of immediate operand is one; unchanged otherwise.

Instruction Format:

15	5	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0		0	0	0	0	0	0	0	0	0	1	1	1	1	0	0
0		0	0	0	0	0	0	0	8-BIT BYTE DATA							

PACK PACK Pack (MC68020, MC68030, MC68040) Source (Unpacked BCD) + Adjustment \rightarrow Destination (Packed BCD) Operation: Assemble PACK - (Ax), - (Av),# < adjustment > Syntax: PACK Dx,Dy,# < adjustment > Attributes: Unsiz **Description:** Adjusts and packs the lower four bits of each of two bytes into a single byte. When both operands are data registers, the adjustment is added to the value contained in the source register. Bits 11 - 8 and 3 - 0 of the intermediate result are concatenated and placed in bits 7 - 0 of the destination register. The remainder of the destination register is unaffected. Source 15 14 13 12 11 10 9 8 7 6 5 x x x x a b c d x x x x x Add Adjustment Word: 15 16-BIT EXTENSION Resulting in: 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0 x' x' x' a' b' c' d' x' x' x' x' a' 0

Destination:
 15
 14
 13
 12
 11
 10
 9
 8
 7
 6
 5
 4
 3
 2
 1
 0

 u
 u
 u
 u
 u
 u
 u
 a'
 b'
 c'
 d'
 e'
 f'
 g'
 h'

When the predecrement addressing mode is specified, two bytes from the source are fetched and concatenated. The adjustment word is added to the concatenated bytes. Bits 3 - 0 of each byte are extracted. These eight bits are concatenated to form a new byte which is then written to the destination.

4-156

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

PACK

MOTOROLA

PACK

15

Source

Concatenated Word:

15 14 13 12 11 10 x x x x a b

Add Adjustment Word:

a'b'c'd'

15 14 13 12 11 10 9 1 0 0 0 REGISTER Dy/Ay

Destination

Condition Codes

Not affected

Instruction Format

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

Pack (MC68020, MC68030, MC68040)

c d

3 ∠ e' <u>f' g' h'</u>

6 X 5 x

х

16-BIT EXTENSION

4-157

Integer Instructions

Integer Instructions

PACK

Pack (MC68020, MC68030, MC68040)

Instruction Fields:

Register Dy/Ay field—Specifies the destination register. If R/M = 0, specifies a data register.

If R/M = 1, specifies an address register in the predecrement addressing mode.

R/M field—Specifies the operand addressing mode.
 0 — The operation is data register to data register.
 1 — The operation is memory to memory.

Register Dx/Ax field—Specifies the source register. If R/M = 0, specifies a data register.

If R/M = 1, specifies an address register in the predecrement addressing mode

Adjustment field—Immediate data word that is added to the source operand. This word is zero to pack ASCII or EBCDIC codes. Other values can be used for other codes.

PEA	Push Effective Address (M68000 Family)	PEA
Operation:	SP – 4 \rightarrow SP; < ea > \rightarrow (SP)	
Assembler Syntax:	PEA < ea >	
Attributes:	Size = (Long)	
	mputes the effective address and pushes it onto the stack. a long address.	The effective

Condition Codes:

Not affected.

Instruction Format:

0 1 0 0 1 0 0 0 0 0 0 0 1 EFFECTIVE ADDRESS MODE REGISTER	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
O I O I O O O I MODE REGISTER	0	1	0	0	1	0	0	0	0	1	EFFECTIVE ADDRESS					
	0		0	0		Ů	0	0	0			MODE		R	EGISTE	R

Instruction Field:

Effective Address field—Specifies the address to be pushed onto the stack. Only control addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register	
Dn	-	-	(xxx).W	111	000	
An — — (An) 010 reg. number:An		(xxx).L	111	001		
		reg. number:An	# <data></data>	-	-	
(An) +	-	_				
– (An)	-	-				
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010	
(d ₈ ,An,Xn) 110 reg. number:An		(d ₈ ,PC,Xn)	111	011		

MC68020, MC68030, and MC68040 only

(bd,An,Xn)* 110 reg. number:An (bd,PC,Xn)* 111 011											
([bd,An,Xn],od)	([bd,An,Xn],od) 110 reg. number:An ([bd,PC,Xn],od) 111 011										
([bd,An],Xn,od) 110 reg. number:An ([bd,PC],Xn,od) 111 011											
Concerned with ODI 100											

*Can be used with CPU32

Integer Instructions

4 3 2 1 0 x e f g h

5 4 3 2 1 0 0 0 R/M REGISTER Dx/Ax

PACK

0


ROL, RC	R Rotate (Without Extend (M68000 Family)	n ROL, ROR
Operation:	Destination Rotated By < count > \rightarrow D	Destination
Assembler Syntax:	ROd Dx,Dy ROd # < data > ,Dy ROd < ea > where	e d is direction, L or R
Attributes:	Size = (Byte, Word, Long)	

Description: Rotates the bits of the operand in the direction specified (L or R). The extend bit is not included in the rotation. The rotate count for the rotation of a register is specified in either of two ways:

- Immediate—The rotate count (1 8) is specified in the instruction.
- 2. Register-The rotate count is the value in the data register specified in the instruction, modulo 64.

The size of the operation for register destinations is specified as byte, word, or long The contents of memory, (ROd < ea >), can be rotated one bit only, and operand size is restricted to a word.

The ROL instruction rotates the bits of the operand to the left; the rotate count determines the number of bit positions rotated. Bits rotated out of the high-order bit go to the carry bit and also back into the low-order bit.

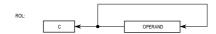

The ROR instruction rotates the bits of the operand to the right: the rotate count determines the number of bit positions rotated. Bits rotated out of the low-order bit go to the carry bit and also back into the high-order bit.





4-160



MOTOROLA

ROL,ROR

Rotate (Without Extend) (M68000 Family)

Condition Codes

Ν Г

X — Not affected

- Set if the most significant bit of the result is set; cleared otherwise. Ν

Z — Set if the result is zero: cleared otherwise

V - Always cleared

- С - Set according to the last bit rotated out of the operand; cleared when the rotate count is zero.

Instruction Format:

	REGISTER ROTATE														
15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0															
1	1	1	0		COUNT/ REGISTE	R	dr	dr SIZE		i/r	1	1	R	EGISTE	R

Instruction Fields:

- Count/Register field: If i/r = 0, this field contains the rotate count. The values 1 - 7 represent counts of 1 -7, and zero specifies a count of eight. If *i*/r = 1, this field specifies a data register that contains the rotate count (modulo 64).

dr field-Specifies the direction of the rotate.

0 — Rotate right 1 — Rotate left

Size field-Specifies the size of the operation. 00 - Byte operation

- 01 Word operation
- 10 Long operation

i/r field—Specifies the rotate count location. If i/r = 0, immediate rotate count. If i/r = 1, register rotate count


Register field-Specifies a data register to be rotated

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-161

Integer Instructions

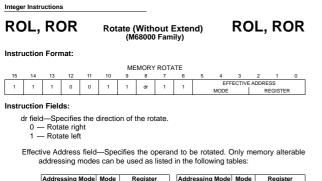

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	-	-	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	-	—
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	-

MC68020, MC68030, and MC68040 only

(bd,An,Xn)*	110	reg. number:An		(bd,PC,Xn)*	-	-
([bd,An,Xn],od)	110	reg. number:An]	([bd,PC,Xn],od)	-	-
([bd,An],Xn,od)	110	reg. number:An		([bd,PC],Xn,od)	-	-

*Can be used with CPU32

ROXL, I	ROXR	Rotate with Extend (M68000 Family)	ROXL, ROXR
Operation:	Destinatio	n Rotated With X By Count -	→ Destination
Assembler Syntax:	ROXd < e	data > ,Dy	

Size = (Byte, Word, Long) Attributes:

Description: Rotates the bits of the operand in the direction specified (L or R). The extend bit is included in the rotation. The rotate count for the rotation of a register is specified in either of two ways: 1. Immediate—The rotate count (1 – 8) is specified in the instruction.

- 2. Register-The rotate count is the value in the data register specified in the instruction, modulo 64.

The size of the operation for register destinations is specified as byte, word, or long. The contents of memory, < ea >, can be rotated one bit only, and operand size is restricted to a word. The ROXL instruction rotates the bits of the operand to the left; the rotate count determines the number of bit positions rotated. Bits rotated out of the highorder bit go to the carry bit and the extend bit; the previous value of the extend bit rotates into the low-order bit.



The ROXR instruction rotates the bits of the operand to the right; the rotate count deter-mines the number of bit positions rotated. Bits rotated out of the low-order bit go to the carry bit and the extend bit; the previous value of the extend bit rotates into the highorder bit



4-162

ROXL, ROXR Rotate with Extend (M68000 Family)

Condition Codes

Ν Z * 0

- ${\rm X}$ Set to the value of the last bit rotated out of the operand; unaffected when the
- rotate court is zero. N Set if the most significant bit of the result is set; cleared otherwise.
- Z Set if the result is zero; cleared otherwise.V Always cleared.
- A Mays cleared.
 C Set according to the last bit rotated out of the operand; when the rotate count is zero, set to the value of the extend bit.

ROXL, ROXR

Instruction Format:

REGISTER ROTATE															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	0	F	COUNT/ REGISTE	R	dr	dr SIZE		i/r	1	0	R	EGISTE	R

Instruction Fields:

- Count/Register field:
 - If i/r = 0, this field contains the rotate count. The values 1 7 represent counts of 1 -7, and zero specifies a count of eight. If *i*/r = 1, this field specifies a data register that contains the rotate count (modulo 64).
- dr field—Specifies the direction of the rotate. 0 Rotate right 1 Rotate left

ROXL, ROXR Rotate with Extend (M68000 Family)

ROXL, ROXR

Integer Instructions

Size field—Specifies the size of the operation. 00 — Byte operation 01 — Word operation 10 — Long operation

- i/r field-Specifies the rotate count location.
- If i/r = 0, immediate rotate count. If i/r = 1, register rotate count.

Register field-Specifies a data register to be rotated

Instruction Format:



Instruction Fields:

dr field—Specifies the direction of the rotate. 0 — Rotate right

1 - Rotate left

(bd.An. (fbd.An.X ([bd,An],) *Can be use

Effective Address field—Specifies the operand to be rotated. Only memory alterable addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	-	-	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	-	-
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An) 101 reg. number:An		(d ₁₆ ,PC)	-	-	
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	-

MC68020, MC68030, and MC68040 only

Xn)*	110	reg. number:An	(bd,PC,Xn)*	-
(n],od)	110	reg. number:An	([bd,PC,Xn],od)	-
Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	-
d with CP	1132			

4-164

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-165

Integer Instructions

Integer Instructions

RTD	Return and Deallocate (MC68010, MC68020, MC68030, MC68040, CPU32)	RTD
Operation:	$(SP) \rightarrow PC; SP + 4 + d_n \rightarrow SP$	
Assembler Syntax:	RTD # < displacement >	
Attributes:	Unsized	
	tulls the program counter value from the stack and adds the placement value to the stack pointer. The previous program co	

Condition Codes

Not affected.

Instruction Format:

1 1 1 0 0 1 0 0 1 1 1 1 0 0

Instruction Field:

Displacement field-Specifies the twos complement integer to be sign-extended and added to the stack pointer.

RTM	Return from Module (MC68020)	RTM
Operation:	Reload Saved Module State from Stack	
Assembler Syntax:	RTM Rn	
Attributes:	Unsized	
module stat	reviously saved module state is reloaded from the top te is retrieved from the top of the stack, the caller I by the argument count value in the module state.	
Condition Code	s:	

Set according to the content of the word on the stack.

Instruction Format:

13 12
 15
 14
 13
 12
 11
 10
 9
 8
 7
 6
 5
 4
 3

 0
 0
 0
 0
 1
 1
 0
 1
 1
 0
 0
 D/A
 2 Instruction Fields:

- D/A field—Specifies whether the module data pointer is in a data or an address register. 0 — the register is a data register
 1 — the register is an address register
- Register field-Specifies the register number for the module data area pointer to be restored from the saved module state. If the register specified is A7 (SP), the updated value of the register reflects the stack pointer operations, and the saved module data area pointer is lost.

RTR	Return and Restore Condition Codes (M68000 Family)	RTR	RTS	Return from Subroutine (M68000 Family) RTS
Operation:	(SP) \rightarrow CCR; SP + 2 \rightarrow SP; (SP) \rightarrow PC; SP + 4 \rightarrow SP		Operation:	$(SP) \rightarrow PC; SP + 4 \rightarrow SP$
Assembler Syntax:	RTR		Assembler Syntax:	RTS
Attributes:	Unsized		Attributes:	Unsized
previous con	s the condition code and program counter values from the dition code and program counter values are lost. The super- register is unaffected.		Description: Pul value is lost Condition Code	
Condition Codes Set to the cor Instruction Form	dition codes from the stack.		Not affected	

4-168

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-169

Integer Instructions

Integer Instructions

Integer Instructions

SBCD	Subtract Decimal with Extend (M68000 Family)	SBCD
Operation:	$Destination 10-Source 10-X \rightarrow Destination$	
Assembler Syntax:	SBCD Dx,Dy SBCD – (Ax), – (Ay)	
Attributes:	Size = (Byte)	
Description: Sul	btracts the source operand and the extend bit from the des	tination operand

- and and stores the result in the destination location. The subtraction is performed using binary-coded decimal arithmetic; the operands are packed binary-coded decimal numbers. The instruction has two modes: 1. Data register to data register—the data registers specified in the instruction con
 - tain the operands.
 - 2. Memory to memory—the address registers specified in the instruction access the operands from memory using the predecrement addressing mode.

This operation is a byte operation only.

Condition Codes:

Х	Ν	Z	V	С
*	U	*	U	*

- X Set the same as the carry bit.
- $$\label{eq:constraint} \begin{split} & N & Undefined. \\ & Z & Cleared if the result is nonzero; unchanged otherwise. \\ & V & Undefined. \end{split}$$
- C Set if a borrow (decimal) is generated; cleared otherwise.

NOTE

Normally the Z condition code bit is set via programming before the start of an operation. This allows successful tests for zero results upon completion of multiple-precision operations.

SB	SCE)		s	ubtra	Ş	SBCD								
nstru	uction	Forn	nat:												
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	0	0	0	REG	REGISTER Dv/Av		1	0	0	0	0	R/M	REG	ISTER	Dx/Ax

Register Dy/Ay field—Specifies the destination register. If R/M = 0, specifies a data register. If R/M = 1, specifies an address register for the predecrement addressing mode.

- R/M field—Specifies the operand addressing mode.
 0 The operation is data register to data register.
 1 The operation is memory to memory.

- Register Dx/Ax field—Specifies the source register. If R/M = 0, specifies a data register. If R/M = 1, specifies an address register for the predecrement addressing mode.

Scc	Set According to Condition (M68000 Family)	Scc
Operation:	If Condition True Then 1s \rightarrow Destination Else 0s \rightarrow Destination	
Assembler Syntax:	Scc < ea >	
Attributes:	Size = (Byte)	

Description: Tests the specified condition code; if the condition is true, sets the byte specified by the effective address to TRUE (all ones). Otherwise, sets that byte to FALSE (all zeros). Condition code cc specifies one of the following conditional tests (refer to Table 3-19 for more information on these conditional tests):

Mnemonic	Condition]	Mnemonic	Condition
CC(HI)	Carry Clear		LS	Low or Same
CS(LO)	Carry Set	1	LT	Less Than
EQ	Equal	1	MI	Minus
F	False		NE	Not Equal
GE	Greater or Equal		PL	Plus
GT	Greater Than	1	т	True
н	High		VC	Overflow Clear
LE	Less or Equal		VS	Overflow Set

Condition Codes:

Not affected

Scc

Scc

Set According to Condition (M68000 Family)

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	4	0	4		CONDITION				4		EF	FECTIVE	ADDRE	SS	
0		0 1 CONDITION						MODE		R	EGISTE	R			

Instruction Fields:

Condition field-The binary code for one of the conditions listed in the table.

Effective Address field—Specifies the location in which the TRUE/FALSE byte is to be stored. Only data alterable addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Mode Register Addressing Mod		Mode	Register		
Dn	000	reg. number:Dn	(xxx).W	111	000		
An	-	-	(xxx).L	111	001		
(An)	010	reg. number:An	# <data></data>	-	_		
(An) +	011	reg. number:An					
– (An)	100	reg. number:An					
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	-		
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	-		

MC68020, MC68030, and MC68040 only

(bd,An,Xn)*	110	reg. number:An		(bd,PC,Xn)*	-	-				
([bd,An,Xn],od)	110	reg. number:An		([bd,PC,Xn],od)	-	-				
([bd,An],Xn,od)	110	reg. number:An		([bd,PC],Xn,od)	-	-				
Cap ha used with CBI 122										

NOTE

A subsequent NEG.B instruction with the same effective address can be used to change the Scc result from TRUE or FALSE to the equivalent arithmetic value (TRUE = 1, FALSE = 0). In the MC68000 and MC68008, a memory destination is read before it is written.

4-172

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-173

Integer Instructions

Integer Instructions

SUB	Subtract (M68000 Family)	SUB
Operation:	$\text{Destination} - \text{Source} \rightarrow \text{Destination}$	
Assembler Syntax:	SUB < ea > ,Dn SUB Dn, < ea >	
Attributes:	Size = (Byte, Word, Long)	
Description: C	ubtracts the source operand from the destination operand	l and atorea the

scription: Subtracts the source operand from the destination operand and stores the result in the destination. The size of the operation is specified as byte, word, or long. The mode of the instruction indicates which operand is the source, which is the destination, and which is the operand size.

Condition Codes:

X N Z V C

- X Set to the value of the carry bit. N Set if the result is negative; cleared otherwise.

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	0	0	1	F	REGISTER	GISTER		OPMOD			EF MODE	FECTIVI	E ADDRE	ESS REGISTE	R

SUB SUB Subtract (M68000 Family)

Instruction Fields:

Register field-Specifies any of the eight data registers.

Opmod	le field			
i	Byte	Word	Long	Operation
	000	001	010	$Dn - \langle ea \rangle \rightarrow Dn$
	100	101	110	$<$ ea $>$ $-$ Dn \rightarrow $<$ ea $>$

Effective Address field—Determines the addressing mode. If the location specified is a source operand, all addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Regist
Dn	000	reg. number:Dn	(xxx).W	111	000
An*	001	reg. number:An	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	111	100
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011

MC68020, MC68030, and MC68040 only

(bd,An,Xn)**	110	reg. number:An		(bd,PC,Xn)**	111	011
([bd,An,Xn],od)	110	reg. number:An		([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An		([bd,PC],Xn,od)	111	011
*For byte-sized operation	tion, addr	ess register direct is	no	allowed.		

egi **Can be used with CPU32.

SUB

Subtract (M68000 Family)

If the location specified is a destination operand, only memory alterable addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	-	-	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	-	-
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	_	-

MC68020, MC68030, and MC68040 only

			,			
Γ	(bd,An,Xn)*	110	reg. number:An	(bd,PC,Xn)*	-	-
Γ	([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	-	-
Γ	([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	-	-

*Can be used with CPU32.

NOTE

If the destination is a data register, it must be specified as a destination Dn address, not as a destination < ea > address.

Most assemblers use SUBA when the destination is an address register and SUBI or SUBQ when the source is immediate data

SUBA

Subtract Address (M68000 Family)

 $\text{Destination} - \text{Source} \rightarrow \text{Destination}$ Operation:

Assembler Syntax: SUBA < ea > .An

Size = (Word, Long) Attributes:

Description: Subtracts the source operand from the destination address register and stores the result in the address register. The size of the operation is specified as word or long. Word-sized source operands are sign-extended to 32-bit quantities prior to the subtraction.

Condition Codes:

Not affected.

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	0	0	1	R	EGISTE	R		OPMODE	=		EFI	FECTIV	ADDRE	ESS EGISTE	
		Field									NODE			LOIDTE	R .

Register field—Specifies the destination, any of the eight address registers.

Opmode field—Specifies the size of the operation. 011—Word operation. The source operand is sign-extended to a long operand and the operation is performed on the address register using all 32 bits. 111—Long operation.

4-176

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

SUB

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-177

Integer Instructions

Integer Instructions

SUBA

Subtract Address (M68000 Family)

SUBA

Effective Address field-Specifies the source operand. All addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Regist
Dn	000	reg. number:Dn	(xxx).W	111	000
An	001	reg. number:An	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	111	100
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011

MC68020, MC68030, and MC68040 only

(bd,An,Xn)*	110	reg. number:An	(bd,PC,Xn)*	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

*Can be used with CPU32

SUBI SUBI Subtract Immediate (M68000 Family) Operation: Destination – Immediate Data → Destination Assembler SUBI # < data > , < ea > Syntax: Attributes: Size = (Byte, Word, Long)

Description: Subtracts the immediate data from the destination operand and stores the result in the destination location. The size of the operation is specified as byte, word, or long. The size of the immediate data matches the operation size.

Condition Codes:

Ν z V * * * * *

- X Set to the value of the carry bit.
- N Set if the result is negative; cleared otherwise. Z Set if the result is zero; cleared otherwise.
- V Set if an overflow occurs; cleared otherwise.
 C Set if a borrow occurs; cleared otherwise.

Instruction Format:



SUBI Subtract Immediate (M68000 Family)

Instruction Fields:

- Size field—Specifies the size of the operation.

 - 00 Byte operation 01 Word operation 10 Long operation

Effective Address field—Specifies the destination operand. Only data alterable addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	-	-
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	-
(d _e .An.Xn)	110	rea. number:An	(d ₈ ,PC,Xn)	-	_

WC68020, WC6803	su, and N	1C68040 only			
(bd,An,Xn)*	110	reg. number:An	(bd,PC,Xn)*	-	-
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	-	-
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	-	-
*Can be used with CF	PU32.				

Immediate field—Data immediately following the instruction. If size = 00, the data is the low-order byte of the immediate word.

If size = 01, the data is the entire immediate word.

If size = 10, the data is the next two immediate words

SUBQ

Subtract Quick (M68000 Family)

Destination – Immediate Data \rightarrow Destination Operation:


Assembler Syntax:

SUBQ # < data > . < ea >

Attributes Size = (Byte, Word, Long)

Description: Subtracts the immediate data (1 - 8) from the destination operand. The size of the operation is specified as byte, word, or long. Only word and long operations can be used with address registers, and the condition codes are not affected. When subtracting from address registers, the entire destination address register is used, despite the operation size.

Condition Codes:

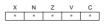

Χ-- Set to the value of the carry bit.

- N Set if the result is negative; cleared otherwise.
 Z Set if the result is zero; cleared otherwise.
- V Set if an overflow occurs; cleared otherwise.
 C Set if a borrow occurs; cleared otherwise.

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	0	1		DATA		1	SI	ZE		EFI MODE	FECTIV	ADDRE	SS EGISTE	R

4-180

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

SUBI

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

Integer Instructions

SUBQ

Subtract Quick (M68000 Family)

SUBQ

Instruction Fields:

Data field—Three bits of immediate data; 1-7 represent immediate values of $1-7, \ and zero represents eight.$

Size field-Specifies the size of the operation.

- 00 Byte operation 01 Word operation 10 Long operation

Effective Address field—Specifies the destination location. Only alterable addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	000	reg. number:Dn	(xxx).W	111	000
An*	001	reg. number:An	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	-	-
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	_

MC69020 MC69020 and MC69040 only

modobilo, modobilo, and modobilo only							
	(bd,An,Xn)**	110	reg. number:An		(bd,PC,Xn)**	-	-
	([bd,An,Xn],od)	110	reg. number:An		([bd,PC,Xn],od)	-	_
	([bd,An],Xn,od)	110	reg. number:An		([bd,PC],Xn,od)	-	-

*Word and long only. **Can be used with CPU32

SUBX SUBX Subtract with Extend (M68000 Family) Operation: Destination – Source – $X \rightarrow$ Destination Assembler SUBX Dx.Dv SUBX - (Ax), - (Ay)Syntax: Attributes: Size = (Byte, Word, Long) Description: Subtracts the source operand and the extend bit from the destination operand and stores the result in the destination

location. The instruction has two modes:

- Data register to data register—the data registers specified in the instruction con-tain the operands.
- 2. Memory to memory-the address registers specified in the instruction access the operands from memory using the predecrement addressing mode

The size of the operand is specified as byte, word, or long.

Condition Codes:

X N Z V C

- X Set to the value of the carry bit.
 N Set if the result is negative; cleared otherwise.
- Z Cleared if the result is nonzero; unchanged otherwise. V Set if an overflow occurs; cleared otherwise.
- C Set if a borrow occurs: cleared otherwise.

NOTE

Normally the Z condition code bit is set via programming before the start of an operation. This allows successful tests for zero results upon completion of multiple-precision operations

4-181

Integer Instructions

Integer Instructions

SU	B)	(S			ith E) Fam		d			ę	SU	BX
Instru	uction	Forr	nat:												
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	0	0	1	REG	ISTER D)y/Ay	1	SI	ZE	0	0	R/M	REG	ISTER [Dx/Ax

Instruction Fields:

Register Dy/Ay field—Specifies the destination register.

egister Dy/Ay field—Specifies and destination register. If R/M = 0, specifies a data register. If R/M = 1, specifies an address register for the predecrement addressing mode.

- Size field—Specifies the size of the operation. 00 Byte operation 01 Word operation

- 10 Long operation
- R/M field—Specifies the operand addressing mode.
 0 The operation is data register to data register.
 1 The operation is memory to memory.
- Register Dx/Ax field—Specifies the source register:
- If R/M = 0, specifies a data register. If R/M = 1, specifies an address register for the predecrement addressing mode.

Swap Register Halves (M68000 Family)

Operation: Register $31 - 16 \leftrightarrow Register 15 - 0$

Assembler SWAP Dn

Syntax:

Size = (Word) Attributes

Description: Exchange the 16-bit words (halves) of a data register.

Condition Codes:



X — Not affected.

- N Set if the most significant bit of the 32-bit result is set; cleared otherwise.
 Z Set if the 32-bit result is zero; cleared otherwise.
- Z Set if the 32-bit V Always cleared.
- C Always cleared.

Instruction Format:



Instruction Field:

Register field-Specifies the data register to swap.

4-184

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-185

TAS

Integer Instructions

TAS	Test and Set an Operand (M68000 Family)	TAS
Operation:	Destination Tested \rightarrow Condition Codes; 1 \rightarrow Bit 7 of De	estination
Assembler Syntax:	TAS < ea >	
Attributes:	Size = (Byte)	
D		

escription: Tests and sets the byte operand addressed by the effective address field. The instruction tests the current value of the operand and sets the N and Z condition bits appropriately. TAS also sets the high-order bit of the operand. The operation uses a locked or read-modify-write transfer sequence. This instruction supports use of a flag or semaphore to coordinate several processors.

Condition Codes:

Х	Ν	Z	V	С
-	*	*	0	0

х -Not affected.

- M Set if the most significant bit of the operand is currently set; cleared otherwise. Z Set if the operand was zero; cleared otherwise. V Always cleared. C Always cleared.

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	0	0	1	0	1	0	1	1		EFFECTIVE ADDRESS				
0		0	Ŭ		Ů		Ů				MODE		R	EGISTE	R

TAS

Integer Instructions

Instruction Fields:

Effective Address field—Specifies the location of the tested operand. Only data alterable addressing modes can be used as listed in the following tables:

Test and Set an Operand (M68000 Family)

Addressing Mode	Mode	Register	Addressing Mode	Mode	Regis
Dn	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# <data></data>	-	-
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	_
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	_

MC68020, MC68030, and MC68040 only

(bd,An,Xn)*	110	reg. number:An	(bd,PC,Xn)*	-	-
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	-	-
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	-	-
*Can be used with CP	U32.				

Integer Instructions

TRAPTrap
(M68000 Family)TRAPOperation: $1 \rightarrow S$ -Bit of SR
 $SSP - 2 \rightarrow SSP; Format/Offset <math>\rightarrow (SSP);$
 $SSP - 4 \rightarrow SSP; PC <math>\rightarrow (SSP); SSP - 2 \rightarrow SSP;$
 $SR <math>\rightarrow (SSP); Vector Address <math>\rightarrow PC$ The MC68000 & and motive vector offset or
format code to the system stack.

Assembler Syntax:

- j...u.n.

Attributes: Unsized

Description: Causes a TRAP # < vector > exception. The instruction adds the immediate operand (vector) of the instruction to 32 to obtain the vector number. The range of vector values is 0 – 15, which provides 16 vectors.

Condition Codes:

Not affected.

Instruction Format:

15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0 0 1 0 0 1 1 1 0 0 1 0 0 VECTOR

Instruction Fields:

Vector field—Specifies the trap vector to be taken.

TRAP # < vector >

Operation:	If cc Then TRAP
Assembler Syntax:	TRAPcc TRAPcc.W # < data > TRAPcc.L # < data >

Unsized or Size = (Word, Long)

Description: If the specified condition is true, causes a TRAPcc exception with a vector number 7. The processor pushes the address of the next instruction word (currently in the program counter) onto the stack. If the condition is not true, the processor performs no operation, and execution continues with the next instruction. The immediate data operand should be placed in the next word(s) following the operation word and is available to the trap handler. Condition code cc specifies one of the following conditional tests (refer to Table 3-19 for more information on these conditional tests):

Mnemonic	Condition]	Mnemonic	Condition
CC(HI)	Carry Clear		LS	Low or Same
CS(LO)	Carry Set		LT	Less Than
EQ	Equal		MI	Minus
F	False		NE	Not Equal
GE	Greater or Equal		PL	Plus
GT	Greater Than		т	True
н	High		VC	Overflow Clear
LE	Less or Equal		VS	Overflow Set

Condition Codes:

TRAPcc

Attributes:

Not affected.

4-188

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-189

Integer Instructions Integer Instructions TRAPcc TRAPcc TRAPV TRAPV Trap on Condition (MC68020, MC68030, MC68040, CPU32) Trap on Overflow (M68000 Family) Instruction Format: Operation: If V Then TRAP 11 15 14 13 12 0 1 0 1 6 5 4 1 1 1 CONDITIO Assemble Syntax: TRAPV Instruction Fields: Attributes: Unsized Condition field-The binary code for one of the conditions listed in the table. Description: If the overflow condition is set, causes a TRAPV exception with a vector Opmode field-Selects the instruction form. number 7. If the overflow condition is not set, the processor performs no operation and execution continues with the next instruction. 010—Instruction is followed by word-sized operand. 011—Instruction is followed by long-word-sized operand. 100-Instruction has no operand. Condition Codes: Not affected. Instruction Format: 10 14 13 12 11 10 9 8 7 5 4 3 2 1 0 0 1 0 0 1 1 1 0 0 1 1 0 1</

Integer Instructions

TST	Test an Operand (M68000 Family)	TST
Operation:	Destination Tested \rightarrow Condition Codes	
Assembler Syntax:	TST < ea >	

Attributes:

Description: Compares the operand with zero and sets the condition codes according to the results of the test. The size of the operation is specified as byte, word, or long.

Condition Codes:

х	N	z	v	с
-	*	*	0	0

Size = (Byte, Word, Long)

Instruction Format:

	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
ſ	0	1	0				4	0	SL	70		EFF	ECTIVE	E ADDRE	SS	
	0		0				' '	0	31.	26		MODE		F	EGISTE	R

Test an Operand (M68000 Family)

Instruction Fields:

Size field—Specifies the size of the operation. 00 — Byte operation 01 — Word operation 10 — Long operation

Effective Address field—Specifies the addressing mode for the destination operand as listed in the following tables:

Addressing Mode	Addressing Mode Mode		Addressing Mode	Mode	Register	
Dn	000	reg. number:Dn	(xxx).W	111	000	
An*	001	reg. number:An	(xxx).L	111	001	
(An)	010	reg. number:An	# <data>*</data>	111	100	
(An) +	011	reg. number:An				
– (An)	100	reg. number:An				
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)**	111	010	
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)**	111	011	

MC68020, MC68030, and MC68040 only

(bd,An,Xn)***	110	reg. number:An		(bd,PC,Xn)***	111	011
([bd,An,Xn],od)	110	reg. number:An		([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An		([bd,PC],Xn,od)	111	011
*MC68020, MC68030, MC68040, and CPU32. Address register direct allowed only for word						

*MC68020, MC68030, MC68040, and CPU32. Address register direct allowed only to and long. **PC relative addressing modes do not apply to MC68000, MC680008, or MC68010. ***Can be used with CPU32.

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL


4-193

Integer Instructions

Integer Instructions

UNLK	Unlink (M68000 Family)	UNLK	UNPK	Unpack BCD (MC68020, MC68030, MC68040)					
Operation:	An \rightarrow SP; (SP) \rightarrow An; SP + 4 \rightarrow SP		Operation: Source (Packed BCD) + Adjustment \rightarrow Destination (Unpacked						
Assembler Syntax:	UNLK An		Assembler Syntax:	UNPACK – (Ax), – (Ay),# < adjustment > UNPK Dx,Dy,# < adjustment >					
Attributes:	Unsized		Attributes:	Unsized					
address reg	ads the stack pointer from the specified address ister with the long word pulled from the top of the		lower four b	ces the two binary-coded decimal digits in the source operand byte into the its of two bytes and places zero bits in the upper four bits of both bytes. justment value to this unpacked value. Condition codes are not altered.					
Condition Codes: Not affected. Instruction Format:			When both operands are data registers, the instruction unpacks the source register contents, adds the extension word, and places the result in the destination register. The high word of the destination register is unaffected.						
15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0 0 1 0 0 1 1 1 0 0 1 1 1 REGISTER Instruction Field: Register field—Specifies the address register for the instruction.		1 REGISTER	Source:	12 11 10 9 8 7 6 5 4 3 2 1 0 u u u u u a b c d e f g h Dx					
			15 14 13 0 0 0 Add Adjustn	12 11 10 9 8 7 6 5 4 3 2 1 0 0 a b c d 0 0 0 e f g h nent Word:					
			15 14 13 Destination:	12 11 10 9 8 7 6 5 4 3 2 1 0 16-BIT EXTENSION					
			15 14 13 v v v	12 11 10 9 8 7 6 5 4 3 2 1 0 v a' b' c' d' w w w w e' f' g' h' Dv					

TST

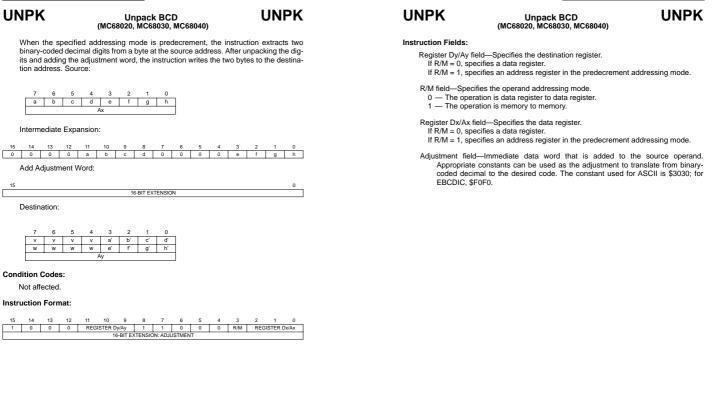

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

4-197

Integer Instructions

Integer Instructions

SECTION 5 FLOATING POINT INSTRUCTIONS

This section contains information about the floating-point instructions for the MC68881, MC68882, and MC68040. In this section, all references to the MC68040 do not include the MC68LC040 and MC68EC040. Each instruction is described in detail, and the instruction descriptions are arranged in alphabetical order by instruction mmemonic.

All floating-point instructions apply to the MC68881 and MC68882 processors. The MC68040 directly supports part of the floating-point instructions through hardware. It indirectly supports the remainder by providing special traps and/or stack frames for the unimplemented instructions and data types. The following identification is noted under the instruction tile for the MC68040:

Directly Supported-(MC6888X, MC68040)

Software Supported—(MC6888X, MC68040FPSW)

For all MC68040 floating-point instructions, the coprocessor ID field must be 001.

Table 5-1 lists the floating-point instructions directly supported by the MC68040, and Table 5-2 lists the floating-point instructions indirectly supported.

4-198

Table 5-1. Directly Supported Floating-Point Instructions

Mnemonic	Description
FABS	Floating-Point Absolute Value
FADD	Floating-Point Add
FBcc	Floating-Point Branch Conditionally
FCMP	Floating-Point Compare
FDBcc	Floating-Point Test Condition, Decrement, and Branch
FDIV	Floating-Point Divide
FMOVE	Move Floating-Point Data Register
FMOVE	Move Floating-Point System Control Register
FMOVEM	Move Multiple Floating-Point System Data Register
FMOVEM	Move Multiple Floating-Point Control Data Register
FMUL	Floating-Point Multiply
FNEG	Floating-Point Negate
FNOP	No Operation
FRESTORE*	Restore Internal Floating-Point State*
FSAVE*	Save Internal Floating-Point State*
FScc	Set According to Floating-Point Condition
FSORT	Floating-Point Square Root
FSUB	Floating-Point Subtract
FSGLDIV	Floating-Point Single-Precision Divide
FSFLMUL	Floating-Point Single-Precision Multiply
FTRAPcc	Trap on Floating-Point Condition
FTST	Test Floating-Point Operand

These are privileged instr detailed information.

Table 5-2. Indirectly Supported Floating-Point Instructions

Floating Point Instructions

Mnemonic	Description
FACOS	Floating-Point Arc Cosine
FASIN	Floating-Point Arc Sine
FATAN	Floating-Point Arc Tangent
FATANH	Floating-Point Hyperbolic Arc Tangent
FCOS	Floating-Point Cosine
FCOSH	Floating-Point Hyperbolic Cosine
FETOX	Floating-Point e ^x
FETOXM1	Floating-Point e ^x – 1
FGETEXP	Floating-Point Get Exponent
FGETMAN	Floating-Point Get Mantissa
FINT	Floating-Point Integer Part
FINTRZ	Floating-Point Integer Part, Round-to- Zero
FLOG10	Floating-Point Log10
FLOG2	Floating-Point Log2
FLOGN	Floating-Point Loge
FLOGNP1	Floating-Point Log _e (x + 1)
FMOD	Floating-Point Modulo Remainder
FMOVECR	Floating-Point Move Constant ROM
FREM	Floating-Point IEEE Remainder
FSCALE	Floating-Point Scale Exponent
FSIN	Floating-Point Sine
FSINCOS	Floating-Point Simultaneous Sine and Cosine
FSINH	Floating-Point Hyperbolic Sine
FTAN	Floating-Point Tangent
FTANH	Floating-Point Hyperbolic Tangent
FTENTOX	Floating-Point 10 ^x
FTWOTOX	Floating-Point 2 ^x
	1

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

5-3

Floating Point Instructions

4 3 2 1 EFFECTIVE ADDRESS

OPMODE EFFECTIVE ADDRESS MODE REGISTER

Floating Point Instructions

FABS	Floating-Point Absolute Value (MC6888X, MC68040)	FABS	FABS		t Absolute Value FABS
Operation:	Absolute Value of Source \rightarrow FPn		Floating-Point Status F	Register:	
Assembler			Condition Codes:	Affected as	s described in 3.6.2 Conditional Testing.
Syntax:	FABS. < fmt > < ea > ,FPn		Quotient Byte:	Not affecte	d.
	FABS.X FPm,FPn FABS.X FPn *FrABS.< fmt > <ea>,FPn *FrABS.X FPm,FPn *FrABS.X Pn where r is rounding precision, S or D *Supported by MC68040 only.</ea>		Exception Byte:	BSUN SNAN OPERR OVFL UNFL	Cleared Refer to 1.6.5 Not-A-Numbers Cleared If the source is an extended-precision denormalized number, refer to exception processing in the appropriate user's manual;
Attributes:	Format = (Byte, Word, Long, Single, Quad, Extended	d, Packed)		DZ	cleared otherwise. Cleared
the absolute FABS will re	nverts the source operand to extended precision (if nece e value of that number in the destination floating-point da ound the result to the precision selected in the floating-poi d FDABS will round the result to single or double precis	ta register. nt control register.		INEX2 INEX1	Cleared If < fmt > is packed, refer to exception processing in the appropriate user's manual; cleared otherwise.

FABS will round the result to the precision selected in the floating-point control register. FSABS and FDABS will round the result to single or double precision, respectively, regardless of the rounding precision selected in the floating-point control register.

Operation Table:

		SOURCE							
DESTINATION	+	In Range –	+	Zero	-	+	Infinity	-	
Result		Absolute Value		Absolute Value			Absolute Value		
NOTE: If the source operand is a NAN, refer to 1.6.5 Not-A-Numbers for more information									

5-4

Instruction Format:

1 1

R/M 0

15 14 13

1

0

Accrued Exception Byte: Affected as described in exception processing; refer to the appropriate user's manual.

5

 12
 11
 10
 9
 8
 7
 6

 1
 COPROCESSOR ID
 0
 0
 0
 0

 SOURCE SPECIFIER
 DESTINATION REGISTER
 REGISTER
 Image: Comparison of the second sec

0

FABS

FABS

Instruction Fields:

Effective Address field-Determines the addressing mode for external operands.

Floating-Point Absolute Value (MC6888X, MC68040)

If R/M = 0, this field is unused and should be all zeros. If R/M = 1, this field specifies the location of the source operand. Only data addressing modes can be used as listed in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	000	reg. number:Dn	(xxx).W	111	000
An	-	_	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	111	100
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

*Only if < fmt > is byte, word, long, or single

R/M field—Specifies the source operand address mode

0 — The operation is register to register.
1 — The operation is < ea > to register.

FABS

FABS

Floating-Point Absolute Value (MC6888X, MC68040)

Source Specifier field-Specifies the source register or data format. If R/M = 0, specifies the source floating-point data register.

If R/M = 0, specifies the source localing-point If R/M = 1, specifies the source data format: 000 — Long-Word Integer (L) 001 — Single-Precision Real (S) 010 — Extended-Precision Real (X) 011 — Packed-Decimal Real (P)* 100 — Word Integer (W) 101 — Durkle Parcines Real (D)

- 101 Double-Precision Real (D) 110 Byte Integer (B)

*This encoding will cause an unimplemented data type exception in the MC68040 to allow emulation in software.

Destination Register field-Specifies the destination floating- point data register.

Opmode field—Specifies the instruction and rounding precision.

0011000	FABS	Rounding precision specified by the floating-point control register.
1011000	FSABS	Single-precision rounding specified.
1011100	FDABS	Double-precision rounding specified.

5-6

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

5-7

Floating Point Instructions

FACOS	Arc Cosine (MC6888X, M68040FPSP)	FACOS			
Operation:	Arc Cosine of Source \rightarrow FPn				
Assembler Syntax:	FACOS. < fmt > < ea > ,FPn FACOS.X FPm,FPn FACOS.X FPn				
Attributes:	Format = (Byte, Word, Long, Single, Double, Extended, Packed)				

Description: Converts the source operand to extended precision (if necessary) and calculates the arc cosine of that number. Stores the result in the destination floating-point data register. This function is not defined for source operands outside of the range [-1...+1]; if the source is not in the correct range, a NAN is returned as the result and the OPERR bit is set in the floating-point status register. If the source is in the correct range, the result is in the range of $[0...\pi]$.

Operation Table:

						SOURCE			
	DESTINATION	+	In Range	-	+	Zero	-	+	Infinity
	Result		Arc Cosine			+ π/2			NAN
	NOTES: 1. If the source operand 2. Sets the OPERR bit							ormati	on.
Floa	ting-Point Status R	egi	ster:						
	Condition Codes:		Affected	as c	lescr	ribed in 3.6.2	2 Co	ndit	ional Testin

M68000 FAMILY PROGRAMMER'S REFE

Condition Codes:	Affected as described in 3.6.2 Conditional Testing.			
Quotient Byte:	Not affected	L		
Exception Byte:	BSUN SNAN OPERR	Cleared Refer to 1.6.5 Not-A-Numbers . Set if the source is infinity, > + 1 or < - 1; cleared otherwise.		
	OVFL UNFL DZ INEX2	Cleared Cleared Refer to inexact result in the appropriate user's manual.		
	INEX1	If < fmt > is packed, refer to inexact result on decimal input in the appropriate user's manual; cleared otherwise.		
Accrued Exception Byte:		described in IEEE exception and trap compati- appropriate user's manual.		

ERENCE MANUAL MOTOROLA	RENCE MANUAL	MOTOROLA
------------------------	--------------	----------

5-8

5-9

FACOS

Arc Cosine (MC6888X, M68040FPSP)

FACOS

Floating Point Instructions

Mode Register 111

111 001

111

111

111 011 011

111

111 011

111 011

000

100

010

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COPROCESSOR ID		0	0	0	EFFECTIVE ADDRESS MODE REGISTER			R			
0	R/M	0				ESTINATION REGISTER		0	0	1	1	1	0	0	

Instruction Fields:

Coprocessor ID field—Specifies which coprocessor in the system is to execute this instruction. Motorola assemblers default to ID = 1 for the floating-point coprocessor

Effective Address field—Determines the addressing mode for external operands. If R/M = 0, this field is unused and should be all zeros. If R/M = 1, this field is encoded with an M68000 family addressing mode as listed in

Addressing Mode

(xxx).W

(xxx).L

< data >

(d16,PC)

(d₈,PC,Xn)

(bd,PC,Xn)

([bd,PC,Xn],od)

([bd,PC],Xn,od)

the following table:

000	reg. number:Dn
-	_
010	reg. number:An
011	reg. number:An
100	reg. number:An
101	reg. number:An
110	reg. number:An
	 010 011 100 101 110 110 110

*Only if < fmt > is byte, word, long, or single R/M field—Specifies the source operand address mode. 0 — The operation is register to register. 1 — The operation is < ea > to register.

FACOS

Arc Cosine (MC6888X, M68040FPSP)

Source Specifier field-Specifies the source register or data format

If R/M = 0, specifies the source floating-point data register.

- If R/M = 1, specifies the source data format: ⟨M = 1, specifies the source data for 000 — Long-Word Integer (L)
 001 — Single-Precision Real (S)
 010 — Extended-Precision Real (X)
 011 — Packed-Decimal Real (P)
 100 — Word Integer (W)

 - 101 Double-Precision Real (D) 110 Byte Integer (B)
- Destination Register field—Specifies the destination floating- point data register. If R/ M = 0 and the source and destination fields are equal, then the input operand is taken from the specified floating-point data register, and the result is then written into the same register. If the single register syntax is used, Motorola assemblers set the source and destination fields to the same value.

FADD Operation:

Assembler

Attributes:

Syntax:

Floating-Point Add (MC6888X, MC68040)

Source \pm EPn \rightarrow EPn

	FFII
	FPm,FPn ng precision, S or D
*Supported by MC68	040 only.

Format = (Byte, Word, Long, Single, Double, Extended, Packed)

Description: Converts the source operand to extended precision (if necessary) and adds that number to the number contained in the destination floating-point data register. Stores the result in the destination floating-point data register.

FADD will round the result to the precision selected in the floating-point control register. FSADD and FDADD will round the result to single or double-precision, respectively, regardless of the rounding precision selected in the floating-point control register.

Operation Table:

			SOURCE			
DESTINATION	+	In Range –	+ Zero	-	+	Infinity –
In Range	+	Add	Add		+ inf	-inf
Zero	+	Add	+ 0.0 0.0 ²	0.0 ² - 0.0		- inf
Infinity	+	+ inf	+ inf		+ inf	NAN ³
	-	- inf	- inf		NAN‡	- inf

If either operand is a NAN, refer to **1.6.5 Not-A-Numbers** for more information.
 Returns + 0.0 in rounding modes RN, RZ, and RP; returns – 0.0 in RM.
 Sets the OPERR bit in the floating-point status register exception byte.

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

FACOS

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

Floating Point Instructions

FADD	Floating-Flo	Point Add FADD
Floating-Point Status Registe	er:	
Condition Codes:	Affected as o	described in 3.6.2 Conditional Testing.
Quotient Byte:	Not affected	
Exception Byte:	BSUN	Cleared
	SNAN	Refer to 1.6.5 Not-A-Numbers.
	OPERR	Set if the source and the destination are opposite-signed infinities; cleared otherwise.
	OVFL	Refer to exception processing in the appropriate user's manual.
	UNFL	Refer to exception processing in the appropriate user's manual.
	DZ	Cleared
	INEX2	Refer to exception processing in the appropriate user's manual.
	INEX1	If < fmt > is packed, refer to exception processing in the appropriate user's manual; cleared otherwise.
Accrued Exception Byte:	Affected as o priate user's	lescribed in exception processing in the appro- manual.

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COP	ROCES	SOR	0	0	0		EFI	FECTIVE	ADDRE	SS	
1		· ·	l '		ID				ľ		MODE		R	EGISTE	R
0	R/M	0		SOURCE			STINATI				(OPMOD	E		

Instruction Fields:

Effective Address field-Determines the addressing mode for external operands If R/M = 0, this field is unused and should be all zeros.



Floating Point Instructions

FADD

5-11

Floating-Point Add (MC6888X, MC68040) If R/M = 1, specifies the location of the source operand location. Only data

Addressing Mode	Mode	Register	Addressing M	ode Mode	Register
Dn	000	reg. number:Dn	(xxx).W	111	000
An	-	_	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	111	100
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],c	id) 111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,c	d) 111	011

R/M field—Specifies the source operand address mode.

0 - The operation is register to register.

1 — The operation is < ea > to register.

Source Specifier field-Specifies the source register or data format. iource Specifier field—Specifies the source register or data f If R/M = 0, specifies the source floating-point data register. If R/M = 1, specifies the source data format: 000 — Long-Word Integer (L) 001 — Single-Precision Real (S) 010 — Extended-Precision Real (X) 011 — Packed-Decimal Real (P)* 100 — Word Integer (W) 101 — Double-Precision Real (D) 110 — Byte Integer (B) "This encoding will cause an unimplemented data type exception to a

addressing modes can be used as listed in the following table

- *This encoding will cause an unimplemented data type exception to allow emulation in software.
- Destination Register field-Specifies the destination floating- point data register.

Opmode field—Specifies the instruction and rounding precision.

0100010	FADD	Rounding precision specified by the floating-point control register.
1100010	FSADD	Single-precision rounding specified.
1100110	FDADD	Double-precision rounding specified.

FADD

FASIN	(MCe	Arc Sine 5888X, M68040FPSP)	FASIN
Operation:	Arc Sine of the S	Source \rightarrow FPn	
Assembler Syntax:	FASIN. < fmt > FASIN.X FASIN.X	< ea > ,FPn FPm,FPn FPn	

Format = (Byte, Word, Long, Single, Double, Extended, Packed) Attributes:

Description: Converts the source operand to extended precision (if necessary) and calculates the arc sine of the number. Stores the result in the destination floating-point data register. This function is not defined for source operands outside of the range [that objects. This is not in the correct range, a NAN is returned as the result and the OPERR bit is set in the floating- point status register. If the source is in the correct range, the result is in the range of $[-\pi/2...+\pi/2]$.

Operation Table:

		SOURCE ¹									
DESTINATION	+	In Range	-	+	Zero	-	+	Infinity	-		
Result		Arc Sine		+ 0.0		- 0.0		NAN ²			
NOTES:											

If the source operand is a NAN, refer to 1.6.5 Not-A-Numbers for more information.
 Sets the OPERR bit in the floating-point status register exception byte.

FASIN

FASIN

Floating-Point Status Register:

ating-Point Status Registe	er:	
Condition Codes:	Affected as	described in 3.6.2 Conditional Testing.
Quotient Byte:	Not affected	l.
Exception Byte:	BSUN SNAN OPERR	Cleared Refer to 1.6.5 Not-A-Numbers . Set if the source is infinity, > + 1 or < - 1; cleared otherwise
	OVFL UNFL DZ	Cleared Can be set for an underflow condition. Cleared
	INEX2	Refer to inexact result in the appropriate user's manual.
	INEX1	If < fmt > is packed, refer to inexact result on decimal input in the appropriate user's manual; cleared otherwise.
Accrued Exception Byte:		described in IEEE exception and trap compati- appropriate user's manual.

Arc Sine (MC6888X, M68040FPSP)

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COF	COPROCESSOR ID		0	0	0	EFFECTIVE ADDRESS MODE REGISTER				R	
0	R/M	0		SOURCI			STINATI		0	0	0	1	1	0	0

Instruction Fields:

Coprocessor ID field—Specifies which coprocessor in the system is to execute this instruction. Motorola assemblers default to ID = 1 for the floating-point coprocessor.

5-14

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

FASIN

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

5-15

Floating Point Instructions

Floating Point Instructions

FASIN

Arc Sine (MC6888X, M68040FPSP)

Effective Address field-Determines the addressing mode for external operands.

If R/M = 0, this field is unused and should be all zeros.

If R/M = 1, this field is encoded with an M68000 family addressing mode as listed in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	111	100
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

*Only if < fmt > is byte, word, long, or single

R/M field—Specifies the source operand address mode.

0 — The operation is register to register. 1 — The operation is < ea > to register.

Source Specifier field—Specifies the source register or data format. If R/M = 0, specifies the source floating-point data register.

- If R/M = 1, specifies the source data format: 000 Long-Word Integer (L) 001 Single-Precision Real (S) 010 Extended-Precision Real (X)
 - 011 Packed-Decimal Real (P) 100 Word Integer (W)

 - 101 Double-Precision Real (D) 110 — Byte Integer (B)
- Destination Register field-Specifies the destination floating- point data register. If R/ M=0 and the source and destination fields are equal, then the input operand is taken from the specified floating-point data register, and the result is then written into the same register. If the single register syntax is used, Motorola assemblers set the source and destination fields to the same value.

FATAN Arc Tangent of Source → FPn Operation: Assembler FATAN. < fmt > < ea > .FPn FATAN.X FATAN.X FPm,FPn FPm,FPnz Syntax: Attributes: Format = (Byte, Word, Long, Single, Double, Extended, Packed)

Description: Converts the source operand to extended precision (if necessary) and calculates the arc tangent of that number. Stores the result in the destination floating-point data register. The result is in the range of $[-\pi/2...+\pi/2]$.

Operation Table:

			5	SOURCE				
DESTINATION	+ In Range	- 4	+	Zero	-	+	Infinity	-
Result	Arc Tangent	4	+ 0.0		- 0.0	+ π/2		-π/2

NOTE: If the source operand is a NAN, refer to 1.6.5 Not-A-Numbers for more information

Floating-Point Status Register:

Condition Codes:	Affected as	described in 3.6.2 Conditional Testing.
Quotient Byte:	Not affected	L.
Exception Byte:	BSUN SNAN OPERR OVFL UNFL	Cleared Refer to 1.6.5 Not-A-Numbers . Cleared Cleared Refer to underflow in the appropriate user's manual.
	DZ INEX2	Cleared Refer to inexact result in the appropriate user's manual.
	INEX1	If < fmt > is packed, refer to inexact result on decimal input in the appropriate user's manual; cleared otherwise.
Accrued Exception Byte:		described in IEEE exception and trap compati-

bility in the appropriate user's manual

FATAN Arc Tangent (MC6888X, M68040FPSP)

FATAN Arc Tangent (MC6888X, M68040FPSP)

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COPROCESSOR ID		0	0	0	EFFECTIVE AL MODE				DDRESS REGISTER		
0	R/M	0		SOURCE			STINATI		0	0	0	1	1	0	0

Instruction Fields:

Coprocessor ID field-Specifies which coprocessor in the system is to execute this instruction. Motorola assemblers default to ID = 1 for the floating-point coprocessor.

FATAN

MOTOROLA

Effective Address field—Determines the addressing mode for external operands. If R/M = 0, this field is unused and should be all zeros. If R/M = 1, this field is encoded with an M68000 family addressing mode as listed in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	111	100
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

R/M field—Specifies the source operand address mode

0 — The operation is register to register.
1 — The operation is < ea > to register.

Floating Point Instructions

FATAN

5-19

Floating Point Instructions

Source Specifier field-Specifies the source register or data format.

Arc Tangent (MC6888X, M68040FPSP)

- If R/M = 0, specifies the source floating-point data register.
- If R/M = 1, specifies the source data format: R/M = 1, specifies the source data for 000 — Long-Word Integer (L) 001 — Single-Precision Real (S) 010 — Extended-Precision Real (X) 011 — Packed-Decimal Real (P) 100 — Word Integer (W)

 - 101 Double-Precision Real (D) 110 Byte Integer (B)

FATAN

Destination Register field—Specifies the destination floating- point data register. If R/ M = 0 and the source and destination fields are equal, then the input operand is taken from the specified floating-point data register, and the result is then written into the same register. If the single register syntax is used, Motorola assemblers set the source and destination fields to the same value.

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

Floating Point Instructions

5-18

FATANH	Hyperbolic Arc Tangent (MC6888X, M68040FPSP)	FATANH
Operation:	Hyperbolic Arc Tangent of Source $\rightarrow \text{FPn}$	
Assembler Syntax:	FATANH. < fmt > < ea > ,FPn FATANH.X FPm,FPn FATANH.X FPn	
Attributes:	Format = (Byte, Word, Long, Single, Double, Exte	ended, Packed)

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

Description: Converts the source operand to extended precision (if necessary) and calculates the hyperbolic arc tangent of that value. Stores the result in the destination floating-point data register. This function is not defined for source operands outside of the range (-1...+1); and the result is equal to – infinity or + infinity if the source is equal to + 1 or – 1, respectively. If the source is outside of the range [-1...+1], a NAN is returned as the result, and the OPERR bit is set in the floating-point status register.

Operation Table:

DESTINATION + In Range - + Zero		In finites	
		- Infinity	-
Result Hyperbolic + 0.0	- 0.0	NAN ²	

If the source operand is a NAN, refer to 1.6.5 Not-A-Numbers for more information.
 Sets the OPERR bit in the floating-point status register exception byte.

Floating-Point Status Register:

Condition Codes: Affected as described in 3.6.2 Conditional Testing Quotient Byte: Not affected.

FATANH		Arc Tangent M68040FPSP)
Exception Byte:	BSUN SNAN	Cleared Refer to 1.6.5 Not-A-Numbers .
	OPERR	Set if the source is $> + 1$ or < -1 ; cleared otherwise.
	OVFL	Cleared
	UNFL	Refer to underflow in the appropriate user's manual.
	DZ	Set if the source is equal to + 1 or – 1; cleared otherwise.
	INEX2	Refer to inexact result in the appropriate user's manual.
	INEX1	If < fmt > is packed, refer to inexact result on decimal input in the appropriate user's manual; cleared otherwise.
Accrued Exception Byte:	Affected as	described in IEEE exception and trap compati-

bility in the appropriate user's manual.

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COF	PROCES	SOR	0	0	0		EFI MODE	FECTIVI	E ADDRE	ESS EGISTE	R
0	R/M	0		SOURCE		DESTINATI REGISTE			0	0	0	1	1	0	1

Instruction Fields:

Coprocessor ID field—Specifies which coprocessor in the system is to execute this instruction. Motorola assemblers default to ID = 1 for the floating-point coprocessor.

FATANH

Hyperbolic Arc Tangent (MC6888X, M68040FPSP)

FATANH

Effective Address field-Determines the addressing mode for external operands If R/M = 0, this field is unused and should be all zeros.

If R/M = 1, this field is encoded with an M68000 family addressing mode as listed in the following table

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn	(xxx).W	111	000
An	-	_	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	111	100
(An) +	011	reg. number:An			
- (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

*Only if < fmt > is byte, word, long, or single

R/M field—Specifies the source operand address mode

0 — The operation is register to register.
 1 — The operation is < ea > to register.

Source Specifier field—Specifies the source register or data format. If R/M = 0, specifies the source floating-point data register. If R/M = 1, specifies the source data format:

- 000 Long-Word Integer (L) 001 Single-Precision Real (S) 010 Extended-Precision Real (X)
- 011 Packed-Decimal Real (P)
- 100 Word Integer (W) 101 Double-Precision Real (D)
- 110 Byte Integer (B)
- Destination Register field—Specifies the destination floating- point data register. If R/ M = 0 and the source and destination fields are equal, then the input operand is taken from the specified floating-point data register, and the result is then written into the same register. If the single register syntax is used, Motorola assemblers set the source and destination fields to the same value.

5-22

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL MOTOROLA

```
Floating Point Instructions
```

FBcc	Floating-Point Branch Conditionally (MC6888X, MC68040)	FBcc
Operation:	If Condition True Then PC + d _n \rightarrow PC	
Assembler:		

Syntax: FBcc. < size > , < label > Attributes:

Size = (Word, Long)

Description: If the specified floating-point condition is met, program execution continues at the location (PC) + displacement. The displacement is a twos-complement integer that counts the relative distance in bytes. The value of the program counter used to calculate the destination address is the address of the branch instruction plus two. If the displacement size is word, then a 16- bit displacement is stored in the word iner displacement size is word, then a probability of the displacement size is long word, then a 32-bit displacement is stored in the two words immediately following the instruction operation word. The conditional specifier cc selects any one of the 32 floating- point conditional tests as described in **3.6.2 Conditional Testing**.

Floating-Point Status Register:

Condition Codes:	Not affected	
Quotient Byte:	Not affected	
Exception Byte:	BSUN	Set if the NAN condition code is set and the condition selected is an IEEE nonaware test.
	SNAN	Not Affected.
	OPERR	Not Affected.
	OVF	Not Affected.
	UNFL	Not Affected.
	DZ	Not Affected.
	INEX2	Not Affected.
	INEX1	Not Affected.
Accrued Exception Byte:		is set if the BSUN bit is set in the exception er bit is affected.

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

5-23

Floating Point Instructions

Floating Point Instructions

FB	CC		I	Floating-Point Branch Conditionally (MC6888X, MC68040)										FB	cc
Instru	uctior	n Forr	nat:												
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COP	ROCES	SOR	0	1	SIZE		CON	DITIONA	L PRED	ICATE	
	16-BIT DISPLACEMENT OR MOST SIGNIFICANT WORD OF 32-BITDISPLACEMENT														
	LEAST SIGNIFICANT WORD OF 32-BIT DISPLACEMENT (IF NEEDED)														

Instruction Fields:

Size field—Specifies the size of the signed displacement. If Format = 0, then the displacement is 16 bits and is sign- extended before use. If Format = 1, then the displacement is 32 bits

Conditional Predicate field—Specifies one of 32 conditional tests as defined in Table 3-23 Floating-Point Conditional Tests.

NOTE

When a BSUN exception occurs, the main processor takes a preinstruction exception. If the exception handler returns without modifying the image of the program counter on the stack frame (to point to the instruction following the FBcc), then it must clear the cause of the exception (by clearing the NAN bit or disabling the BSUN trap), or the exception will occur again immediately upon return to the routine that caused the exception.

FCMP	Floating-Point Compare (MC6888X, MC68040)	FCMP
Operation:	FPn – Source	
Assembler Syntax:	FCMP. < fmt > < ea > ,FPn FCMP.X FPm,FPn	
Attributes:	Format = (Byte, Word, Long, Single, Double, Extended	d, Packed)

Description: Converts the source operand to extended precision (if necessary) and subtracts the operand from the destination floating- point data register. The result of the subtraction is not retained, but it is used to set the floating-point condition codes as described in 3.6.2 Conditional Testing

Operation Table: The entries in this operation table differ from those of the tables describing most of the floating-point instructions. For each combination of input operand types, the condition code bits that may be set are indicated. If the name of a condition code bit is given and is not enclosed in brackets, then it is always set. If the name of a condition code bit is enclosed in brackets, then that bit is either set or cleared, as appropriate. If the name of a condition code bit is not given, then that bit is always cleared by the operation. The infinity bit is always cleared by the FCMP instruction since it is not used by any of the conditional predicate equations. Note that the NAN bit is not shown since NANs are always handled in the same manner (as described in **1.6.5 Not-A-Numbers**).

					SOURCE					
DESTINATION		+	In Range –	+	Zero	-	+	Infinity	-	
In Range	+	{NZ} N	none {NZ}	none N		none N			none none	
Zero –	+	NN	none	Z NZ		Z NZ	NN		none none	
Infinity	+	none N		none N		none N	Z N		none NZ	

NOTE: If the source operand is a NAN, refer to 1.6.5 Not-A-Numbers for more information

FCMP **FCMP** Floating-Point Compare (MC6888X, MC68040)

Floating-Point Status Register

 anng i onn otatao nogion		
Condition Codes:	Affected as	described in the preceding operation table.
Quotient Byte:	Not affected	
Exception Byte:	BSUN	Cleared
	SNAN	Refer to 1.6.5 Not-A-Numbers.
	OPERR	Cleared
	OVFL	Cleared
	UNFL	Cleared
	DZ	Cleared
	INEX2	Cleared
	INEX1	If < fmt > is packed, refer to exception processing in the appropriate user's manual; cleared otherwise.

Accrued Exception Byte: Affected as described in exception processing in the appro-priate user's manual.

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COF	ROCES	SOR	0	0	0		EFI MODE	FECTIVE	E ADDRE	ESS EGISTE	R
0	R/M	0		PECIFIE			STINATI		0	0	0	1	1	0	0

FCMP

FCMP

Floating-Point Compare (MC6888X, MC68040)

Instruction Fields:

Effective Address field—Determines the addressing mode for external operands. If R/M = 0, this field is unused and should be all zeros. If R/M = 1, specifies the location of the source operand location. Only data

addressing modes can be used as listed in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	111	100
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

R/M field—Specifies the source operand address mode

0 - The operation is register to register

1 - The operation is < ea > to register.

Source Specifier field—Specifies the source register or data format. If R/M = 0, specifies the source floating-point data register.

If R/M = 1, specifies the source data format: 000 — Long-Word Integer (L) 001 — Single-Precision Real (S)

- 010 Extended-Precision Real (X) 011 Packed-Decimal Real (P)* 100 Word Integer (W)
- 101 Double-Precision Real (D)
- 10 Double-Freckion Real (D) 110 Byte Integer (B) This encoding in the MC68040 will cause an unimplemented data type exception to allow emulation in software.

Destination Register field—Specifies the destination floating- point data register.

5-26

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

5-27

Floating Point Instructions

Floating Point Instructions

FCOS	Cosine (MC6888X, M68040FPSP)	FCOS
Operation:	Cosine of Source \rightarrow FPn	
Assembler Syntax:	FCOS. < fmt > < ea > ,FPn FCOS.X FPm,FPn FCOS.X FPn	
Attributes:	Format = (Byte, Word, Long, Single, Double, Extende	d, Packed)

Description: Converts the source operand to extended precision (if necessary) and calculates the cosine of that number. Stores the result in the destination floating-point calculates the cosine of that multiple. Solves the result in the destination including-point data register. This function is not defined for source operands of \pm infinity. If the source operand is not in the range of $[-2\pi...+2\pi]$, then the argument is reduced to within that range before the cosine is calculated. However, large arguments may lose accuracy during reduction, and very large arguments (greater than approximately 10²⁰) lose all accuracy. The result is in the range of [-1...+1].

Operation Table:

					SOURCE ¹				
DESTINATION	+	In Range	-	+	Zero	-	+	Infinity	-
Result		Cosine			+ 1.0			NAN ²	
NOTES:									

If the source operand is a NAN, refer to 1.6.5 Not-A-Numbers for more information.
 Sets the OPERR bit in the floating-point status register exception byte.

FCOS FCOS Cosine (MC6888X, M68040FPSP) Floating-Point Status Register: Condition Codes: Affected as described in 3.6.2 Conditional Testing Quotient Byte: Not affected BSUN Exception Byte: Cleared SNAN Refer to 1.6.5 Not-A-Numbers. OPERR Set if the source operand is \pm infinity; cleared otherwise. OVEL Cleared UNFL Cleared DZ Cleared INFX2 Refer to inexact result in the appropriate user's manual. If < fmt > is packed, refer to inexact result on decimal input in the appropriate user's INFX1 manual; cleared otherwise. Accrued Exception Byte: Affected as described in IEEE exception and trap compatibility in the appropriate user's manual.

Instruction Format:

	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
ſ		4			COP	ROCES	SOR	0	0	0		EFI	FECTIVE	ADDRE	SS	
	'	' '		l '		ID		0	0	0		MODE		F	EGISTE	R
	0	R/M	0		SOURCE			STINATI EGISTE		0	0	1	1	1	0	1

Instruction Fields:

Coprocessor ID field—Specifies which coprocessor in the system is to execute this instruction. Motorola assemblers default to ID = 1 for the floating-point coprocessor.

FCOS

Cosine (MC6888X, M68040FPSP)

Effective Address field—Determines the addressing mode for external operands If R/M = 0, this field is unused and should contain zeros.

If R/M = 1, this field is encoded with an M68000 family addressing mode as listed in the following table:

FCOS

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	111	100
(An) +	011	reg. number:An			
- (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

*Only if < fmt > is byte, word, long, or single R/M field—Specifies the source operand address mode

0 — The operation is register to register 1 — The operation is < ea > to register.

Source Specifier field—Specifies the source register or data format. If R/M = 0, specifies the source floating-point data register. If R/M = 1, specifies the source data format:

- 000 Long-Word Integer (L) 001 Single-Precision Real (S) 010 Extended-Precision Real (X)
- 011 Packed-Decimal Real (P)

- 100 Word Integer (W) 101 Double-Precision Real (D) 110 Byte Integer (B)
- Destination Register field—Specifies the destination floating- point data register. If R/ M = 0 and the source and destination fields are equal, then the input operand is taken from the specified floating-point data register, and the result is written into the same register. If the single register syntax is used, Motorola assemblers set the source and destination fields to the same value.

5-30

Floating Point Instructions

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

FCOSH

Hyperbolic Cosine (MC6888X, M68040FPSP)

Hyperbolic Cosine of Source $\rightarrow \mathsf{FPn}$

Operation: Assembler Syntax:

FCOSH. < fmt > < ea > .FPn FCOSH.X FPm,FPn FCOSH.X FPn

Format = (Byte, Word, Long, Single, Double, Extended, Packed)

Description: Converts the source operand to extended precision (if necessary) and calculates the hyperbolic cosine of that number. Stores the result in the destination floating-point data register.

Operation Table:

		SOURCE	
DESTINATION	+ In Range –	+ Zero –	+ Infinity –
Result	Hyperbolic Cosine	+ 1.0	+ inf

NOTE: If the source operand is a NAN, refer to 1.6.5 Not-A-Numbers for more inform

Floating-Point Status Register:

Condition Codes:	Affected as	described in 3.6.2 Conditional Testing.
Quotient Byte:	Not affected	
Exception Byte:	BSUN SNAN OPERR	Cleared Refer to 1.6.5 Not-A-Numbers . Cleared
	OVFL	Refer to overflow in the appropriate user's manual.
	UNFL	Cleared
	DZ	Cleared
	INEX2	Refer to inexact result in the appropriate user's manual.
	INEX1	If < fmt > is packed, refer to inexact result on decimal input in the appropriate user's manual; cleared otherwise.
Accrued Exception Byte:		described in IEEE exception and trap compati- ppropriate user's manual.

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

5-31

Floating Point Instructions

FCOSH FCOSH FCOSH FCOSH Hyperbolic Cosine (MC6888X, M68040FPSP) Hyperbolic Cosine (MC6888X, M68040FPSP) Instruction Format: R/M field—Specifies the source operand address mode. 0 — The operation is register to register 1 — The operation is < ea > to register COPROCES ID FFFFC 1 1 1 0 0 0 Source Specifier field-Specifies the source register or data format. NOD 0 R/M 0 0 If R/M = 0, specifies the source floating-point data register If R/M = 1, specifies the source data format: 0 1 0 REGISTER SPECIFIER Instruction Fields: 000 - Long-Word Integer (L) 001 — Single-Precision Real (S) 010 — Extended-Precision Real (X) 011 — Packed-Decimal Real (P) Coprocessor ID field—Specifies which coprocessor in the system is to execute this instruction. Motorola assemblers default to ID = 1 for the floating-point coprocessor. Effective Address field—Determines the addressing mode for external operands. 100 — Word Integer (W) 101 — Double-Precision Real (D) 110 — Byte Integer (B) If R/M = 0, this field is unused and should be all zeros. If R/M = 1, this field is encoded with an M68000 family addressing mode as listed in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn	(xxx).W	111	000
An	-	—	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	111	100
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

*Only if < fmt > is byte, word, long, or single

Destination Register field—Specifies the destination floating- point data register. If R/ M = 0 and the source and destination fields are equal, then the input operand is taken from the specified floating-point data register, and the result is written into the same register. If the single register syntax is used, Motorola assemblers set the source and destination fields to the same value.

FCOSH

MOTOROLA

FDBcc	Floating-Point Test Condition, Decrement, and Branch (MC6888X, MC68040)	FDBcc	FDBCC Floating-Point Test Condition, Decrement, and Branch (MC6888X, MC68040)
	Condition True Then No Operation Ise Dn – 1 \rightarrow Dn If Dn \neq – 1 Then PC + d _n \rightarrow PC Else Execute Next Instruction		Instruction Format: 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0 1 1 1 1 1 COPROCESSOR 0 0 1 0 0 1 COUNT REGISTER 0 0 0 0 0 0 0 0 0 1 COUNT REGISTER 16-BIT DISPLACEMENT 16-BIT DISPLACEMENT 0
Assembler			Instruction Fields:
Syntax: F	DBcc Dn, < label >		Count Decister field. Specifics data register that is used as the counter
Attributes: U	Insized		Count Register field—Specifies data register that is used as the counter.
condition, a coun the condition to d so, execution or decremented by continues with th at the location s extended 16-bit address calculati	E Not affected. Not affected. BSUN Set if the NAN condition condition selected is an SNAN Not Affected. OPERR Not Affected. OVFL Not Affected. UNFL Not Affected. DZ Not Affected. NEX2 Not Affected. INEX1 Not Affected.	he instruction first tests p has been met, and if irruction stream. If the e counter register are austed, and execution 1, execution continues counter plus the sign- ter used in the branch point conditional tests on code is set and the n IEEE nonaware test.	Conditional Predicate field—Specifies one of the 32 floating-point conditional tests at described in 3.6.2 Conditional Testing . Displacement field—Specifies the branch distance (from the address of the instruction plus two) to the destination in bytes. NOTE The terminating condition is like that defined by the UNTIL loop constructs of high-level languages. For example: FDBOLT can be stated as "decrement and branch until ordered less than". There are two basic ways of entering a loop: at the beginning or by branching to the trailing FDBcc instruction. If a loop structure terminated with FDBc is entered at the beginning, the control counter must be one less than the number of loop executions desired. This count is useful for indexed addressing modes and dynamically specified bit operations. However, when entering a loop by branching directly to the trailing FDBcc instruction, the count for is zero when the loop is entered, the FDBcc is restruction does not branch, causing a complete bypass of the main loop. When a BSUN exception occurs, a preinstruction exception is taken by the main processor. If the exception handler returns without modifying the image of the exception handler returns without modifying the BSUN trap), or the exception will occur again immediately upon return to the routine that caused the exception.
Accrued Exception		is set in the exception	mediately upon return to the routine that caused the exception.

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL MOTOROLA 5-34 MOTOROLA M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

Floating Point Instructions

5-35

Floating Point Instructions

FDIV	Floating-Point Divide (MC6888X, MC68040)	FDIV	FDIV		Point Divide FDIV 83X, MC68040)
Operation:	$FPn \div Source \to FPn$		Floating-Point Status Reg	gister:	
Assembler	FDIV. < fmt > < ea > ,FPn		Condition Codes:	Affected a	s described in 3.6.2 Conditional Testing.
Syntax:	FDIV.X FPm,FPn		Quotient Byte:	Not affecte	ed.
	*FrDIV. < fmt > < ea > ,FPn *FrDIV.X FPm,FPn where r is rounding precision, S or D		Exception Byte:	BSUN SNAN	Cleared Refer to 1.6.5 Not-A-Numbers .
	*Supported by MC68040 only			OPERR	Set for $0 \div 0$ or infinity \div infinity; cleared otherwise.
Attributes:	Format = (Byte, Word, Long, Single, Double, Ext	ended, Packed)		OVFL	Refer to exception processing in the appropriate user's manual.
that numbe	proverts the source operand to extended precision (if n er into the number in the destination floating-point da			UNFL	Refer to exception processing in the appropriate user's manual.
result in the	e destination floating-point data register.			DZ	Set if the source is zero and the destination is

FDIV will round the result to the precision selected in the floating-point control register. FSDIV and FDDIV will round the result to single or double precision, respectively, regardless of the rounding precision selected in the floating-point control register.

Operation Table:

			SOURCE ¹							
DESTINATION	i	+	In Range	-	+	Zero	-	+	Infinity	-
In Range	+		Divide		+ inf ² – inf ²		- inf ² + inf ²	+ 0.0 - 0.0		-0.0 +0.0
Zero		+ 0.0 - 0.0		+ 0.0 + 0.0		NAN ³		+ 0.0 - 0.0		- 0.0 + 0.0
Infinity		+ inf – inf			+ inf – inf		– inf + inf		NAN‡	

NOTES: 1. If the source operand is a NAN, refer to **1.6.5 Not-A-Numbers** for more information. 2. Sets the DZ bit in the floating-point status register exception byte. 3. Sets the OPERR bit in the floating-point status register exception byte.

ared the the Set if the source is zero and the destination is in range; cleared otherwise. DZ INEX2 Refer to exception processing in the appropriate user's manual. If < fmt > is packed, refer to exception processing in the appropriate user's manual; cleared otherwise. INEX1 Accrued Exception Byte: Affected as described in exception processing in the appro-priate user's manual.

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COF	PROCES	SOR	0	0	0		EFF MODE	FECTIVE	ADDRE	ESS EGISTE	R
0	R/M	0		SOURCE			STINATI				C	OPMOD	E		

5-36

Floating-Point Divide (MC6888X, MC68040)

FDIV

MOTOROLA

Instruction Fields:

FDIV

Effective Address field—Determines the addressing mode for external operands.

If R/M = 0, this field is unused and should be all zeros. If R/M = 1, specifies the location of the source operand location. Only data

addressing modes can be used as listed in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Registe
Dn*	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	111	100
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

*Only if < fmt > is byte, word, long, or single

R/M field—Specifies the source operand address mode.

0 - The operation is register to register.

1 — The operation is < ea > to register.

Source Specifier field—Specifies the source register or data format. If R/M = 0, specifies the source floating-point data register.

- If RVM = 0, specifies the source localing-point If RVM = 1, specifies the source data format: 000 Long-Word Integer (L) 001 Single-Precision Real (S) 010 Extended-Precision Real (X) 011 Packed-Decimal Real (P)* 100 Word Integer (W) 101 Durble Parcinics Real (D)

101 — Double-Precision Real (D) 110 — Byte Integer (B) "This encoding in the MC68040 will cause an unimplemented data type exception to allow emulation in software.

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

FDIV

FDIV

Floating-Point Divide (MC6888X, MC68040)

Destination Register field—Specifies the destination floating- point data register. Opmode field—Specifies the instruction and rounding precision.

0100000	FDIV	Rounding p control regi
		control regi
1100000	FSDIV	Single-prec
1100100	FDDIV	Double-pre

precision specified by the floating- point jister. cision rounding specified. Double-precision rounding specified.

MOTOROLA

FETOX

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

Floating Point Instructions

5-38

FETOX	e ^x (MC6888X, M68040FPSP)	FETOX
Operation:	$e^{Source} \to FPn$	
Assembler Syntax: Syntax:	FETOX. < fmt > < ea > ,FPn FETOX.X FPm,FPn FETOX.X FPn	
Attributes:	Format = (Byte, Word, Long, Single, Double, Extende	ed, Packed)

Description: Converts the source operand to extended precision (if necessary) and calculates e to the power of that number. Stores the result in the destination floating point data register

Operation Table:

		SOURCE							
DESTINATION	+	In Range	-	+	Zero	-	+	Infinity	-
Result		e ^x			+ 1.0		+ inf		+0.0

NOTE: If the source operand is a NAN, refer to 1.6.5 Not-A-Numbers for more information

Floating-Point Status Register: dition Code

ating-Point Status Registe	er:	
Condition Codes:	Affected as	described in 3.6.2 Conditional Testing.
Quotient Byte:	Not affected	l.
Exception Byte:	BSUN SNAN OPERR OVFL	Cleared Refer to 1.6.5 Not-A-Numbers . Cleared Refer to overflow in the appropriate user's
	UNFL	manual. Refer to underflow in the appropriate user's manual.
	DZ	Cleared
	INEX2	Refer to inexact result in the appropriate user's manual.
	INEX1	If < fmt > is packed, refer to inexact result on decimal input in the appropriate user's manual; cleared otherwise.
Accrued Exception Byte:		described in IEEE exception and trap compati- appropriate user's manual.

([bd,An,Xn],od)	110	reg. number:An
([bd,An],Xn,od)	110	reg. number:An
*Only if < fmt > is byte,	word, lon	g, or single.

5-40

FETOX

111 011

111

011

([bd,PC,Xn],od)

([bd,PC],Xn,od)

Floating Point Instructions

5-39

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COF	ROCES	SOR	0	0	0		EFI MODE	FECTIVE		ESS EGISTE	R
0	R/M	0		SOURCE		DESTINATION REGISTER			0	0	0	1	1	0	0

e^x (MC6888X, M68040FPSP)

Instruction Fields:

Coprocessor ID field—Specifies which coprocessor in the system is to execute this instruction. Motorola assemblers default to ID = 1 for the floating-point coprocessor.

Effective Address field—Determines the addressing mode for external operands. If R/M = 0, this field is unused and should be all zeros. If R/M = 1, this field is encoded with an M68000 family addressing mode as listed in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn	(xxx).W	111	000
An	-	_	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	111	100
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011

reg. number:An

Floating	Point	Instructi	ons
----------	-------	-----------	-----

FETOX

(MC6888X, M68040FPSP)

R/M field—Specifies the source operand address mode 0 — The operation is register to register.

1 - The operation is < ea > to register.

Source Specifier Field—Specifies the source register or data format. If R/M = 0, specifies the source floating-point data register. If R/M = 1, specifies the source data format: 000 — Long-Word Integer (L) 001 — Single-Precision Real (S)

- 010 Extended-Precision Real (X) 011 Packed-Decimal Real (P)*
- 100 Word Integer (W) 101 Double-Precision Real (D) 110 Byte Integer (B)
- Destination Register field-Specifies the destination floating- point data register. If R/ M = 0 and the source and destination fields are equal, then the input operand is taken from the specified floating-point data register, and the result is written into the same register. If the single register syntax is used, Motorola assemblers set the source and destination fields to the same value.

FETOXM1

Operation:

Attributes:

e^x – 1 (MC6888X, M68040FPSP)

 $e^{Source} - 1 \rightarrow FPn$

FETOXM1. < fmt > < ea > .FPn Assembler Syntax: FETOXM1.X FPm,FPn FETOXM1.X FPn

Format = (Byte, Word, Long, Single, Double, Extended, Packed)

Description: Converts the source operand to extended precision (if necessary) and calculates e to the power of that number. Subtracts one from the value and stores the result in the destination floating-point data register.

Operation Table

	SOURCE							
DESTINATION	+ In Range	- +	Zero -	+	Infinity	-		
Result	e ^x – 1	+ 0.0	- 0.) + inf		-1.0		
NOTE: If the source operation	nd is a NAN, refer to 1.	6.5 Not-A-Nu	mbers for more i	nforma	tion.			

Floating-Point Status Register:

ional Testing.
mbers.
e appropriate user's
e appropriate user's
in the appropriate
r to inexact result on appropriate user's se.
on and trap compati-
r

5-42

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

0 ٥

FETOX

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

5-43

Floating Point Instructions

FETOXM1 FETOXM1 e^x – 1 (MC6888X, M68040FPSP) Instruction Format: COPROCESSOR EFFECTIVE ADDRESS 1 1 1 0 0 0 NODE

R/M Instruction Fields:

0

SPECIFIER

0

5-44

Coprocessor ID field—Specifies which coprocessor in the system is to execute this instruction. Motorola assemblers default to ID = 1 for the floating-point coprocessor

0

0 0

Effective Address field—Determines the addressing mode for external operands. If R/M = 0, this field is unused and should be all zeros. If R/M = 1, this field is encoded with an M68000 family addressing mode as listed in

DESTINATIO

the following table

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	111	100
(An) +	011	reg. number:An			
- (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

*Only if < fmt > is byte, word, long, or single

FETOXM1

FETOXM1 e^x – 1 (MC6888X, M68040FPSP)

Floating Point Instructions

R/M field-Specifies the source operand address mode 0 — The operation is register to register

1 — The operation is < ea > to register

Source Specifier Field-Specifies the source register or data format.

- If R/M = 0, specifies the source floating-point data register. If R/M = 1, specifies the source data format:

 - 000 Long-Word Integer (L) 001 Single-Precision Real (S) 010 Extended-Precision Real (X) 011 Packed-Decimal Real (P)
- 100 Word Integer (W) 101 Double-Precision Real (D) 110 Byte Integer (B)
- Destination Register field—Specifies the destination floating- point data register. If R/ M = 0 and the source and destination fields are equal, then the input operand is taken from the specified floating-point data register, and the result is written into the same register. If the single register syntax is used, Motorola assemblers set the source and destination fields to the same value.

FGETEXP FGETEXP Get Exponent (MC6888X, M68040FPSP) Exponent of Source \rightarrow FPn Operation: FGETEXP. < fmt > < ea > ,FPn Assemble

Syntax: FGETEXP.X FPm,FPn FGETEXP.X FPn

Format = (Byte, Word, Long, Single, Double, Extended, Packed) Attributes:

Description: Converts the source operand to extended precision (if necessary) and extracts the binary exponent. Removes the exponent bias, converts the exponent to an extended-precision floating- point number, and stores the result in the destination floating- point data register.

Operation Table:

			SOURCE ¹			
DESTINATION	+ In Range	- +	Zero	-	+ Infinity	-
Result	Exponent	+ 0.	C	- 0.0	NAN ²	
NOTES:	Exponent	1	-			

If the source operand is a NAN, refer to 1.6.5 Not-A-Numbers for more information.
 Sets the OPERR bit in the floating-point status register exception byte.

ting-Point Status Register: Flo

loating-Point Status Registe	er:	
Condition Codes:	Affected as o	described in 3.6.2 Conditional Testing.
Quotient Byte:	Not affected	
Exception Byte:	BSUN SNAN OPERR	Cleared Refer to 1.6.5 Not-A-Numbers. Set if the source is \pm infinity; cleared
	OVFL UNFL DZ INEX2	otherwise. Cleared Cleared Cleared Cleared
	INEX1	If < fmt > is packed, refer to inexact result on decimal input in the appropriate user's manual; cleared otherwise.
Accrued Exception Byte:		described in IEEE exception and trap compati- ppropriate user's manual.

5-46

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

FGETEXP

FGETEXP

Get Exponent (MC6888X, M68040FPSP)

FGETEXP

Instruction Format:

13 12 4 3 2 EFFECTIVE ADDRESS 1 1 1 1 0 0 0 ID MODE REGISTER SOURCE DESTINA R/M 0 0 0 0 1 1 1 0 1 SPECIFIER REGISTER

Instruction Fields:

Coprocessor ID fiel	d-Specifies whi	ch coprocess	sor in the	system	is to	o execute this
instruction. Me	otorola assemble	ers default	to ID =	1 for	the	floating-point
coprocessor.						

Effective Address field—Determines the addressing mode for external operands.

If R/M = 0, this field is unused and should be all zeros. If R/M = 1, this field is encoded with an M68000 family add sing mode as listed in

$r_{\rm V}/v_{\rm I} = 1, u_{\rm III}$	s lielu is eliu	oueu with ai	1 WOODOD Tarring	audiessing mu	Jue as listeu ili
the followin	g table:				

Addressing Mode	Mode	Register	[Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn		(xxx).W	111	000
An	-	-		(xxx).L	111	001
(An)	010	reg. number:An		# < data >	111	100
(An) +	011	reg. number:An				
– (An)	100	reg. number:An				
(d ₁₆ ,An)	101	reg. number:An		(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An		(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An		(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An		([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An		([bd,PC],Xn,od)	111	011

if < fmt > is byte, word, long, or single R/M field—Specifies the source operand address mode

0 — The operation is register to register. 1 — The operation is < ea > to register.

MOTOROLA

5-47

Floating Point Instructions

Floating Point Instructions

FGETEXP

Get Exponent (MC6888X, M68040FPSP)

Source Specifier field-Specifies the source register or data format.

 Ource Specifies the source floating-point data f

 If R/M = 0, specifies the source floating-point data register.

 If R/M = 1, specifies the source data format:

 000 — Long-Word Integer (L)

 001 — Single-Precision Real (S)

 010 — Extended-Precision Real (X)

 011 — Packed-Decimal Real (P)

 000

 001 — Word Integer (M0)

- 100 Word Integer (W) 101 Double-Precision Real (D) 110 Byte Integer (B)
- Destination Register field—Specifies the destination floating- point data register. If R/ M = 0 and the source and destination fields are equal, then the input operand is taken from the specified floating-point data register, and the result is written into the same register. If the single register syntax is used, Motorola assemblers set the source and destination fields to the same value.

FGEIM	AN Get Mantissa (MC6888X, M68040FPS	
Operation:	Mantissa of Source \rightarrow FPn	
Assembler Syntax:	FGETMAN. < fmt > < ea > ,FPn FGETMAN.X FPm,FPn FGETMAN.X FPn	
Attributes:	Format = (Byte, Word, Long, Single	, Double, Extended, Packed)
	onverts the source operand to exten	

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

stores the result in the destination floating-point data register. The result is in the range [1.0...2.0] with the sign of the source mantissa, zero, or a NAN.

Operation Table:

				SOURCE1			
DESTINATION	+	In Range	- +	Zero	-	+	Infinity –
Result		Mantissa	+ 0.0		- 0.0		NAN ²
NOTES: 1. If the source operand 2. Sets the OPERR bit in						rmatio	n.
oating-Point Status Re	egiste	er:					
Condition Codes:		Affected a	s descrit	bed in 3.6	.2 Co	nditi	onal Testing.
Quotient Byte:		Not affecte	ed.				
Exception Byte:		BSUN	Clear	red			
		SNAN	Refe	r to 1.6.5	Not-A	-Nur	nbers.
		OPERR		if the s wise.	ource	is	± infinity; clear
		OVFL	Clea	red			
		UNFL	Clea	red			
		DZ	Clea	red			
		INEX2	Clea	red			
		INEX1	decir		t in	the	to inexact result appropriate use se.
Accrued Exception E	Byte:	Affected as bility in the					on and trap compa

FGETMAN

Get Mantissa (MC6888X, M68040FPSP)

FGETMAN

MOTOROLA

Instruction Format:

15	14	13	12	11 10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COPROCES	SOR	0	0	0		EFI MODE	FECTIVE	ADDRE	ESS EGISTE	R
0	R/M	0		SOURCE		STINAT		0	0	1	1	1	1	1

Instruction Fields:

- Coprocessor ID field-Specifies which coprocessor in the system is to execute this instruction. Motorola assemblers default to ID = 1 for the floating-point coprocessor.
- Effective Address field—Determines the addressing mode for external operands. If R/M = 0, this field is unused and should be all zeros. If R/M = 1, this field is encoded with an M68000 family addressing mode as listed in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	111	100
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

R/M field—Specifies the source operand address mode

0 — The operation is register to register.
1 — The operation is < ea > to register.

Get Mantissa

(MC6888X, M68040FPSP)

Floating Point Instructions

FGETMAN

Source Specifier field-Specifies the source register or data format. If R/M = 0, specifies the source floating-point data register.

- If R/M = 0, specifies the source floating-point If R/M = 1, specifies the source data format: 000 Long-Word Integer (L) 001 Single-Precision Real (S) 010 Extended-Precision Real (X) 011 Packed-Decimal Real (P) 100 Word Integer (W) 101 Double-Precision Real (D) 110 Byte Integer (B)
- Destination Register field—Specifies the destination floating- point data register. If R/ M = 0 and the source and destination fields are equal, then the input operand is taken from the specified floating-point data register, and the result is written into the same register. If the single register syntax is used, Motorola assemblers set the source and destination fields to the same value.

MOTOROLA

FINT

Floating-Point Status Register:

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

5-51

Floating Point Instructions FINT Integer Part

FINT	Integer Part (MC6888X, M68040FPSP)	FINT
Operation:	Integer Part of Source \rightarrow FPn	
Assembler Syntax:	FINT. < fmt > < ea > ,FPn FINT.X FPm,FPn FINT.X FPn	
Attributes:	Format = (Byte, Word, Long, Single, Double, Extended,	Packed)

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

Description: Converts the source operand to extended precision (if necessary), extracts the integer part, and converts it to an extended precision floating-point number. Stores the integer part, and converts it to an extended-precision floating-point number. Stores the result in the destination floating-point data register. The integer part is extracted by rounding the extended-precision number to an integer using the current rounding mode selected in the floating-point control register mode control byte. Thus, the integer part returned is the number that is to the left of the radix point when the exponent is zero, after rounding. For example, the integer part of 137.57 is 137.06 for the round-to-nearest and round-to-nearest infinity modes and 138.0 for the round-to-nearest and round-topositive infinity modes. Note that the result of this operation is a floating-point number

Operation Table:

5-50

		SOURCE							
DESTINATION	+ In Range	-	+	Zero	- +	Infinity	-		
Result	Integer		+ 0.0		- 0.0	+ inf - inf			

Condition Codes:	Affected as a	described in 3.6.2 Conditional Testing.
Quotient Byte:	Not affected	
Exception Byte:	BSUN SNAN OPERR OVFL UNFL DZ INEX2	Cleared Refer to 1.6.5 Not-A-Numbers . Cleared Cleared Cleared Cleared Refer to inexact result in the appropriate
	INEX1	user's manual. If < fmt > is packed, refer to inexact result on decimal input in the appropriate user's manual; cleared otherwise.
Accrued Exception Byte:		described in IEEE exception and trap compati- ppropriate user's manual.
Instruction Format:		

Integer Part (MC6888X, M68040FPSP)

Instruction Format:

1 1 1 COPROCESSOR 0 0 0 EFFECTIVE ADDRESS 0 R/M 0 SOURCE DESTINATION 0 0 0 0 0 1		15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0 P/M 0 SOURCE DESTINATION 0 0 0 0 0 0 1	ſ	1	1	1			0	0	0		EFI	FECTIV	TIVE ADDRESS				
		· ·					ID		0		0	MODE REGISTER					
		0	R/M	0							0	0	0	0	0	0	1

Instruction Fields:

Coprocessor ID field—Specifies which coprocessor in the system is to execute this instruction. Motorola assemblers default to ID = 1 for the floating-point coprocessor

FINT

FINT

Integer Part (MC6888X, M68040FPSP)

Effective Address field-Determines the addressing mode for external operands If R/M = 0, this field is unused and should be all zeros.

If R/M = 1, this field is encoded with an M68000 family addressing mode as listed in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	111	100
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

*Only if < fmt > is byte, word, long, or single R/M field—Specifies the source operand address mode

0 — The operation is register to register 1 — The operation is < ea > to register.

Source Specifier field-Specifies the source register or data format. If R/M = 0, specifies the source floating-point data register. If R/M = 1, specifies the source data format:

- 000 Long-Word Integer (L) 001 Single-Precision Real (S) 010 Extended-Precision Real (X)
- 011 Packed-Decimal Real (P)

- 100 Word Integer (W) 101 Double-Precision Real (D) 110 Byte Integer (B)
- Destination Register field—Specifies the destination floating- point data register. If R/ M = 0 and the source and destination fields are equal, then the input operand is taken from the specified floating-point data register, and the result is written into the same register. If the single register syntax is used, Motorola assemblers set the source and destination fields to the same value.

5-54

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

FINT



FINTRZ

Integer Part, Round-to-Zero (MC6888X, M68040FPSP)

Operation: Integer Part of Source $\rightarrow \mathsf{FPn}$ Assembler Syntax:

FINTRZ. < fmt > < ea > ,FPn FINTRZ.X FPm,FPn FINTRZ.X FPn

Format = (Byte, Word, Long, Single, Double, Extended, Packed) Attributes:

Description: Converts the source operand to extended precision (if necessary) and extracts the integer part and converts it to an extended-precision floating-point number. Stores the result in the destination floating-point data register. The integer part is stores the result in the destination locating-point data register. The integer part is extracted by rounding the extended-precision number to an integer using the round-to-zero mode, regardless of the rounding mode selected in the floating-point control register mode control byte (making it useful for FORTRAN assignments). Thus, the integer part returned is the number that is to the left of the radix point when the exponent is zero. For example, the integer part of 137.57 is 137.0; the integer part of 0.1245 x 102 is 12.0. Note that the result of this operation is a floating-point number.

Operation Table:

Γ			SOURCE							
	DESTINATION	+ In Range	-+	Zero	-	+	Infinity	-		
	Result	Integer, Forced Round-to- Zero	+ (0.0	- 0.0	+ inf		-inf		

NOTE: If the source operand is a NAN, refer to 1.6.5 Not-A-Numbers for more information

MOTOROLA

FINTRZ

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

Floating Point Instructions .___

FINTRZ		Round-to-Zero FINTRZ M68040FPSP)
Floating-Point Status Re	gister:	
Condition Codes:	Affected as	s described in 3.6.2 Conditional Testing.
Quotient Byte:	Not affecte	d.
Exception Byte:	BSUN	Cleared
	SNAN	Refer to 1.6.5 Not-A-Numbers.
	OPERR	Cleared
	OVFL	Cleared
	UNFL	Cleared
	DZ	Cleared
	INEX2	Refer to inexact result in the appropriate user's manual.
	INEX1	If < fmt > is packed, refer to inexact result on decimal input in the appropriate user's manual; cleared otherwise.
Accrued Exception B		s described in IEEE exception and trap compati- appropriate user's manual.

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COF	PROCES	SOR	0	0	0		EFI MODE	ECTIVE	ADDRE	ESS EGISTE	R
0	R/M	0		SOURCE			STINAT		0	0	0	0	0	1	1

Instruction Fields:

Coprocessor ID field-Specifies which coprocessor in the system is to execute this instruction. Motorola assemblers default to ID = 1 for the floating-point coprocessor

Floating Point Instructions

5-55

Integer Part, Round-to-Zero (MC6888X, M68040FPSP)

FINTRZ

Effective Address field—Determines the addressing mode for external operands. If R/M = 0, this field is unused and should be all zeros. If R/M = 1, this field is encoded with an M68000 family addressing mode as listed in the following table

Addressing Mode	Mode	Register	ĺ	Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn		(xxx).W	111	000
An	-	-		(xxx).L	111	001
(An)	010	reg. number:An		# < data >	111	100
(An) +	011	reg. number:An				
– (An)	100	reg. number:An				
(d ₁₆ ,An)	101	reg. number:An		(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An		(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	ľ	(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An		([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	Ì	([bd,PC],Xn,od)	111	011

R/M field—Specifies the source operand address mode

- 0 The operation is register to register.
 1 The operation is < ea > to register.

Source Specifier field—Specifies the source register or data format. If R/M = 0, specifies the source floating-point data register.

- If RM = 1, specifies the source data format: 000 Long-Word Integer (L) 001 Single-Precision Real (S) 010 Extended-Precision Real (X)

 - 011 Packed-Decimal Real (P) 100 Word Integer (W) 101 Double-Precision Real (D)

 - 110 Byte Integer (B)
- Destination Register field—Specifies the destination floating- point data register. If R/ M = 0 and the source and destination fields are equal, then the input operand is taken from the specified floating-point data register, and the result is written into the same register. If the single register syntax is used, Motorola assemblers set the source and destination fields to the same value.

FINTRZ

less than zero Operation Table:

DESTINATION

Result

Floating-Point Status Register: Condition Codes:

Accrued Exception Byte:

Quotient Byte:

Exception Byte:

NOTE

FLOG10

Operation:

Assemble Syntax:

Attributes:

FLOG10

Infinity

NAN

+ inf

Set if the source operand is < 0; cleared

Set if the source is + 0: cleared otherwise

Refer to inexact result in the appropriate

If < fmt > is packed, refer to inexact result on decimal input in the appropriate user's manual; cleared otherwise.

FLOG10

FLOG10

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COPROCESSOR ID		0	0	0	EFFECTIV MODE			E ADDRESS REGISTER			
0	R/M	0				STINATI		0	0	1	0	1	0	1	

Log₁₀ (MC6888X, M68040FPSP)

Instruction Fields:

Coprocessor ID	field—Spe	cifies which	coproces	sor	in t	he :	sys	stem	is to	o execute this
instruction.	Motorola	assemblers	default	to	ID	=	1	for	the	floating-point
coprocesso	r.									

Effective Address field—Determines the addressing mode for external operands. If R/M = 0, this field is unused and should be all zeros. If R/M = 1, this field is encoded with an M68000 family addressing mode as listed in

the following table:	

Addressing Mode	Mode	Register	1	Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn		(xxx).W	111	000
An	-	-		(xxx).L	111	001
(An)	010	reg. number:An		# < data >	111	100
(An) +	011	reg. number:An				
– (An)	100	reg. number:An				
(d ₁₆ ,An)	101	reg. number:An		(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An		(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An		(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An		([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An		([bd,PC],Xn,od)	111	011
Only if a feat a in byte	word lor	a or single			•	

d, long, or single

manual, oldared offer wide.
Affected as described in IEEE exception and trap compati- bility in the appropriate user's manual.

5-58

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

Log₁₀ (MC6888X, M68040FPSP)

Description: Convert the source operand to extended precision (if necessary) and calculates the logarithm of that number using base 10 arithmetic. Stores the result in the destination floating-point data register. This function is not defined for input values

Format = (Byte, Word, Long, Single, Double, Extended, Packed)

SOURCE

Zero

Affected as described in 3.6.2 Conditional Testing

Refer to 1.6.5 Not-A-Numbers

Cleared

otherwise

Cleared

Cleared

user's manual.

 Log_{10} of Source \rightarrow FPn

FLOG10.X FPm,FPn

FLOG10.X FPn

FLOG10. < fmt > < ea > .FPn

In Range

If the source operand is a NAN, refer to 1.6.5 Not-A-Numbers for m
 Sets the OPERR bit in the floating-point status register exception byt
 Sets the DZ bit in the floating-point status register exception byte.

Not affected. BSUN

SNAN

OVFL

UNFL

INEX2

INEX1

DZ

OPERR

NAN

MOTOROLA

FLOG10

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

5-59

Floating Point Instructions

Floating Point Instructions

FLOG10

Log₁₀ (MC6888X, M68040FPSP)

- R/M field—Specifies the source operand address mode 0 — The operation is register to register.
 1 — The operation is < ea > to register.
- Source Specifier field-Specifies the source register or data format.
 - If R/M = 0, specifies the source floating-point data register. If R/M = 1, specifies the source data format:

 - 000 Long-Word Integer (L)

 - 000 Long-Word Integer (L) 001 Single-Precision Real (S) 010 Extended-Precision Real (X) 011 Packed-Decimal Real (P)

 - 100 Word Integer (W) 101 Double-Precision Real (D) 110 Byte Integer (B)
- Destination Register field—Specifies the destination floating- point data register. If R/ M = 0 and the source and destination fields are equal, then the input operand is taken from the specified floating-point data register, and the result is written into the same register. If the single register syntax is used, Motorola assemblers set the source and destination fields to the same value.

FLOG2	Log ₂ (MC6888X, M68040FPSP)	FLOG2				
Operation:	$Log_2 \text{ of Source} \to FPn$					
Assembler Syntax:	FLOG2. < fmt > < ea > ,FPn FLOG2.X FPm,FPn FLOG2.X FPn					
Attributes:	Format = (Byte, Word, Long, Single, Double, Exten	ided, Packed)				
Description: Converts the source operand to extended precision (if necessary) and calculates the logarithm of that number using base two arithmetic. Stores the result in the destination floating- point data register. This function is not defined for input values less than zero.						

Operation Table:

	SOURCE ¹								
DESTINATION	+	In Range	- + Zero	- +	Infinity	-			
Result	Log ₂	NAN	² – inf ³	+ inf	NAI	N ²			
NOTES: 1. If the source operand is a NAN, refer to 1.6.5 Not-A-Numbers for more information. 2. Sets the OPERR bit in the floating-point status register exception byte. 3. Sets the DZ bit in the floating-point status register exception byte. Floating-Point Status Register:									
Condition Codes:	egion	Affected as described in 3.6.2 Conditional Testing.							
Quotient Byte:		Not affected	l.						
Exception Byte:		BSUN SNAN OPERR OVFL UNFL DZ INEX2 INEX1	Cleared Cleared Set if the source Refer to inexact user's manual. If < fmt > is packet	is < 0; c is \pm 0; c t result ed, refer n the	 c); cleared otherwise ± 0; cleared otherwise esult in the appropriate us the appropriate us 				
Accrued Exception	Byte:	Affected as described in IEEE exception and trap compa bility in the appropriate user's manual.							

FLOG2 FLOG2 Log₂ (MC6888X, M68040FPSP)

Instruction Format:

15	14	13	12	11 10	9	8	7	6	5	4	3	2	1	0			
1	1	1	1	COPROCESSOR			0	0		EFFECTIVE ADDRESS							
· ·			' ID			' ID	ID	ID	U U		0		MODE		R	EGISTE	R
0	R/M	0				STINAT		0	0	1	0	1	1	0			

Instruction Fields:

Coprocessor ID field-Specifies which coprocessor in the system is to execute this instruction. Motorola assemblers default to ID = 1 for the floating-point coprocessor.

Effective Address field—Determines the addressing mode for external operands. If R/M = 0, this field is unused and should be all zeros. If R/M = 1, this field is encoded with an M68000 family addressing mode as listed in

the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	111	100
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

*Only if < fmt > is byte, word, long, or single

Log₂ (MC6888X, M68040FPSP)

R/M field--Specifies the source operand address mode. 0 — The operation is register to register 1 — The operation is < ea > to register.

Source Specifier field-Specifies the source register or data format. If R/M = 0, specifies the source floating-point data register. If R/M = 1, specifies the source data format: 000 — Long-Word Integer (L) 001 — Single-Precision Real (S)

- 001 Single-Precision Real (S) 010 Extended-Precision Real (X) 011 Packed-Decimal Real (P) 100 Word Integer (W) 101 Double-Precision Real (D) 110 Byte Integer (B)

- Destination Register field—Specifies the destination floating- point data register. If R/ M = 0 and the source and destination fields are equal, then the input operand is taken from the specified floating-point data register, and the result is written into the same register. If the single register syntax is used, Motorola assemblers set the source and destination fields to the same value.

5-62

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL MOTOROLA MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

5-63

Floating Point Instructions

FLOGN	Log _e (MC6888X, M68040FPSP)	FLOGN
Operation:	$Log_{e} \text{ of Source} \to FPn$	
Assembler Syntax:	FLOGN. < fmt > < ea > ,FPn FLOGN.X FPm,FPn FLOGN.X FPn	
Attributes:	Format = (Byte, Word, Long, Single, Double, Extended	ed, Packed)

Description: Converts the source operand to extended precision (if necessary) and calculates the natural logarithm of that number. Stores the result in the destination floating-point data register. This function is not defined for input values less than zero.

Operation Table:

		SOURCE						
DESTINATION	+	In Range –	+ Ze	ro –	+	Infinity	-	
Result	In(x)	NAN ²	— ir	ıf ³	+ inf		NAN ²	

2. Sets the OPERR bit in the floating-point status register exception byte 3. Sets the DZ bit in the floating-point status register exception byte.

Floating-Point Status Register:

ioating-roint Status Registe	#I .	
Condition Codes:	Affected as	described in 3.6.2 Conditional Testing.
Quotient Byte:	Not affected	
Exception Byte:	BSUN SNAN OPERR	Cleared Refer to $1.6.5$ Not-A-Numbers. Set if the source operand is < 0; cleared
	OVFL UNFL	otherwise. Cleared Cleared
	DZ INEX2	Set if the source is \pm 0; cleared otherwise Refer to inexact result in the appropriate user's manual.
	INEX1	If < fmt > is packed, refer to inexact result on decimal input in the appropriate user's manual; cleared otherwise.
Accrued Exception Byte:		described in IEEE exception and trap compati- ppropriate user's manual.

Floating Point Instructions

FLOGN

Register

000 001

100

010 011

011 011 011

FLOGN

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COP	ROCES	SOR	0	0	0		EFI MODE	FECTIVE		ESS EGISTE	R
0	R/M	0		SOURCE		DESTINATION REGISTER			0	0	1	0	1	0	0

Log_e (MC6888X, M68040FPSP)

Instruction Fields:

Coprocessor ID field—Specifies which coprocessor in the system is to execute this instruction. Motorola assemblers default to ID = 1 for the floating-point coprocessor.

Effective Address field—Determines the addressing mode for external operands. If R/M = 0, this field is unused and should be all zeros. If R/M = 1, this field is encoded with an M68000 family addressing mode as listed in

he	following	table:	
----	-----------	--------	--

Addressing Mode	Mode	Register	Addressing Mode	Mode	ſ
Dn*	000	reg. number:Dn	(xxx).W	111	Γ
An	-	-	(xxx).L	111	Γ
(An)	010	reg. number:An	# < data >	111	Γ
(An) +	011	reg. number:An			Γ
– (An)	100	reg. number:An			Γ
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	Γ
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	Γ
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	Γ
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	Γ
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	Γ

*Only if < fmt > is byte, word, long, or single

FLOG2

FLOGN

Log_e (MC6888X, M68040FPSP)

R/M field—Specifies the source operand address mode. 0 — The operation is register to register.

- 1 The operation is < ea > to register
- Source Specifier field-Specifies the source register or data format. If R/M = 0, specifies the source floating-point data register. If R/M = 1, specifies the source data format: 000 – Long-Word Integer (L) 001 – Single-Precision Real (S)

 - 010 Extended-Precision Real (X) 011 Packed-Decimal Real (P)

 - 100 Word Integer (W) 101 Double-Precision Real (D) 110 Byte Integer (B)
- Destination Register field—Specifies the destination floating- point data register. If R/ M = 0 and the source and destination fields are equal, then the input operand is taken from the specified floating-point data register, and the result is written into the same register. If the single register syntax is used, Motorola assemblers set the source and destination fields to the same value.

FLOGNP1

Operation:

Attributes:

Syntax:

Log_e (x + 1) (MC6888X, M68040FPSP)

 $\text{Log}_e \text{ of (Source + 1)} \rightarrow \text{FPn}$

FLOGNP1. < fmt > < ea > ,FPn Assembler FLOGNP1.X FPm,FPn FLOGNP1.X FPn

Format = (Byte, Word, Long, Single, Double, Extended, Packed)

Description: Converts the source operand to extended precision (if necessary), adds one to that value, and calculates the natural logarithm of that intermediate result. Stores the result in the destination floating-point data register. This function is not defined for input values less than - 1.

Operation Table:

		SOURCE ¹							
DESTINATION	+ li	n Range –	+	Zero	-	+	Infinity –		
Result	ln(x + 1)	ln(x + 1) ²	+ 0.0		- 0.0	+ inf	NAN ² 3		
NOTES									

NUTES.		
 If the source operand is a NAN 	, refer to 1.6.5 Not-A-Numbers	for more information.

- If the source operand is a rv/w, tere to 1.5.7 wor-A-numbers for more more 2.1 ff the source is -1, sets the DZ bit in the floating-point status register exception byte and returns a NAN. If the source is < -1, sets the OPERR bit in the floating-point status register exception byte and returns a NAN.
 Sets the OPERR bit in the floating-point status register exception byte.

Floating-Point Status Register:

Condition Codes:	Affected as described in 3.6.2 Conditional Testing.
Quotient Byte:	Not affected.

5-66

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

FLOGN

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

5-67

Floating Point Instructions

FLOGNP1		(x + 1) FLOGNP1 M68040FPSP)
Exception Byte:	BSUN	Cleared
	SNAN	Refer to 1.6.5 Not-A-Numbers.
	OPERR	Set if the source operand is < -1 ; cleared otherwise.
	OVFL	Cleared
	UNFL	Refer to underflow in the appropriate user's manual.
	DZ	Set if the source operand is - 1; cleared otherwise
	INEX2	Refer to inexact result in the appropriate user's manual.
	INEX1	If < fmt > is packed, refer to inexact result on decimal input in the appropriate user's manual; cleared otherwise.
Accrued Exception Byte:	Affected as	described in IEEE exception and trap compati-

Affected as described in IEEE exception and trap compatibility in the appropriate user's manual.

Instruction Format:

	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	1	1	1	1	COF	PROCES	SOR	0	0	0		EFI MODE	FECTIVE		ESS REGISTE	R
Γ	0	R/M	0		SOURCE			STINAT		0	0	0	0	1	1	0

Instruction Fields

Coprocessor ID field—Specifies which coprocessor in the system is to execute this instruction. Motorola assemblers default to ID = 1 for the floating-point coprocessor.

FLOGNP1

FLOGNP1

Floating Point Instructions

Log_e (x + 1) (MC6888X, M68040FPSP) Effective Address field-Determines the addressing mode for external operands. If R/M = 0, this field is unused and should be all zeros. If R/M = 1, this field is encoded with an M68000 family addressing mode as listed in

the following table

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	111	100
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

R/M field—Specifies the source operand address mode

- 0 The operation is register to register.
 1 The operation is < ea > to register.

Source Specifier field—Specifies the source register or data format. If R/M = 0, specifies the source floating-point data register. If R/M = 1, specifies the source data format: 000 — Long-Word Integer (L) 001 — Single-Precision Real (S) 010 — Extended-Precision Real (X)

- 011 Packed-Decimal Real (P) 100 Word Integer (W) 101 Double-Precision Real (D)
- 110 Byte Integer (B)
- Destination Register field—Specifies the destination floating- point data register. If R/ M = 0 and the source and destination fields are equal, then the input operand is taken from the specified floating-point data register, and the result is written into the same register. If the single register syntax is used, Motorola assemblers set the source and destination fields to the same value.

Syntax:

FMOD	Modulo Remainder (MC6888X, M68040FPSP)	FMOD
Operation:	Modulo Remainder of (FPn \div Source) \rightarrow FPn	
Assembler	FMOD. < fmt > < ea > .FPn	

Attributes: Format = (Byte, Word, Long, Single, Double, Extended, Packed)

Description: Converts the source operand to extended precision (if necessary) and calculates the modulo remainder of the number in the destination floating-point data register, using the source operand as the modulus. Stores the result in the destination floating-point data register and stores the sign and seven least significant bits of the quotient in the floating-point status register quotient byte (the quotient is the result of FPn + Source). The modulo remainder function is defined as:

FPn - (Source x N)

where $N = INT(FPn \div Source)$ in the round-to-zero mode

FMOD X FPm FPn

The FMOD function is not defined for a source operand equal to zero or for a destination operand equal to infinity. Note that this function is not the same as the FREM instruction, which uses the round-to-nearest mode and thus returns the remainder that is required by the IEEE Specification for Binary Floating-Point Arithmetic.

Operation Table

		SOURCE ¹						
DESTINATION	+ In Range –	+ Zero# –	+ Infinity –					
In Range +	Modulo Remainder	NAN ²	FPn ³					
Zero +	+ 0.0 - 0.0	NAN ²	+ 0.0 - 0.0					
Infinity +	NAN ²	NAN ²	NAN ²					

NOTES

OTES: 1. If the source operand is a NAN, refer to 1.6.5 Not-A-Numbers for more information. 2. Sets the OPERR bit in the floating-point status register exception byte. 3. Returns the value of FPh before the operation. However, the result is processed by the normal instruction termination procedure to round it as required. Thus, an overflow and/or inexact result may occur if the rounding predision has been changed to a smaller size since the FPn value was loaded

Floating Point Instructions FMOD

Modulo Remainder (MC6888X, M68040FPSP)

Floating-Point Status Register

FMOD

•	•		
Condition Codes:		Affected as	described in 3.6.2 Conditional Testing.
Quotient Byte:		quotient (FF	the sign and least significant seven bits of the $n+$ Source). The sign of the quotient is the R of the sign bits of the source and destination
Exception Byte:		BSUN	Cleared
		SNAN	Refer to 1.6.5 Not-A-Numbers.
		OPERR	Set if the source is zero or the destination is infinity; cleared otherwise.
		OVFL	Cleared
		UNFL	Refer to underflow in the appropriate user's manual.
		DZ	Cleared
		INEX2	Refer to inexact result in the appropriate user's manual.
		INEX1	If < fmt > is packed, in the appropriate user's manual for inexact result on decimal input; cleared otherwise.
Accrued Exception E	Byte:		described in IEEE exception and trap compati- appropriate user's manual.

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COP	COPROCESSOR ID		0	0	0		EFFECTIVE ADDRESS MODE REGISTER				
0	R/M	0		SOURCE			STINATI EGISTE		0	1	0	1	1	0	1

Instruction Fields:

Coprocessor ID field—Specifies which coprocessor in the system is to execute this instruction. Motorola assemblers default to ID = 1 for the floating-point coprocessor

MOTOROLA

5-71

Floating Point Instructions

5-70

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

Floating Point Instructions

FMOD

Modulo Remainder (MC6888X, M68040FPSP)

FMOD

Effective Address field-Determines the addressing mode for external operands. If R/M = 0, this field is unused and should be all zeros. If R/M = 1, this field is encoded with an M68000 family addressing mode as listed in

the following table

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	111	100
(An) +	011	reg. number:An			
- (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

*Only if < fmt > is byte, word, long, or single

R/M field—Specifies the source operand address mode

0 — The operation is register to register 1 — The operation is < ea > to register.

ource Specifier field—Specifies the source register or data format. If R/M = 0, specifies the source floating-point data register. If R/M = 1, specifies the source data format: 000 — Long-Word Integer (L) 001 — Single-Precision Real (S) 010 — Extended-Precision Real (X) So

011 — Packed-Decimal Real (P) 100 — Word Integer (W)

- 101 Double-Precision Real (D)
- 110 Byte Integer (B)

Destination Register field-Specifies the destination floating- point data register

FMOVE FMOVE Move Floating-Point Data Register (MC6888X, MC68040) Operation: Source → Destination Assemble FMOVE < fmt > < ea > FPn FMOVE. < fmt > < ea > ,FPn FMOVE. < fmt > FPm, < ea > FMOVE.P FPm, < ea > Dn} FMOVE.P FPm, < ea > $\{bn\}$ *FrMOVE. < fmt > < ea > ,FPn where is counding paradiate Syntax: where r is rounding precision, S or D *Supported by MC68040 only Attributes: Format = (Byte, Word, Long, Single, Double, Extended, Packed)

Description: Moves the contents of the source operand to the destination operand. Although the primary function of this instruction is data movement, it is also considered an arithmetic instruction since conversions from the source operand format to the destination operand format are performed implicitly during the move operation. Also, the source operand is rounded according to the selected rounding precision and mode.

Unlike the MOVE instruction, the FMOVE instruction does not support a memory-to-memory format. For such transfers, it is much faster to utilize the MOVE instruction to transfer the floating- point data than to use the FMOVE instruction. The FMOVE transfer the locating- point data than to use the FMOVE instruction. The FMOVE instruction only supports memory-to-register, register-to-register, and register-to-memory operations (in this context, memory may refer to an integer data register to fat format is byte, word, long, or single). The memory-to-register and register-to-reg-ister operation uses a command word encoding distinctly different from that used by the register-to-memory operation; these two operation classes are described separately

Memory-to-Register and Register-to-Register Operation: Converts the source operand to an extended-precision floating-point number (if necessary) and stores it in the destination floating-point data register. MOVE will round the result to the precision selected in the floating-point control register. FSMOVE and FDMOVE will round the result to single or double precision, respectively, regardless of the rounding precision selected in the floating-point control register. Depending on the source data formation the rounding precision, some operations may produce an inexact result. In the following table, combinations that can produce an inexact result are marked with a dot (·), but all other combinations produce produce not produce the marked with a dot (·), but all other combinations that can produce an inexact result are marked with a dot (·), but all other combinations that can produce an inexact result are marked with a dot (·), but all other combinations that can produce an inexact result are marked with a dot (·), but all other combinations that can produce produce produce and produce and produce and produce and the counter produce produce and produce other combinations produce an exact result.

FMOVE

FMOV	Έ Μον	e Floati (MC		oint E X, MCE		legist	er	FMOVE	FMOVE					
	Rounding			So	urce For	mat			l	Instr	uctior	n Fori	nat:	
	Precision	в	w	L	S	D	x	P						
	Single							•]	15	14	13	12	
	Double							•		1	1	1	1	
	Extended							1.		0	R/M	0	5	
				<u> </u>			-	-]	Instr	uctior	n Fiel	ds:	
Quotier	Floating-Point Status Regi Condition Codes: Quotient Byte: Exception Byte:		cted as affected N N RR L L (2	d. Clea Refe Clea Clea Refe appr exter clear Clea Refe appr X; cl	red r to 1.6 red opriate nded-p red oth red opriate eared er to opriate eared er to	excep e user's recisio erwise excep user's otherwi excep	tion p manu n den tion p manu se. tion p	al if the ormaliz process al if < fn process	5		lf R	ive Ac /M = 1 /M = 1 an be	0, this , spec	

Accrued Exception Byte: Affected as described in exception processing in the appropriate user's manual.

Ε

Move Floating-Point Data Register (MC6888X, MC68040)

< EA > TO REGISTER

15	14	13	12	11 10 9		8	7	6	5	4	3	2	1	0	
1	1	1	1	COPROCESSOR ID		0	0	0		EFI MODE	FECTIVE	ADDRE	ESS EGISTE	R	
0	R/M	0					STINATI EGISTE				(OPMOD	E		

Address field—Determines the addressing mode for external operands. = 0, this field is unused and should be all zeros. = 1, specifies the location of the source operand. Only data addressing modes be used as listed in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	111	100
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

R/M field—Specifies the source operand address mode

0 — The operation is register to register. 1 — The operation is < ea > to register.

5-74

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL MOTOROLA

MOTOROLA

FMOVE

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

Move Floating-Point Data Register (MC6888X, MC68040)

5-75

Floating Point Instructions

Refer to exception processing in the appropriate user's manual.

Refer to exception processing in the

Refer to exception processing in the

Set if the k-factor > + 17 or the magnitude of the decimal exponent exceeds three digits; cleared otherwise.

Refer to exception processing in the

appropriate user's manual

appropriate user's manual.

appropriate user's manual.

Affected as described in exception processing in the appropriate user's manual.

Refer to 1.6.5 Not-A-Numbers.

Cleared

Cleared

Cleared

Cleared

Cleared

Cleared

Cleared

FMOVE

Floating Point Instructions **FMOVE**

F	Μ	0	v	F
Г	IVI	υ	v	

Source Specifier field—Specifies the source register or data format.	Floating-Point Status Regi	ster (Register	-to-Memory):
If $R/M = 0$, specifies the source floating-point data register. If $R/M = 1$, specifies the source data format:	Condition Codes:	Not affecte	ed.
000 — Long-Word Integer (L)	Quotient Byte:	Not affecte	ed.
001 — Single-Precision Real (S) 010 — Extended-Precision Real (X)	Exception Byte:	BSUN	Cleared
010 — Extended-Precision Real (X) 011 — Packed-Decimal Real (P)*	< fmt > is B, W, or L	SNAN	Refer to 1.6.5 Not-A-Numbers.
100 — Word Integer (W) 101 — Double-Precision Real (D) 110 — Byte Integer (B)		OPERR	Set if the source operand is infinity or if the destination size is exceeded after conversion and rounding; cleared otherwise.
*This encoding in the MC88040 will cause an unimplemented data type exception to allow emulation in software.		OVFL UNFL	Cleared Cleared
Destination Register field—Specifies the destination floating- point data register.		DZ	Cleared
Opmode field—Specifies the instruction and rounding precision.		INEX2	Refer to exception processing in the appropriate user's manual.
0000000 FMOVE Rounding precision specified by the floating-point control register.	< fmt > is S, D, or X	INEX1 BSUN	Cleared Cleared
1000000 FSMOVE Single-precision rounding specified.		SNAN	Refer to 1.6.5 Not-A-Numbers

1000000 FSMOVE Single-precision rounding specified. 1000100 FDMOVE Double-precision rounding specified.

Register-to-Memory Operation: Rounds the source operand to the size of the specified destination format and stores it at the destination effective address. If the format of the destination format and stores if at the destination effective address. If the format of the destination is packed decimal, a third operand is required to specify the format of the resultant string. This operand, called the k-factor, is a 7-bit signed integer (twos complement) and may be specified as an immediate value or in an integer data register. If a data register contains the k-factor, only the least significant seven bits are used, and the rest of the register is ignored.

Move Floating-Point Data Register (MC6888X, MC68040)

5-76

< fmt > is P

Accrued Exception Byte:

OVFL UNFL

DZ

INEX2

INEX1

BSUN

SNAN OPERR

OVFL

UNFL

INEX2

INEX1

DZ

FMOVE Move Floating-Point Data Register (MC6888X, MC68040)

Instruction Format:

REGISTER-TO-MEMORY

15	14	13	12 11 10		9	8	7	6	5	4	3	2	1	0	
1	1	1	COPRO	COPROCESSOR ID		1	0	0	0		EFF MODE	ECTIVE	ADDRE	ESS EGISTE	R
0	1	1		DESTINATION			SOURCE					-FACTO			

Instruction Fields:

Effective Address field-Specifies the destination location. Only data alterable addressing modes can be used as listed in the following table

Addressing Mode	Mode	Register	[Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn		(xxx).W	111	000
An	-	-		(xxx).L	111	001
(An)	010	reg. number:An		# < data >	-	-
(An) +	011	reg. number:An	Ī			
– (An)	100	reg. number:An				
(d ₁₆ ,An)	101	reg. number:An		(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An		(d ₈ ,PC,Xn)	-	-
(bd,An,Xn)	110	reg. number:An	Ī	(bd,PC,Xn)	-	-
([bd,An,Xn],od)	110	reg. number:An		([bd,PC,Xn],od)	-	-
([bd,An],Xn,od)	110	reg. number:An		([bd,PC],Xn,od)	-	-

*Only if < fmt > is byte, word, long, or single

Destination Format field—Specifies the data format of the destination operand: 000 — Long-Word Integer (L)

001 — Single-Precision Real (S) 010 — Extended-Precision Real (X) 011 — Packed-Decimal Real with Static k-Factor (P{#k})*

100 — Word Integer (W) 101 — Double-Precision Real (D)

 110 — Byte Integer (B)

 111 — Packed-Decimal Real with Dynamic k-Factor (P{Dn})*

 "This encoding will cause an unimplemented data type exception in the MC68040 to allow emulation in software.

5-78

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

FMOVE

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

5-79

Floating Point Instructions ----

FMOVE	Move Floating-Point System Control Register (MC6888X, MC68040)	FMOVE
Operation:	Source \rightarrow Destination	
Assembler Syntax:	FMOVE.L < ea > ,FPCR FMOVE.L FPCR, < ea >	
Attributes:	Size = (Long)	

Description: Moves the contents of a floating-point system control register (floating-point control register, floating-point status register, or floating-point instruction address register) to or from an effective address. A 32-bit transfer is always performed, even though the system control register may not have 32 implemented bits. Unimplemented bits of a control register are read as zeros and are ignored during writes (must be zero for compatibility with future devices). For the MC68881, this instruction does not cause pending exceptions (other than protocol violations) to be reported. Furthermore, a write to the floating-point control register exception enable byte or the floating-point status register exception status byte cannot generate a new exception, regardless of the

Floating-Point Status Register: Changed only if the destination is the floating-point status register, in which case all bits are modified to reflect the value of the source operand.

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5 4 3			2	1	0
1	1	1	1	COF	COPROCESSOR ID			0	0		EF MODE	FECTIVE		ESS EGISTE	R
1	0	dr		REGISTER SELECT		0	0	0	0	0	0	0	0	0	0

FMOVE

FMOVE

Move Floating-Point Data Register (MC6888X, MC68040)

Source Register field-Specifies the source floating-point data register

k-Factor field-If the destination format is packed decimal, used to specify the format of the decimal string. For any other destination format, this field should be set to all zeros. For a static k-factor, this field is encoded with a twos-complement integer where the value defines the format as follows:

- 64 to 0—Indicates the number of significant digits to the right of the decimal point (FORTRAN "F" format).

+ 1 to + 17-Indicates the number of significant digits in the mantissa (FOR-TRAN "E" format).

- 18 to + 63—Sets the OPERR bit in the floating-point status register exception byte and treated as + 17

The format of this field for a dynamic k-factor is:

rrr0000

where "rrr" is the number of the main processor data register that contains the k-factor value

The following table gives several examples of how the k-factor value affects the format of the decimal string that is produced by the floating-point coprocessor. The format of the string that is generated is independent of the source of the k-factor (static or dynamic)

k- Factor	Source Operand Value	Destination String
- 5	+ 12345.678765	+ 1.234567877E + 4
- 3	+ 12345.678765	+ 1.2345679E + 4
- 1	+ 12345.678765	+ 1.23457E + 4
0	+ 12345.678765	+ 1.2346E + 4
+ 1	+ 12345.678765	+ 1.E + 4
+ 3	+ 12345.678765	+ 1.23E + 4
+ 5	+ 12345.678765	+ 1.2346E + 4

MOTOROLA

Floating Point Instructions

FMOVE

Move Floating-Point System Control Register (MC6888X, MC68040)

FMOVE

Instruction Fields:

Effective Address field—(Memory-to-Register) All addressing modes can be used as listed in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	000	reg. number:Dn	(xxx).W	111	000
An*	001	reg. number:An	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	111	100
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

Effective Address field—(Register-to-Memory) Only alterable addressing modes can be used as listed in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register	
Dn	000	reg. number:Dn	(xxx).W	111	000	
An*	001	reg. number:An	(xxx).L	111	001	
(An)	010	reg. number:An	# < data >	-	-	
(An) +	011	reg. number:An				
– (An)	100	reg. number:An				
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	-	
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	-	
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	-	-	
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	-	-	
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	-	_	

*Only if the source register is the floating-point instruction address register.

FMOVE

Move Floating-Point System Control Register (MC6888X, MC68040)

dr field-Specifies the direction of the data transfer

From < ea > to the specified system control register.
 From the specified system control register to < ea >

Register Select field—Specifies the system control register to be moved: 100 Floating-Point Status Register 010 Floating-Point Status Register 001 Floating-Point Instruction Address Register

FMOVE

FMOVECR

ROM Constant \rightarrow FPn Operation:

Assembler Syntax:

FMOVECR

FMOVECR.X # < ccc > .FPn

Format = (Extended)

Description: Fetches an extended-precision constant from the floating- point coprocessor on-chip ROM, rounds the mantissa to the precision specified in the floating-point control register mode control byte, and stores it in the destination floating-point data register. The constant is specified by a predefined offset into the constant ROM. The values of the constants contained in the ROM are shown in the offset table at the end of this description.

Move Constant ROM (MC6888X, M68040FPSP)

Floating-Point Status Register:

• ••	annig i onni otatao nogioti						
	Condition Codes:	Affected as described in 3.6.2 Conditional Testing.					
	Quotient Byte:	Not affected	L				
	Exception Byte:	BSUN	Cleared				
		SNAN	Cleared				
		OPERR	Cleared				
		OVFL	Cleared				
		UNFL	Cleared				
		DZ	Cleared				
		INEX2	Refer to inexact result in the appropriate user's manual.				
		INEX1	Cleared				
	Accrued Exception Byte:	Affected as described in IEEE exception and trap compati-					

ati bility in the appropriate user's manual.

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COF	ROCES	SOR	0	0	0	0	0	0	0	0	0
0	1	0	1	1	1	DESTINATION REGISTER					RC	OM OFFS	BET		

5-82

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

5-83

Floating Point Instructions

Floating Point Instructions

FMOVECR

Move Constant ROM (MC6888X, M68040FPSP)

FMOVECR

Instruction Fields:

Coprocessor ID field—Specifies which coprocessor in the system is to execute this instruction. Motorola assemblers default to ID = 1 for the floating-point coprocessor.

Destination Register field—Specifies the destination floating- point data register

ROM Offset field-Specifies the offset into the floating-point coprocessor on-chip constant ROM where the desired constant is located. The offsets for the available constants are as follows:

Offset Constant

\$00	π
\$0B	Log ₁₀ (2)
\$0C	е
\$0D	Log ₂ (e)
\$0E	Log ₁₀ (e)
\$0F	0.0
\$30	1n(2)
\$31	1n(10)
\$32	100
\$33	10 ¹
\$34	10 ²
\$35	10 ⁴
\$36	10 ⁸
\$37	10 ¹⁶
\$38	10 ³²
\$39	10 ⁶⁴
\$3A	10 ¹²⁸
\$3B	10 ²⁵⁶
\$3C	10 ⁵¹²
\$3D	10 ¹⁰²⁴
\$3E	10 ²⁰⁴⁸
\$3F	10 ⁴⁰⁹⁶
on-ch	

The on-chip ROM contains other constants useful only to the on- chip microcode routines. The values contained at offsets other than those defined above are reserved for the use of Motorola and may be different on various mask sets of the floating-point coprocessor. These undefined values yield the value 0.0 in the M68040FPSP

FMOVEM	Move Multiple Floating-Point Data Registers (MC6888X, MC68040)	FMOVEM
Operation:	$\begin{array}{l} \text{Register List} \rightarrow \text{Destination} \\ \text{Source} \rightarrow \text{Register List} \end{array}$	
Assembler Syntax:	FMOVEM.X < list > , < ea > FMOVEM.X Dn, < ea > FMOVEM.X < ea > , < list > FMOVEM.X < ea > ,I	Dn
Attributes:	Format = (Extended)	

Description: Moves one or more extended-precision numbers to or from a list of floating-point data registers. No conversion or rounding is performed during this operation, and the floating-point status register is not affected by the instruction. For the MC68881, this instruction does not cause pending exceptions (other than protocol violations) to be reported. Furthermore, a write to the floating- point control register exception enable byte or the floating-point status register exception status byte connot generate a new exception, despite the value written.

Any combination of the eight floating-point data registers can be transferred, with the selected registers specified by a user-supplied mask. This mask is an 8-bit number, where each bit corresponds to one register; if a bit is set in the mask, that register is moved. The register select mask may be specified as a static value contained in the instruction or a dynamic value in the least significant eight bits of an integer data register (the remaining bits of the register are ignored).

FMOVEM allows three types of addressing modes: the control modes, the predecrement mode, or the postincrement mode. If the effective address is one of the control addressing modes, the registers are transferred between the processor and memory starting at the specified address and up through higher addresses. The order of the transfer is from FP0 – FP7. Instruction Format

1 1 1

1 dr

12

MODE

FMOVEM

EFFECTIVE ADDRESS

REGISTER

MODE REGISTER LIST

Move Multiple Floating-Point Data Registers (MC6888X, MC68040)

If the effective address is the predecrement mode, only a register- to-memory opera-

tion is allowed. The registers are stored starting at the address contained in the address register and down through lower addresses. Before each register is stored, the

address register is decremented by 12 (the size of an extended-precision number in memory) and the floating-point data register is then stored at the resultant address. When the operation is complete, the address register points to the image of the last floating-point data register. The order of the transfer is from FP7 – FP0.

If the effective address is the postincrement mode, only a memory- to-register opera-tion is allowed. The registers are loaded starting at the specified address and up through higher addresses. After each register is stored, the address register is incremented by 12 (the size of an extended-precision number in memory). When the oper-ation is complete, the address register points to the byte immediately following the image of the last floating-point data register loaded. The order of the transfer is the

Floating-Point Status Register: Not Affected. Note that the FMOVEM instruction provides the only mechanism for moving a floating- point data item between the floating-point unit and memory without performing any data conversions or affecting the condition code and exception status bits.

> 0 0

ne as for the control addressing modes: FP0 - FP7.

 11
 10
 9
 8

 COPROCESSOR
 0
 0
 0

 DE
 0
 0
 0

FMOVEM

Move Multiple Floating-Point Data Registers (MC6888X, MC68040)

Floating Point Instructions

FMOVEM

Instruction Fields:

Effective Address field—(Memory-to-Register) Only control addressing modes or the postincrement addressing mode can be used as listed in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	-	_	(xxx).W	111	000
An	-	_	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	-	_
(An) +	011	reg. number:An			
– (An)	-	_			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

Effective Address field—(Register-to-Memory) Only control alterable addressing modes or the predecrement addressing mode can be used as listed in the following table

Addressing Mode	Mode	Register		Addressing Mode	Mode	Register
Dn	-	-		(xxx).W	111	000
An	-	_		(xxx).L	111	001
(An)	010	reg. number:An		# < data >	-	-
(An) +	-	_				
– (An)	100	reg. number:An				
(d ₁₆ ,An)	101	reg. number:An		(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An		(d ₈ ,PC,Xn)	-	-
(bd,An,Xn)	110	reg. number:An		(bd,PC,Xn)	-	-
([bd,An,Xn],od)	110	reg. number:An		([bd,PC,Xn],od)	-	-
([bd,An],Xn,od)	110	reg. number:An		([bd,PC],Xn,od)	-	-

5-86

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

5-87

Floating Point Instructions

FMOVEM FMOVEM Move Multiple Floating-Point Data Registers (MC6888X, MC68040)

dr field-Specifies the direction of the transfer

- Move the listed registers from memory to the floating-point unit.
 Move the listed registers from the floating-point unit to memory.
- Mode field—Specifies the type of the register list and addressing mode 00 Static register list, predecrement addressing mode.

- D) Dynamic register list, predecrement addressing mode.
 10 Static register list, postincrement or control addressing mode.
 11 Dynamic register list, postincrement or control addressing mode.

Register List field:

Static list—contains the register select mask. If a register is to be moved, the corre-sponding bit in the mask is set as shown below; otherwise it is clear.

Dynamic list-contains the integer data register number, rrr, as listed in the following table.

List Type	Register List Format							
Static, - (An)	FP7	FP6	FP5	FP4	FP3	FP2	FP1	FP0
Static, (An) + , or Control	FP0	FP1	FP2	FP3	FP4	FP5	FP6	FP7
Dynamic	0	r	r	r	0	0	0	0

The format of the dynamic list mask is the same as for the static list and is contained in the least significant eight bits of the specified main processor data register

Programming Note: This instruction provides a very useful feature, dynamic register list specification, that can significantly enhance system performance. If the calling conventions used for procedure calls utilize the dynamic register list feature, the number of floating-point data registers saved and restored can be reduced.

To utilize the dynamic register specification feature of the FMOVEM instruction, both the calling and the called procedures must be written to communicate information about register usage. When one procedure calls another, a register mask must be passed to the called procedure to indicate which registers must not be altered upon return to the calling procedure. The called procedure then saves only those registers that are modified and are already in use. Several techniques can be used to utilize this mechanism, and an example follows.

F	М	O١	VE	EM	

Move Multiple Floating-Point Data Registers (MC6888X, MC68040)

Floating Point Instructions

In this example, a convention is defined by which each called procedure is passed a word mask in D7 that identifies all floating-point registers in use by the calling procedure. Bits 15 – 8 identify the registers in the order FP0 – FP7, and bits 7 – 0 identify the registers in the order FP7 – FP0 (the two masks are required due to the different trans-fer order used by the predecrement and postincrement addressing modes). The code used by the calling procedure consists of simply moving the mask (which is generated at compile time) for the floating-point data registers currently in use into D7:

Calling procedure...

MOVE.W	#ACTIVE,D7	Load the list of FP registers that are in use.
BSR	PROC_2	

The entry code for all other procedures computes two masks. The first mask identifies the registers in use by the calling procedure that are used by the called procedure (and therefore saved and restored by the called procedure). The second mask identifies the registers in use by the calling procedure that are used by the called procedure (and therefore not saved on entry). The appropriate registers are then stored along with the two masks

Called procedure...

MOVE.W	D7,D6	Copy the list of active registers.
AND.W	#WILL_USE,D7	Generate the list of doubly-used
	registers.	
FMOVEM	D7, - (A7)	Save those registers.
MOVE.W	D7, - (A7)	Save the register list.
EOR.W	D7,D6	Generate the list of not saved active
	registers.	
MOVE.W	D6, - (A7)	Save it for later use.

If the second procedure calls a third procedure, a register mask is passed to the third procedure that indicates which registers must not be altered by the third procedure. This mask identifies any registers in the list from the first procedure that were not saved by the second procedure, plus any registers used by the second procedure that must not be altered by the third procedure

FMOVEM

F

Floating Point Instructions						Floating Point Instructions
FMOVEM	Move Multiple F Data Reg (MC6888X,	gisters	FMOVEM	FMOVEM	Move Multiple Floating-Point Control Registers (MC6888X, MC68040)	FMOVEM
An example of the o	alculation of this mas	k is as follows:		Operation:	Register List \rightarrow Destination	
Nested calling s	equence				Source \rightarrow Register List	
MOVE.W	UNSAVED (A7),D7 saved at entry.	7 Load the list of act	ive registers not	Assembler Syntax:	FMOVEM.L < list > , < ea > FMOVEM.L < ea > , < list >	
OR.W	#WILL USE,D7	Combine with thos	e active at this time	Attributes:	Size = (Long)	
same convention, a	nd the register mask g required floating-po	generated during the int data registers:	ars.	Methodes: Size (Long) Description: Moves one or more 32-bit values into or out of the specified size registers. Any combination of the three system control registers may be seed; the floating-point control register is moved first, followed by the status register, and the floating-point instruction address register is not selected for the transfer, the relative order the transfer the specified address, with successive registers located up through higher specified address, with successive registers located up through higher exception enable byte or the floating-point instruction address. For the MC68881, this instruction does not cause pending exceptions (of the exception enable byte or the floating-point status register exception contor generate a new exception, despite the value written. When more than one register is moved, the memory or memory-alterable is redecrement, the address register is first decremented by the total size is the specified address register is not exception address. For the postincement of engisters is incremented by the total size is the specified address register is incremented by the total size is the number of registers is incremented by the total size of the register images to be moved (i.e., four times the number of register) and the address register is selected registers are transferred to art from the specified address for the address register is selected is the floating-point instruction is the address register is selected is the floating-point instruction is the under size of the register interest address register is not the specified address register is not excepted is the floating-point instruction is the underess register is selected is the floating-point instruction is the under size of the register interest address register is selected is the floating-point instruction is the under size of the register is selected, the opcode generated is the same as for the FMOVE or the instruction.		
5-90 M680 0	00 FAMILY PROGRAMMI	ER'S REFERENCE MAI	NUAL MOTOROLA	MOTOROLA	M68000 FAMILY PROGRAMMER'S REFERENCE MA	NUAL 5-91

Floating Point Instructions

FMOVEM FMOVEM Move Multiple Floating-Point Control Registers (MC6888X, MC68040)

Floating-Point Status Register: Changed only if thedestinationlist includes the floating-point status register in which case all bits are modified to reflect the value of the source register image.

Instruction Format:

	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0		
ſ	1	1	1 1	1	4	1 COPROCES		COPROCESSOR		0	0 0				EFFECTIVE ADDRESS			
		· · ·				ID		0		0	MODE			R	REGISTER			
	1	0	dr	R	EGISTE	R	0	0	0	0	0	0	0	0	0	0		

Instruction Fields:

Effective Address field-Determines the addressing mode for the operation. Memory-to-Register—Only control addressing modes or the postincrement addressing mode can be used as listed in the following table:

Addressing Mode	Mode	Register		Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn		(xxx).W	111	000
An**	001	reg. number:An	F	(xxx).L	111	001
(An)	010	reg. number:An	Γ	# < data >	111	100
(An) +	011	reg. number:An				
– (An)	100	reg. number:An	Γ			
(d ₁₆ ,An)	101	reg. number:An	Γ	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	Γ	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An		(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An		([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	Γ	([bd,PC],Xn,od)	111	011

*Only if a single floating-point instruction address register, floating-point status register, or floating-point control register is selected. **Only if the floating-point instruction address register is the single register selected.

Floating Point Instructions

FMOVEM

FMOVEM

Move Multiple Floating-Point Control Registers (MC6888X, MC68040)

Register-to-Memory—Only control alterable addressing modes or the predecrement addressing mode can be used as listed in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn	(xxx).W	111	000
An**	001	reg. number:An	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	-	-
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	-
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	-	_
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	-	-
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	-	-

*Only if a single floating-point control register is selected. **Only if the floating-point instruction address register is the single register selected.

dr field—Specifies the direction of the transfer. 0 — Move the listed registers from memory to the floating-point unit. 1 — Move the listed registers from the floating-point unit to memory.

Register List field—Contains the register select mask. If a register is to be moved, the corresponding bit in the list is set; otherwise, it is clear. At least one register must be specified.

Bit Number	Register
12	Floating-Point Control Register
11	Floating-Point Status Register
10	Floating-Point Instruction Address Register

MOTOROLA

Attributes:

Operation Table:

DESTINATION

In Range

Zer

Infinity

FMUL	Floating-Point Multiply (MC6888X, MC68040)	FMUL
Operation:	Source x FPn \rightarrow FPn	
Assembler Syntax:	FMUL. < fmt > < ea > ,FPn FMUL.X FPm,FPn *FrMUL < fmt > < ea > ,FPn *FrMUL.X FPm,FPn	

where r is rounding precision, S or D *Supported by MC68040 only

Stores the result in the destination floating-point data register.

In Range

Multiply

NOTES: 1. If the source operand is a NAN, refer to **1.6.5 Not-A-Numbers** for more 2. Sets the OPERR bit in the floating-point status register exception byte.

+ + 0.0

+ + inf

Format = (Byte, Word, Long, Single, Double, Extended, Packed)

SOURCE

NAN²

Zero

-0.0 + inf + 0.0 - inf

+ inf

Infinity

NAN²

-inf +inf

-inf +inf

Description: Converts the source operand to extended precision (if necessary) and multiplies that number by the number in the destination floating-point data register.

- +

 $\begin{array}{c|c} -0.0 + 0.0 \\ + 0.0 - 0.0 \end{array}$

-inf +inf

+ 0.0

FMUL will round the result to the precision selected in the floating-point control register. FSMUL and FDMUL will round the result to single or double precision, respectively, regardless of the rounding precision selected in the floating-point control register.

FMUL

FMUL

Floating-Point Multiply (MC6888X, MC68040)

Floating-Point Status Register

ating-i onit otatus negiste	71.							
Condition Codes:	Affected as	Affected as described in 3.6.2 Conditional Testing.						
Quotient Byte:	Not affected	L						
Exception Byte:	BSUN SNAN OPERR	Cleared Refer to 1.6.5 Not-A-Numbers . Set for 0 x infinity; cleared otherwise.						
	OVFL	Refer to exception processing in the appropriate user's manual.						
	UNFL	Refer to exception processing in the appropriate user's manual.						
	DZ	Cleared						
	INEX2	Refer to exception processing in the appropriate user's manual.						
	INEX1	If < fmt > is packed, refer to exception processing in the appropriate user's manual; cleared otherwise.						
Accrued Exception Byte:	Affected as of priate user's	described in exception processing in the appro-						

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COPROCESSOR ID		0	0	0		EFF MODE	ECTIVE	ADDRE	ESS EGISTE	R	
0	R/M	0		SOURCE		DESTINATI					c	PMOD			

5-94

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

5-95

Floating Point Instructions

FMUL

Floating-Point Multiply (MC6888X, MC68040)

FMUL

Instruction Fields:

Effective Address field—Determines the addressing mode for external operands. If R/M = 0, this field is unused and should be all zeros. If R/M = 1, specifies the location of the source operand location. Only data

addressing modes can be used as listed in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	111	100
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

*Only if < fmt > is byte, word, long, or single

R/M field—Specifies the source operand address mode.

0 — The operation is register to register. 1 — The operation is < ea > to register.

Source Specifier field-Specifies the source register or data format. If R/M = 0, specifies the source floating-point data i If R/M = 1, specifies the source floating-point data register. If R/M = 1, specifies the source data format: 000 — Long-Word Integer (L) 001 — Single-Precision Real (S) 010 — Extended-Precision Real (X) 011 — Packed-Decimal Real (P)* 100 — Word Integer (M).

- 100 Word Integer (W) 101 Double-Precision Real (D) 110 Byte Integer (B)

5-96

*This encoding will cause an unimplemented data type exception in the MC68040 to allow emulation in software.

FMUL

Floating-Point Multiply (MC6888X, MC68040)

FMUL

Floating Point Instructions

Destination Register field—Specifies the destination floating- point data register.

Opmode field-Specifies the instruction and rounding precision

0100011	FMUL	Rounding precision specified by the floating-point control register.
1100011	FSMUL	Single-precision rounding specified.
1100111	FDMUL	Double-precision rounding specified.

Attributes:

Operation Table:

DESTINATION

Result

FNEG	Floating-Point Negate (MC6888X, MC68040)	FNEG
Operation:	– (Source) \rightarrow FPn	
Assembler Syntax:	FNEG. < fmt > < ea > ,FPn FNEG.X FPm,FPn FNEG.X FPn *FrNEG. < fmt > < ea > ,FPn *FrNEG.X FPm,FPn *FrNEG.X FPm,FPn	

Description: Converts the source operand to extended precision (if necessary) and inverts the sign of the mantissa. Stores the result in the destination floating-point data register. FNEG will round the result to the precision selected in the floating-point control register. FSNEG and FDNEG will round the result to single or double precision, respectively, regardless of the rounding precision selected in the floating-point control register.

- + - 0.0

Format = (Byte, Word, Long, Single, Double, Extended, Packed)

SOURCE

Zero

+ 0.0 - inf

Infinity

+ inf

where r is rounding precision, S or D *Supported by MC68040 only

In Range

NOTE: If the source operand is a NAN, refer to 1.6.5 Not-A-Numbers for more information

Negate

FNEG

FNEG

Floating-Point Negate (MC6888X, MC68040) Floating-Po

ating-Point Status Registe	er:	
Condition Codes:	Affected as	described in 3.6.2 Conditional Testing.
Quotient Byte:	Not affected	
Exception Byte:	BSUN SNAN OPERR OVFL UNFL	Cleared Refer to 1.6.5 Not-A-Numbers . Cleared Cleared If source is an extended-precision denormalized number, refer to exception processing in the appropriate user's manual;
	DZ INEX2 INEX1	cleared otherwise. Cleared Cleared If < fmt > is packed, refer to exception processing in the appropriate user's manual; cleared otherwise.
Accrued Exception Byte:	Affected as of priate user's	described in exception processing in the appro- manual.

ruction	Formate	

Instruction	Format:

15	14	13	12	11 10 9			8	7	6	5	4	3	2	1	0
				COF	ROCES	SOR	DR a			EFFECTIVE ADDRESS					
1	1	1	1 '		ID	0		0	0		MODE		R	EGISTE	R
0	R/M	0						ION R	OPMODE						

5-98

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

5-99

Floating Point Instructions

FNEG

Floating-Point Negate (MC6888X, MC68040)

FNEG

Instruction Fields:

Effective Address field—Determines the addressing mode for external operands. If R/M = 0, this field is unused and should be all zeros. If R/M = 1, specifies the location of the source operand. Only data addressing modes

can be used as listed in the following table

Addressing Mode	ng Mode Mode Register		Addressing Mode	Mode	Register	
Dn*	000	reg. number:Dn	(xxx).W	111	000	
An	-	-	(xxx).L	111	001	
(An)	010	reg. number:An	# < data >	111	100	
(An) +	011	reg. number:An				
– (An)	100	reg. number:An				
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010	
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011	
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011	
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011	
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011	

*Only if < fmt > is byte, word, long, or single

R/M field—Specifies the source operand address mode.

0 — The operation is register to register. 1 — The operation is < ea > to register.

Source Specifier field-Specifies the source register or data format. If R/M = 0, specifies the source floating-point data i If R/M = 1, specifies the source floating-point data register. If R/M = 1, specifies the source data format: 000 — Long-Word Integer (L) 001 — Single-Precision Real (S) 010 — Extended-Precision Real (X) 011 — Packed-Decimal Real (P)* 100 — Word Integer (M).

- 100 Word Integer (W) 101 Double-Precision Real (D) 110 Byte Integer (B)

*This encoding will cause an unimplemented data type exception to allow emulation in software.

FNEG

Floating-Point Negate (MC6888X, MC68040)

FNEG

Floating Point Instructions

Destination Register field—Specifies the destination floating- point data register. If R/ M = 0 and the source and destination fields are equal, then the input operand is taken from the specified floating-point data register and the result is written into the same register. If the single register syntax is used, Motorola assemblers set the source and destination fields to the same value.

Opmode field—Specifies the instruction and rounding precision.

0011010	FNEG	Rounding precision specified by the floating-point control register.
1011010	FSNEG	Single-precision rounding specified.

1011110 FDNEG Double-precision rounding specified.

5-100

FNOP FNOP No Operation (MC6888X, MC68040) Operation: None Assemble Syntax: FNOP

Unsized Attributes:

Description: This instruction does not perform any explicit operation. However, it is useful to force synchronization of the floating- point unit with an integer unit or to force processing of pending exceptions. For most floating-point instructions, the integer unit is allowed to continue with the execution of the next instruction once the floating-point unit has any operands needed for an operation, thus supporting concurrent execution of floating-point and integer instructions. The FNOP instruction synchronizes the floating-point unit and integer unit by causing the integer unit to wait until all previous floating-point instructions have completed. Execution of FNOP also forces any exceptions pending from the execution of a previous floating-point instruction to be processed as a preinstruction exception.

The MC68882 may not wait to begin execution of another floating- point instruction until it has completed execution of the current instruction. The FNOP instruction synchronizes the coprocessor and microprocessor unit by causing the microprocessor unit to wait until the current instruction (or both instructions) have completed.

The FNOP instruction also forces the processing of exceptions pending from the exe-The PNOP instruction also foldes the processing of exceptions behaving from the exe-cution of previous instructions. This is also inherent in the way that the floating-point coprocessor has received the input operand for an arithmetic instruction, it always releases the main processor to execute the next instruction (regardless of whether or not concurrent execution is prevented for the instruction due to tracing) without report-ing the exception during the execution of that instruction. Then, when the main processor attempts to initiate the execution of the next floating-point coprocessor instruction, a preinstruction exception may be reported to initiate exception processing for an exception that occurred during a previous instruction. By using the FNOP instruction, the user can force any pending exceptions to be processed without performing any other operations

Floating-Point Status Register: Not Affected.

FNOP

FNOP

No Operation (MC6888X, MC68040)

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COPF	ROCESS	OR ID	0	1	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Instruction Fields:

Coprocessor ID field—Specifies which coprocessor in the system is to execute this instruction. Motorola assemblers default to ID = 1 for the floating-point coprocessor.

NOTE

FNOP uses the same opcode as the FBcc.W < label > instruction, with cc = F (nontrapping false) and < label > = + 2 (which results in a displacement of 0).

MOTOROLA

FREM

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

5-103

Floating Point Instructions

FREM

Floating Point Instructions

5-102

FREM	IEEE Remainder (MC6888X, M68040FPSP)	FREM
Operation:	IEEE Remainder of (FPn \div Source) \rightarrow FPn	
Assembler Syntax:	FREM. < fmt > < ea > ,FPn FREM.X FPm,FPn	
Attributes:	Format = (Byte, Word, Long, Single, Double, Extended,	Packed)

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

Description: Converts the source operand to extended precision (if necessary) and calculates the modulo remainder of the number in the destination floating-point data register, using the source operand as the modulus. Stores the result in the destination floating-point data register and stores the sign and seven least significant bits of the quotient in the floating-point status register quotient byte (the quotient is the result of FPn + Source). The IEEE remainder function is defined as:

FPn - (Source x N)

where N = INT (FPn \div Source) in the round-to-nearest mode

The FREM function is not defined for a source operand equal to zero or for a destinait on operand equal to infinity. Note that this function is not the same as the FMOD instruction, which uses the round-to-zero mode and thus returns a remainder that is different from the remainder required by the IEEE Specification for Binary Floating-Point Arithmetic

Operation Table:

		SOURCE1										
DESTINATION		+ In Range -	+ Zero#	-	+ Infinity –							
In Range	+	IEEE Remainder	NAN ²		FPn ²							
Zero	+	+ 0.0 - 0.0	NAN ²		+ 0.0 - 0.0							
Infinity	+	NAN ²	NAN ²		NAN† ²							
NOTES:												

OTES: 1. If the source operand is a NAN, refer to 1.6.5 Not-A-Numbers for more information. 2. Sets the OPERR bit in the floating-point status register exception byte. 3. Returns the value of Prb hetero the operation. However, the result is processed by the normal instruction termination procedure to round it as required. Thus, an overflow and/or inexact result may occur if the rounding precision has been changed to a smaller size since the FPn value was loaded.

IEEE Remainder IC6888X, M68040FPSP) (MC6 Floating-Point Status Register: Condition Codes: Affected as described in 3.6.2 Conditional Testing Loaded with the sign and least significant seven bits of the Quotient Byte gotient (FPn + Source). The sign of the guotient is the exclusive-OR of the sign bits of the source and destination operands. BSUN Exception Byte: Cleared Refer to 1.6.5 Not-A-Numbers SNAN OPERR Set if the source is zero or the destination is infinity; cleared otherwise. OV/FI Cleared Refer to underflow in the appropriate user's UNFL manual DZ Cleared INEX2 Cleared INEX1 If < fmt > is packed, refer to inexact result on decimal input in the appropriate user's manual: cleared otherwise. Affected as described in IEEE exception and trap compati-bility in the appropriate user's manual. Accrued Exception Byte:

Instruction Format:

	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
ĺ	1	1	1	1	COPROCESSOR ID		0	0	0	EFFECTIVE ADD MODE				RESS REGISTER		
ĺ	0	R/M	0				DESTINATION REGISTER		0	1	0	0	1	0	1	

Instruction Fields:

Coprocessor ID field—Specifies which coprocessor in the system is to execute this instruction. Motorola assemblers default to ID = 1 for the floating-point coprocessor.

FREM

IEEE Remainder (MC6888X, M68040FPSP)

FREM

Effective Address field-Determines the addressing mode for external operands If R/M = 0, this field is unused and should be all zeros.

If R/M = 1, this field is encoded with an M68000 family addressing mode as listed in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn	(xxx).W	111	000
An	-	_	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	111	100
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

*Only if < fmt > is byte, word, long, or single R/M field—Specifies the source operand address mode

0 — The operation is register to register
 1 — The operation is < ea > to register.

Source Specifier field-Specifies the source register or data format.

If R/M = 0, specifies the source floating-point data register. If R/M = 1, specifies the source data format:

- 000 Long-Word Integer (L) 001 Single-Precision Real (S) 010 Extended-Precision Real (X)
- 011 Packed-Decimal Real (P)

- 100 Word Integer (W) 101 Double-Precision Real (D) 110 Byte Integer (B)

Destination Register field—Specifies the destination floating- point data register

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

FSCALE

Scale Exponent (MC6888X, M68040FPSP)

 $\text{FPn x INT(2Source)} \rightarrow \text{FPn}$

Operation: Assembler Syntax:

FSCALE. < fmt > < ea > .FPn FSCALE.X FPm,FPn

Format = (Byte, Word, Long, Single, Double, Extended, Packed) Attributes

Description: Converts the source operand to an integer (if necessary) and adds that integer to the destination exponent. Stores the result in the destination floating-point data register. This function has the effect of multiplying the destination by 2^{Source}, but is much faster than a multiply operation when the source is an integer value.

The floating-point coprocessor assumes that the scale factor is an integer value before the operation is executed. If not, the value is chopped (i.e., rounded using the roundto-zero mode) to an integer before it is added to the exponent. When the absolute value of the source operand is $\geq 2^{14}$, an overflow or underflow always results.

Operation Table:

		SOURCE									
DESTINATION	+ In	Range –	+	Zero	-	+ Infinity	-				
In Range + -	Scal	e Exponent		FPn ²		NAN ³					
Zero + -	+ 0.0	- 0.0	+ 0.0		- 0.0	NAN ³					
Infinity + -	+ inf	– inf	+ inf		– inf	NAN ³					

NOTES: 1. If the source operand is a NAN, refer to **1.6.5 Not-A-Numbers** for more information. 2. Returns the value of FPh before the operation. However, the result is processed by the normal instruction termination procedure to round it as required. Thus, an overflow and/or inexact result may occur if the rounding precision has been changed to a smaller size since the FPh value was

loaded. 3. Sets the OPERR bit in the floating-point status register exception byte

MOTOROLA

5-107

Floating Point Instructions

5-106

FSCALE	Scale Ex (MC6888X, M	kponent M68040FPSP)
Floating-Point Status Registe	er:	
Condition Codes:	Affected as o	described in 3.6.2 Conditional Testing.
Quotient Byte:	Not affected	
Exception Byte:	BSUN	Cleared
	SNAN OPERR	Refer to 1.6.5 Not-A-Numbers . Set if the source operand is \pm infinity; cleared otherwise
	OVFL	Refer to overflow in the appropriate user's manual.
	UNFL	Refer to underflow in the appropriate user's manual.
	DZ	Cleared
	INEX2	Cleared
	INEX1	If < fmt > is packed, refer to inexact result on decimal input in the appropriate user's manual; cleared otherwise.
Accrued Exception Byte:		described in IEEE exception and trap compati- ppropriate user's manual.

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1 1 COPROCESSOR ID				0	0	0	EFFECTIVE ADDRESS MODE REGISTER					
0	R/M	0		SOURCE			STINAT		0	1	0	0	1	1	0

Instruction Fields:

Coprocessor ID field—Specifies which coprocessor in the system is to execute this instruction. Motorola assemblers default to ID = 1 for the floating-point coprocessor.

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

Floating Point Instructions

FSCALE

Effective Address field-Determines the addressing mode for external operands.

If R/M = 0, this field is unused and should be all zeros. If R/M = 1, this field is encoded with an M68000 family addressing mode as listed in the following table

Addressing Mode	Mode	Register	- [Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn	Ī	(xxx).W	111	000
An	-	-		(xxx).L	111	001
(An)	010	reg. number:An	Γ	# < data >	111	100
(An) +	011	reg. number:An	Ī			
– (An)	100	reg. number:An	Ī			
(d ₁₆ ,An)	101	reg. number:An		(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	Γ	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An		(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An		([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An		([bd,PC],Xn,od)	111	011

R/M field—Specifies the source operand address mode

0 — The operation is register to register.
1 — The operation is < ea > to register.

Source Specifier field—Specifies the source register or data format. If R/M = 0, specifies the source floating-point data register. If R/M = 1, specifies the source data format: 000 — Long-Word Integer (L) 001 — Single-Precision Real (S) 010 — Extended-Precision Real (X)

- 011 Packed-Decimal Real (P) 100 Word Integer (W) 101 Double-Precision Real (D)
- 110 Byte Integer (B)

Destination Register field-Specifies the destination floating- point data register.

MOTOROLA



FScc	Set According to Floating-Point Condition (MC6888X, MC68040)	FScc
Operation:	If (Condition True) Then 1s \rightarrow Destination Else 0s \rightarrow Destination	
Assembler Syntax:	FScc. < size > < ea >	
Attributes:	Size = (Byte)	
	the specified floating-point condition is true, sets the byte inte ation to TRUE (all ones); otherwise, sets the byte to FALSE	

conditional specifier cc may select any one of the 32 floating-point conditional tests as described in Table 3-23 Floating-Point Conditional Tests.

Floating-Point Status Register:

Condition Codes:	Not affected.	
Quotient Byte:	Not affected.	
Exception Byte:	BSUN	Set if the NAN condition code is set and the condition selected is an IEEE nonaware test.
	SNAN	Not Affected.
	OPERR	Not Affected.
	OVFL	Not Affected.
	UNFL	Not Affected.
	DZ	Not Affected.
	INEX2	Not Affected.
	INEX1	Not Affected.
Accrued Exception Byte:		is set if the BSUN bit is set in the exception or bit is affected.

Floating Point Instructions

Instruction Format

	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	
Γ	1	1	1	1	COF	ROCES	SOR	0	0	1		EFI MODE	FECTIVE	IVE ADDRESS REGISTER			
	0	0	0	0	0	0	0	0	0	0	CONDITIONAL PREDICATE						

Instruction Fields

Effective Address field-Specifies the addressing mode for the byte integer operand. Only data alterable addressing modes can be used as listed in the following table:

Addressing Mode	Mode	Register]	Addressing Mode	Mode	Register
Dn	000	reg. number:Dn		(xxx).W	111	000
An	-	_		(xxx).L	111	001
(An)	010	reg. number:An		# < data >	-	-
(An) +	011	reg. number:An				
– (An)	100	reg. number:An				
(d ₁₆ ,An)	101	reg. number:An		(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An	1	(d ₈ ,PC,Xn)	-	-
(bd,An,Xn)	110	reg. number:An		(bd,PC,Xn)	-	_
([bd,An,Xn],od)	110	reg. number:An	1	([bd,PC,Xn],od)	-	-
([bd,An],Xn,od)	110	reg. number:An	1	([bd,PC],Xn,od)	-	_

Conditional Predicate field—Specifies one of 32 conditional tests as defined in 3.6.2 Conditional Testing.

NOTE

When a BSUN exception occurs, a preinstruction exception is taken. If the exception handler returns without modifying the im-age of the program counter on the stack frame (to point to the instruction following the FScc), then it must clear the cause of the exception (by clearing the NAN bit or disabling the BSUN trap) or the exception occurs again immediately upon return to the routine that caused the exception.

5-110

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

FSGLDIV

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

5-111

Floating Point Instructions

FSGLDIV

Floating Point Instructions

FSGLDIV	Single-Precision Divide (MC6888X, MC68040)	LDIV
Operation:	$FPn \div Source \rightarrow FPn$	
Assembler Syntax:	FSGLDIV. < fmt > < ea > ,FPn FSGLDIV.X FPm,FPn	
Attributes:	Format = (Byte, Word, Long, Single, Double, Extended, Pacl	ked)

Description: Converts the source operand to extended precision (if necessary) and divides that number into the number in the destination floating-point data register. Stores the result in the destination floating-point data register, rounded to single precision (despite the current rounding precision). This function is undefined for 0+0 and infinity + infinity.

Both the source and destination operands are assumed to be representable in the sin-Both the source and destination operands are assumed to be representable in the sin-gle-precision format. If either operands are assumed to be representable in the sin-sion, hence the accuracy of the result is not guaranteed. Furthermore, the result expo-nent may exceed the range of single precision, regardless of the rounding precision selected in the floating-point control register mode control byte. Refer to **3.6.1 Under-flow, Round, Overflow** for more information.

The accuracy of the result is not affected by the number of mantissa bits required to represent each input operand since the input operands just change to extended preci-sion. The result mantissa is rounded to single precision, and the result exponent is rounded to extended precision, despite the rounding precision selected in the floating point control register

Operation Table:

				S	DURCE ^{3,}	1			
DESTINATION		+ In Range	-	+	Zero	-	+	Infinity	-
In Range	+	Divide (Single Precision		+ inf ² – inf ²		-inf ² + inf ²	+ 0.0 - 0.0		-0.0 +0.0
Zero	+	+ 0.0 - 0.0	- 0.0 + 0.0		NAN ³		+ 0.0 - 0.0		-0.0 +0.0
Infinity	+	+ inf - inf	-inf +inf	+ inf – inf		−inf + inf		NAN ³	

NOTES

It fit is source operand is a NAN, refer to **1.6.5 Not-A-Numbers** for more information.
 Sets the DZ bit in the floating-point status register exception byte.
 Sets the OPERR bit in the floating-point status register exception byte.

Single-Precision Divide (MC6888X, MC68040) Floating-Point Status Register: Condition Codes: Affected as described in 3.6.2 Conditional Testing Not affected. Quotient Byte BSUN Exception Byte: Cleared SNAN Refer to 1.6.5 Not-A-Numbers. OPERR Set for 0 + 0 or infinity + infinity. OVFL Refer to overflow in the appropriate user's manual UNFL Refer to underflow in the appropriate user's manual. DZ Set if the source is zero and the destination is in range; cleared otherwise INEX2 Refer to inexact result in the appropriate user's manual. INEX1 If < fmt > is packed, refer to the appropriate user's manual for inexact result on decimal input; cleared otherwise. Affected as described in IEEE exception and trap compati-Accrued Exception Byte: bility in the appropriate user's manual

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COF	COPROCESSOR ID		0	0	0		EF MODE	FECTIVE	E ADDRESS REGISTER		
0	R/M	0		SOURCE			STINAT		0	1	0	0	1	0	0

Instruction Fields:

Coprocessor ID field—Specifies which coprocessor in the system is to execute this instruction. Motorola assemblers default to ID = 1 for the floating-point coprocessor

FSGLDIV

Single-Precision Divide (MC6888X, MC68040)



FSGLDIV

If R/M = 0, this field is unused and should be all zeros. If R/M = 1, this field is encoded with an M68000 family addressing mode as listed in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	111	100
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

*Only if < fmt > is byte, word, long, or single R/M field—Specifies the source operand address mode

0 — The operation is register to register 1 — The operation is < ea > to register.

Source Specifier field-Specifies the source register or data format.

If R/M = 0, specifies the source floating-point data register. If R/M = 1, specifies the source data format:

- 000 Long-Word Integer (L) 001 Single-Precision Real (S) 010 Extended-Precision Real (X)
- 011 Packed-Decimal Real (P)

- 100 Word Integer (W) 101 Double-Precision Real (D) 110 Byte Integer (B)

Destination Register field-Specifies the destination floating- point data register

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

FSGLMUL Single-Precision Multiply (MC6888X, MC68040)

Source x FPn \rightarrow FPn

FSGLMUL.X FPm,FPn

FSGLMUL. < fmt > < ea > .FPn

Assembler Syntax:

Operation:

at = (Byte, Word, Long, Single, Double, Extended, Packed)

Description: Converts the source operand to extended precision (if necessary) and multiplies that number by the number in the destination floating-point data register. Stores the result in the destination floating-point data register, rounded to single precision (regardless of the current rounding precision).

Both the source and destination operands are assumed to be representable in the sin-gle-precision format. If either operand requires more than 24 bits of mantissa to be accurately represented, the extraneous mantissa bits are truncated prior to the multi-pliction; hence, the accuracy of the result is not guaranteed. Furthermore, the result exponent may exceed the range of single precision, regardless of the rounding precision selected in the floating-point control register mode control byte. Refer to 3.6.1 Underflow, Round, Overflow for more information.

Operation Table:

				SOURCE1				
DESTINATION		+ In Range –	+	Zero	-	+	Infinity	-
In Range	+	Multiply (Single Precision)	+ 0.0 - 0.0		-0.0 + 0.0	+ inf – inf		−inf +inf
Zero	+	+ 0.0 - 0.0 - 0.0 + 0.0	+ 0.0 - 0.0		-0.0 + 0.0		NAN ²	
Infinity	+	+ inf -inf - inf + inf		NAN		+ inf – inf		−inf +inf

NOTES:

If the source operand is a NAN, refer to 1.6.5 Not-A-Numbers for more information.
 Sets the OPERR bit in the floating-point status register exception byte.

NOTE

The input operand mantissas truncate to single precision before the multiply operation. The result mantissa rounds to single pre-cision despite the rounding precision selected in the floatingpoint control register.

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

Floating Point Instructions

5-114

F	5	G	LI	V	U	L	

Single-Precision Multiply (MC6888X, MC68040)

FSGLMUL

MOTOROLA

Floating-Point Status Register:

Condition Codes: Affected as described in 3.6.2 Conditional Testing Quotient Byte Not affected. BSUN Exception Byte: Cleared SNAN Refer to 1.6.5 Not-A-Numbers OPERR Set if one operand is zero and the other is infinity; cleared otherwise OVFL Refer to overflow in the appropriate user's manual UNFL Refer to underflow in the appropriate user's manual DZ Cleared INEX2 Refer to inexact result in the appropriate user's manual. on er's

	INEX1	lf < fmt >	 is pac 	ked	, refe	r to inexact re	sult on
		decimal	input	in	the	appropriate	user's
		manual;	cleared	l oth	nerwi	se.	
e:	Affected as	described	in IEEE	Eex	cepti	on and trap co	ompati-

Accrued Exception Byte: bility in the appropriate user's manual.

Instruction Format

	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	
ſ	1 1	4			COP	ROCES	SOR		0 0	0		EFI	FECTIVE	CTIVE ADDRESS			
			l '		ID		0				MODE		R	EGISTE	R		
ſ	0	R/M	0		SOURCE		DESTINAT			0	1	0	0	1	1	1	
L					FEGIFIE	ĸ	_ n	EGISTE	ĸ								

Instruction Fields:

Coprocessor ID field—Specifies which coprocessor in the system is to execute this instruction. Motorola assemblers default to ID = 1 for the floating-point coprocessor

FSGLMUL

Single-Precision Multiply (MC6888X, MC68040)

Floating Point Instructions

5-115

FSGLMUL

Effective Address field—Determines the addressing mode for external operands.

If R/M = 0, this field is unused and should be all zeros. If R/M = 1, this field is encoded with an M68000 family addressing mode as listed in the following table

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn	(xxx).W	111	000
An	-	_	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	111	100
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

R/M field—Specifies the source operand address mode

0 — The operation is register to register.
1 — The operation is < ea > to register.

Source Specifier field—Specifies the source register or data format. If R/M = 0, specifies the source floating-point data register. If R/M = 1, specifies the source data format: 000 — Long-Word Integer (L) 001 — Single-Precision Real (S)

- 010 Extended-Precision Real (X)

- 010
 Extended-Precision Real (P)

 011
 Packed-Decimal Real (P)

 100
 Word Integer (W)

 101
 Double-Precision Real (D)

 110
 Byte Integer (B)

Destination Register field-Specifies the destination floating- point data register.

FSGLMUL

FSIN	Sine (MC6888X, M68040FPSP)	FSIN	FSIN	Sine (MC6888X, M68040FPSP)	FSIN
Operation:	Sine of Source \rightarrow FPn		Exception Byte:	BSUN Cleared	
Assembler Syntax:	FSIN. < fmt > < ea > ,FPn FSIN.X FPm,FPn FSIN.X FPn			SNAN Refer to 1.6.5 Not-A-Numl OPERR Set if the source is ± otherwise.	
Attributes:	Format = (Byte, Word, Long, Single, Double, Ex	tended, Packed)		OVFL Cleared UNFL Refer to underflow in the manual.	appropriate user's
calculates the data register. operand is no range before during reduct	verts the source operand to extended precisic s sine of that number. Stores the result in the de This function is not defined for source operands of ot in the range of $[-2\pi+2\pi]$, the argument is the sine is calculated. However, large argument ion, and very large arguments (greater than appro- e result is in the range of $[-1+1]$.	stination floating-point ± infinity. If the source reduced to within that ts may lose accuracy	Accrued Exception Byte:	DZ Cleared INEX2 Refer to inexact result in user's manual. INEX1 If < fmt > is packed, refer to decimal input in the a manual; cleared otherwise	o inexact result on ppropriate user's
	SOURCE		Instruction Format:		
DESTINATI	ON + In Range - + Zero - + Sine + 0.0 - 0.0	Infinity – NAN ²	15 14 13 12 11	10 9 8 7 6 5 4 3	2 1 0
	e operand is a NAN, refer to 1.6.5 Not-A-Numbers for more inform ERR bit in the floating-point status register exception byte.		1 1 1 1 COPRI 0 R/M 0 SOURCE SPECIFIER	DESTINATION 0 0 MODE	VE ADDRESS REGISTER 1 1 0
Floating-Point St	atus Register:		Instruction Fields:		<u> </u>

Floating-Point Status Register:

Condition Codes:	Affected as described in 3.6.2 Conditional Testing.
Quotient Byte:	Not affected.

MOTOROLA

coprocessor.

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

5-119

Floating Point Instructions

Coprocessor ID field—Specifies which coprocessor in the system is to execute this instruction. Motorola assemblers default to ID = 1 for the floating-point

Floating Point Instructions

Floating Point Instructions

FSIN

5-118

Sine (MC6888X, M68040FPSP)

FSIN

MOTOROLA

Effective Address field—Determines the addressing mode for external operands.

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

If R/M = 0, this field is unused and should be all zeros. If R/M = 1, this field is encoded with an M68000 family addressing mode as listed in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	111	100
(An) +	011	reg. number:An			
- (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

*Only if < fmt > is byte, word, long, or single

R/M field—Specifies the source operand address mode. 0 — The operation is register to register. 1 — The operation is < ea > to register.

Source Specifier field—Specifies the source register or data format. If R/M = 0, specifies the source floating-point data register. If R/M = 1, specifies the source data format: 000 — Long-Word Integer (L) 001 — Single-Precision Real (S) 010 — Extended-Precision Real (X) 011 — Darlard Desired Real (M)

- 011 Packed-Decimal Real (P) 100 Word Integer (W)
- 101 Double-Precision Real (D)
- 110 Byte Integer (B)
- Destination Register field—Specifies the destination floating-point data register. If R/ M = 0 and the source and destination fields are equal, then the input operand is taken from the specified floating-point data register, and the result is written into the same register. If the single register syntax is used, Motorola assemblers set the source and destination fields to the same value.

FSINCOS	Simultaneous Sine and Cosine (MC6888X, M68040FPSP)	FSINCOS
Operation:	Sine of Source \rightarrow FPs Cosine of Source \rightarrow FPc	
Assembler Syntax:	FSINCOS. < fmt > < ea > ,FPc,FPs FSINCOS.X FPm,FPc,FPs	
Attributes:	Format = (Byte, Word, Long, Single, Double, Ext	ended, Packed)

Description: Converts the source operand to extended precision (if necessary) and calculates both the sine and the cosine of that number. Calculates both functions simultaneously; thus, this instruction is significantly faster than performing separate FSIN and FCOS instructions. Loads the sine and cosine results into the destination floating-point data register. Sets the condition code bits according to the sine result. If FPs and FPc are specified to be the same register, the cosine result is first loaded into the register and then is overwritten with the sine result. This function is not defined for resurce operande of + infinity. source operands of ± infinity.

If the source operand is not in the range of [$-2\pi...+2\pi$], the argument is reduced to within that range before the sine and cosine are calculated. However, large arguments may lose accuracy during reduction, and very large arguments (greater than approximately 10^{20}) lose all accuracy. The results are in the range of [-1...+1].

Operation Table:

			SOURCE1										
DESTINA	TION	+	In Range	-	+	Zero	-	+	Infinity	-			
FPs			Sine		+ 0.0		- 0.0		NAN ²				
FPc			Cosine			+ 1.0			NAN ²				

NOTES:

If the source operand is a NAN, refer to 1.6.5 Not-A-Numbers for more information.
 Sets the OPERR bit in the floating-point status register exception byte.

Simultaneous Sine and Cosine (MC6888X, M68040FPSP) **FSINCOS FSINCOS**

Floating-Point Status Registe

ioating-i onit otatus rregiste		
Condition Codes:	Affected as o sine result).	described in 3.6.2 Conditional Testing (for the
Quotient Byte:	Not affected	
Exception Byte:	BSUN SNAN OPERR	Cleared Refer to 1.6.5 Not-A-Numbers. Set if the source is \pm infinity; cleared otherwise.
	OVFL	Cleared
	UNFL	Set if a sine underflow occurs, in which case the cosine result is 1. Cosine cannot underflow. Refer to underflow in the appropriate user's manual.
	DZ	Cleared
	INEX2	Refer to inexact result in the appropriate user's manual.
	INEX1	If < fmt > is packed, refer to inexact result on decimal input in the appropriate user's manual; cleared otherwise.
Accrued Exception Byte:		described in IEEE exception and trap compati- ppropriate user's manual.

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COP	ROCES	SOR	0	0	0	EFFECTIVE / MODE				ESS EGISTE	R
0	R/M	0		SOURCE			STINAT SISTER,		0	1	1	0		STINATI GISTER	

Instruction Fields:

Coprocessor ID field—Specifies which coprocessor in the system is to execute this instruction. Motorola assemblers default to ID = 1 for the floating-point coprocessor.

FSINCOS

Simultaneous Sine and Cosine (MC6888X, M68040FPSP) **FSINCOS**

Floating Point Instructions

- -Determines the addressing mode for external operands. Effective Address field-
- If R/M = 0, this field is unused and should be all zeros.
- If R/M = 1, this field is encoded with an M68000 family addressing mode as listed in the following table:

Addressing Mode	ddressing Mode Mode Register		Addressing Mode	Mode	Register	
Dn*	000	reg. number:Dn	(xxx).W	111	000	
An	-	-	(xxx).L	111	001	
(An)	010	reg. number:An	# < data >	111	100	
(An) +	011	reg. number:An				
– (An)	100	reg. number:An				
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010	
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011	
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011	
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011	
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011	

R/M field—Specifies the source operand address mode

0 — The operation is register to register. 1 — The operation is < ea > to register.

Source Specifier field—Specifies the source register or data format. If R/M = 0, specifies the source floating-point data register. If R/M = 1, specifies the source data format:

- 000 Long-Word Integer (L) 001 Single-Precision Real (S) 010 Extended-Precision Real (X)
- 011 Packed-Decimal Real (P)
- 100 Word Integer (W) 101 Double-Precision Real (D) 110 Byte Integer (B)
- Destination Register, FPc field—Specifies the destination floating- point data register, FPc. The cosine result is stored in this register.

5-122

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

5-123

Floating Point Instructions

FSINCOS

Simultaneous Sine and Cosine (MC6888X, M68040FPSP)

FSINCOS

Destination Register, FPs field—Specifies the destination floating- point data register, FPs. The sine result is stored in this register. If FPc and FPs specify the same floating-point data register, the sine result is stored in the register, and the cosine result is discarded.

If R/M = 0 and the source register field is equal to either of the destination register fields, the input operand is taken from the specified floating-point data register, and the appropriate result is written into the same register.

FSINH	Hyperbolic Sine (MC6888X, M68040FPSP)	FSINH
Operation:	Hyperbolic Sine of Source \rightarrow FPn	
Assembler Syntax:	FSINH. < fmt > < ea > ,FPn FSINH.X FPm,FPn FSINH.X FPn	
Attributes:	Format = (Byte, Word, Long, Single, Double, Extende	d, Packed)
	onverts the source operand to extended precision (if	

er. Stores the re floating-point data register.

Operation Table:

		SOURCE										
DESTINATION	+ In Range -	+	Zero –	+	Infinity ·							
Result	Hyperbolic Sine	+ 0.0	- 0.0	+ inf	– in							

NOTE: If the source operand is a NAN, refer to 1.6.5 Not-A-Numbers for more information

Floating-Point Status Register:

Condition Codes:	Affected as	described in 3.6.2 Conditional Testing.
Quotient Byte:	Not affected	l.
Exception Byte:	BSUN SNAN OPERR OVFL	Cleared Refer to 1.6.5 Not-A-Numbers . Cleared Refer to overflow in the appropriate user's
	UNFL DZ	manual. Refer to underflow in the appropriate user's manual. Cleared
	INEX2	Refer to inexact result in the appropriate user's manual.
	INEX1	If < fmt > is packed, refer to inexact result on decimal input in the appropriate user's manual; cleared otherwise.
Accrued Exception Byte:		described in IEEE exception and trap compati- appropriate user's manual.

Floating Point Instructions

FSINH FSINH Hyperbolic Sine (MC6888X, M68040FPSP)

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	ō
1	1	1	1	COP	ROCES	SOR	0	0	0		EF MODE	FECTIVE	ADDRE	ESS EGISTE	R
0	R/M	0		SOURCE			STINAT		0	0	0	0	0	1	0

Instruction Fields:

Coprocessor ID field-Specifies which coprocessor in the system is to execute this instruction. Motorola assemblers default to ID = 1 for the floating-point coprocessor.

Effective Address field—Determines the addressing mode for external operands. If R/M = 0, this field is unused and should be all zeros. If R/M = 1, this field is encoded with an M68000 family addressing mode as listed in

the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	111	100
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

*Only if < fmt > is byte, word, long, or single

FSINH

FSINH

Hyperbolic Sine (MC6888X, M68040FPSP)

R/M field--Specifies the source operand address mode. 0 — The operation is register to register. 1 — The operation is < ea > to register.

Source Specifier field-Specifies the source register or data format. If R/M = 0, specifies the source floating-point data register. If R/M = 1, specifies the source data format: 000 — Long-Word Integer (L) 001 — Single-Precision Real (S)

- 010 Extended-Precision Real (X) 011 Packed-Decimal Real (P)
- 100 Word Integer (W) 101 Double-Precision Real (D) 110 Byte Integer (B)
- Destination Register field—Specifies the destination floating- point data register. If R/ M = 0 and the source and destination fields are equal, the input operand is taken from the specified floating-point data register, and the result is written into the same register. If the single register syntax is used, Motorola assemblers set the source and destination fields to the same value.

5	-	11	26

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL MOTOROLA MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

5-127

Floating Point Instructions

Floating Point Instructions

FSQRT	Floating-Point Square Root (MC6888X, MC68040)	FSQRT	FS
Operation:	Square Root of Source \rightarrow FPn		Floa
Assembler Syntax:	FSQRT. < fmt > < ea > ,FPn FSQRT.X FPm,FPn FSQRT.X FPn *FrSQRT. < fmt > < ea > ,FPn *FrSQRT FPm,FPn *FrSQRT FPn where r is rounding precision, S or D *Supported by MC68040 only		
Attributes:	Format = (Byte, Word, Long, Single, Double, Ex	tended, Packed)	

Description: Converts the source operand to extended precision (if necessary) and calculates the square root of that number. Stores the result in the destination floating point data register. This function is not defined for negative operands.

FSQRT will round the result to the precision selected in the floating-point control reg-ister. FSFSQRT and FDFSQRT will round the result to single or double precision, respectively, regardless of the rounding precision selected in the floating-point control register.Operation Table:

		SOURCE											
DESTINATION	+	In Range –	+	Zero	-	+	Infinity	-					
Result	\sqrt{x}	NAN ²	+ 0.0		- 0.0	+ inf		NAN ²					

NOTES

JLS: 1. If the source operand is a NAN, refer to **1.6.5 Not-A-Numbers** for more information 2. Sets the OPERR bit in the floating-point status register exception byte.

SQRT FSQRT Floating-Point Square Root (MC6888X, MC68040) ating-Point Status Register: Condition Codes: Affected as described in 3.6.2 Conditional Testing Quotient Byte Not affected. BSUN Exception Byte: Cleared SNAN Refer to 1.6.5 Not-A-Numbers. OPERR Set if the source operand is not zero and is negative; cleared otherwise. OVEL Cleared UNFL Cleared DZ Cleared Refer to exception processing in the appropriate user's manual. INFX2 If < fmt > is packed, refer to exception processing in the appropriate user's manual; INFX1 cleared otherwise. Accrued Exception Byte: Affected as described in exception processing in the appropriate user's manual.

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
· ·		1		COPROCESS		COPROCESSOR					EFI	FECTIVE	ADDRE	SS	
1	1	1	1		ID		0	0	0	MODE RE					R
0	R/M	0		SOURCI			STINAT				(OPMOD	E		

FSQRT

Floating-Point Square Root (MC6888X, MC68040)

FSQRT

Instruction Fields:

Effective Address field-Determines the addressing mode for external operands.

If R/M = 0, this field is unused and should be all zeros. If R/M = 1, specifies the location of the source operand. Only data addressing modes can be used as listed in the following table:

Addressing Mode	Mode	Register		Addressing Mode	Mode	Register	
Dn*	000	reg. number:Dn		(xxx).W	111	000	
An	-	-		(xxx).L	111	001	
(An)	010	reg. number:An		# < data >	111	100	
(An) +	011	reg. number:An					
– (An)	100	reg. number:An					
(d ₁₆ ,An)	101	reg. number:An		(d ₁₆ ,PC)	111	010	
(d ₈ ,An,Xn)	110	reg. number:An		(d ₈ ,PC,Xn)	111	011	
(bd,An,Xn)	110	reg. number:An		(bd,PC,Xn)	111	011	
([bd,An,Xn],od)	110	reg. number:An		([bd,PC,Xn],od)	111	011	
([bd,An],Xn,od)	110	reg. number:An		([bd,PC],Xn,od)	111	011	

*Only if < fmt > is byte, word, long, or single

R/M field—Specifies the source operand address mode. 0 — The operation is register to register. 1 — The operation is < ea > to register.

The operation is e day to regulat.
Source Specifier field—Specifies the source register or data format.
If R/M = 0, specifies the source floating-point data register.
If R/M = 1, specifies the source data format:
000 — Long-Word Integer (L)
001 — Single-Precision Real (S)
010 — Extended-Precision Real (X)
011 — Double-Precision Real (D)
101 — Dyte Integer (B)
"This encoding will cause an unimplemented data type exception in the MC68040 to allow emulation in software.

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

Floating-Point Square Root (MC6888X, MC68040)

Floating Point Instructions **FSQRT**

Destination Register field—Specifies the destination floating- point data register. If R/ M = 0 and the source and destination fields are equal, the input operand is taken from the specified floating-point data register, and the result is written into the same register. If the single register syntax is used, Motorola assemblers set the source and destination fields to the same value.

Opmode field—Specifies the instruction and rounding precision.

0000100	FSQRT	Rounding precision specified by the floating-point control register.
1000001	FSSQRT	Single-precision rounding specified.
1000101	FDSQRT	Double-precision rounding specified.

FSQRT

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

5-131

Floating Point Instructions

FSUB

Floating Point Instructions

5-130

FSUB	Floating-Point Subtract (MC6888X, MC68040)			Floating-Point Subtract (MC6888X, MC68040)		
Operation:	$FPn - Source \rightarrow FPn$		Floating-Point Status Re	gister:		
Assembler			Condition Codes:	Affected a	s described in 3.6.2	
Syntax:	FSUB. < fmt > < ea > ,FPn		Quotient Byte:	Not affecte	ed.	
Operation: Assembler Syntax: Attributes:	FSUB.X FPm,FPn *FrSUB. < fmt > < ea > ,FPn *FrSUB.X FPm,FPn where r is rounding precision, S or D *Supported by MC68040 only		Exception Byte:	BSUN SNAN OPERR OVFL	Cleared Refer to 1.6.5 N Set if both the like-signed infin Refer to exc	
Attributes:	Format = (Byte, Word, Long, Single, Double, Extended, Pack	ed)			appropriate use	
Description: (Converts the source operand to extended precision (if necess	ary) and		UNFL	Refer to exc appropriate use	

MOTOROLA

subtracts that number from the number in the destination floating-point data register. Stores the result in the destination floating-point data register

Operation Table:

				SOURCE ¹				
DESTINATION		+ In Range –	+	Zero	-	+	Infinity	-
In Range	+	Subtract		Subtract		– inf		+ inf
Zero	+	Subtract	+ 0.0 ² + 0.0		+0.0 + 0.0 ²	– inf		+ inf
Infinity	+	+ inf - inf		+ inf – inf		NAN ² – inf		- inf NAN ²

NOTES: 1. If the source operand is a NAN, refer to **1.6.5 Not-A-Numbers** for more information. 2. Returns + 0.0 in rounding modes RN, R2, and RP; returns = 0.0 in RM. 3. Sets the OPERR bit in the floating-point status register exception byte.

Floating-Point Status Registe	er:	
Condition Codes:	Affected as o	described in 3.6.2 Conditional Testing.
Quotient Byte:	Not affected	
Exception Byte:	BSUN	Cleared
	SNAN	Refer to 1.6.5 Not-A-Numbers.
	OPERR	Set if both the source and destination are like-signed infinities; cleared otherwise.
	OVFL	Refer to exception processing in the appropriate user's manual.
	UNFL	Refer to exception processing in the appropriate user's manual.
	DZ	Cleared
	INEX2	Refer to exception processing in the appropriate user's manual.
	INEX1	If < fmt > is packed, refer to exception processing in the appropriate user's manual; cleared otherwise.
Accrued Exception Byte:		described in IEEE exception and trap compati- ppropriate user's manual.

Instruction Format:

15	14	13	12	11 10 9		8	7	6	5	4 3 2			1	0	
1	1	1	1	COP	COPROCESSOR ID		0	0	0	EFFECTIVE ADDRESS MODE REGISTER					R
0	R/M	0				STINATI EGISTE				(OPMOD	E			

Floating Point Instructions

FSUB

Floating-Point Subtract (MC6888X, MC68040)

FSUB

Instruction Fields:

Effective Address field-Determines the addressing mode for external operands.

If R/M = 0, this field is unused and should be all zeros. If R/M = 1, specifies the location of the source operand. Only data addressing modes can be used as listed in the following table:

Addressing Mode	Mode	Register		Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn		(xxx).W	111	000
An	-	-		(xxx).L	111	001
(An)	010	reg. number:An		# < data >	111	100
(An) +	011	reg. number:An				
– (An)	100	reg. number:An				
(d ₁₆ ,An)	101	reg. number:An		(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An		(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An		(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An		([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An		([bd,PC],Xn,od)	111	011

*Only if < fmt > is byte, word, long, or single

R/M field—Specifies the source operand address mode

- 0 The operation is register to register.
 1 The operation is < ea > to register.

Source Specifier field—Specifies the source register or data format. If R/M = 0, specifies the source floating-point data register or data if If R/M = 1, specifies the source floating-point data register. If R/M = 1, specifies the source data format: 000 — Long-Word Integer (L) 001 — Single-Precision Real (S)

- 001 Single-Precision Real (S) 010 Extended-Precision Real (X) 011 Packed-Decimal Real (P)* 100 Word Integer (W) 101 Double-Precision Real (D) 110 Byte Integer (B)

"This encoding will cause an unimplemented data type exception in the MC68040 to allow emulation in software.

6	12	4

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

Floating Point Instructions

FTAN	Tangent (MC6888X/004SW)	FTAN
Operation:	Tangent of Source \rightarrow FPn	
Assembler Syntax:	FTAN. < fmt > < ea > ,FPn FTAN.X FPm,FPn FTAN.X FPn	
Attributes:	Format = (Byte, Word, Long, Single, Double, Extend	ed, Packed)

Description: Converts the source operand to extended precision (if necessary) and calculates the tangent of that number. Stores the result in the destination floating-point data register. This function is not defined for source operands of \pm infinity. If the source operand is not in the range of $[-\pi/2...+\pi/2]$, the argument is reduced to within that range before the tangent is calculated. However, large arguments may lose accuracy during reduction, and very large arguments (greater than approximately 10²⁰) lose all accuracy.

Operation Table:

	SOURCE1									
DESTINATION	+ In Range	- +	Zero –	+ Infinity	-					
Result	Tangent	+ 0.0	- 0.0	NAN ²						

NOTES

If the source operand is a NAN, refer to 1.6.5 Not-A-Numbers for more informa 2. Sets the OPERR bit in the floating-point status register exception byte.

FTAN FTAN Tangent (MC6888X/004SW) Floating-Point Status Register: Condition Codes: Affected as described in 3.6.2 Conditional Testing Quotient Byte: Not affected. BSUN Exception Byte: Cleared SNAN Refer to 1.6.5 Not-A-Numbers. OPERR Set if the source is \pm infinity; cleared otherwise. OVEL Refer to overflow in the appropriate user's manual. UNFI Refer to underflow in the appropriate user's manual. DZ Cleared INEX2 Refer to inexact result in the appropriate user's manual. If < fmt > is packed, refer to inexact result on decimal input in the appropriate user's manual; cleared otherwise. INEX1 Accrued Exception Byte: Affected as described in IEEE exception and trap compatibility in the appropriate user's manual

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COF	COPROCESSOR ID			0	0	EFFECTIVE ADDRESS MODE REGIS				ESS LEGISTE	R
0	R/M	0		SOURCI			DESTINATIO		0	0	0	1	1	1	1

Instruction Fields:

Coprocessor ID field—Specifies which coprocessor in the system is to execute this instruction. Motorola assemblers default to ID = 1 for the floating-point coprocessor

FSUB

5-135

Floating Point Instructions

FSUB

		51
0101000	FSUB	Rounding precision specified by the floating- point

Floating-Point Subtract (MC6888X, MC68040)

		control register.
1101000	FSSUB	Single-precision rounding specified.
1101100	FDSUB	Double-precision rounding specified.

5-136	

MOTOROLA

FTAN

Tangent (MC6888X/004SW)

Effective Address field-Determines the addressing mode for external operands If R/M = 0, this field is unused and should be all zeros.

If R/M = 1, this field is encoded with an M68000 family addressing mode as listed in the following table:

FTAN

MOTOROLA

Addressing Mode	Mode	Register		Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn		(xxx).W	111	000
An	-	-		(xxx).L	111	001
(An)	010	reg. number:An		# < data >	111	100
(An) +	011	reg. number:An				
- (An)	100	reg. number:An				
(d ₁₆ ,An)	101	reg. number:An		(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An		(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An		(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An		([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An		([bd,PC],Xn,od)	111	011

*Only if < fmt > is byte, word, long, or single R/M field—Specifies the source operand address mode

0 — The operation is register to register 1 — The operation is < ea > to register.

Source Specifier field—Specifies the source register or data format. If R/M = 0, specifies the source floating-point data register. If R/M = 1, specifies the source data format:

- 000 Long-Word Integer (L) 001 Single-Precision Real (S) 010 Extended-Precision Real (X)
- 011 Packed-Decimal Real (P)
- 100 Word Integer (W) 101 Double-Precision Real (D) 110 Byte Integer (B)
- Destination Register field—Specifies the destination floating- point data register. If R/ M = 0 and the source and destination fields are equal, the input operand is taken from the specified floating-point data register, and the result is written into the same register. If the single register syntax is used, Motorola assemblers set the source and destination fields to the same value.

5-138

```
M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL
```

FTANH Operation:

> Assembler Syntax:

Hyperbolic Tangent (MC6888X, M68040FPSP)

Hyperbolic Tangent of Source $\rightarrow \mathsf{FPn}$

FTANH. < fmt > < ea > .FPn FTANH.X FPm,FPn FTANH.X FPn

Format = (Byte, Word, Long, Single, Double, Extended, Packed) Attributes:

Description: Converts the source operand to extended precision (if necessary) and calculates the hyperbolic tangent of that number. Stores the result in the destination floating-point data register.

Operation Table:

DESTINATION	SOURCE					
-	+ In Range	-+ Zero -	+ Infinity –			
Result	Hyperbolic Tangent	+ 0.0 - 0.0) + 1.0 - 1.0			
NOTE: If the source operand	d is a NAN, refer to 1.6.5	Not-A-Numbers for more in	nformation.			
ating-Point Status Re	egister:					
Condition Codes:	Affected as	described in 3.6.2 Co	onditional Testing.			
Quotient Byte:	Not affected	d.				
Exception Byte:	BSUN	Cleared				
	SNAN	Refer to 1.6.5 Not-	A-Numbers.			
	OPERR	Cleared				
	OVFL	Cleared				
	UNFL	Refer to underflow manual.	in the appropriate us			
	DZ	Cleared				
	INEX2	Refer to inexact user's manual.	result in the approp			
	INEX1		, refer to inexact resu the appropriate us herwise.			
Accrued Exception E		described in IEEE ex appropriate user's ma	ception and trap com anual.			

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

5-139

Floating Point Instructions

FTANH FTANH Hyperbolic Tangent (MC6888X, M68040FPSP) Instruction Format: 14 13 12 11 10 9 8 7 6 5 4 3 2

1	1	1	1	COPROCESSOR ID		0	0	0	EFFECTIVE		ADDRESS REGISTER			
0	R/M	0		SOURCE PECIFIER		STINATI		0	0	0	1	0	0	1

Instruction Fields:

Coprocessor ID field—Specifies which coprocessor in the system is to execute this instruction. Motorola assemblers default to ID = 1 for the floating-point coprocessor.

Effective Address field—Determines the addressing mode for external operands. If R/M = 0, this field is unused and should be all zeros. If R/M = 1, this field is encoded with an M68000 family addressing mode as listed in the following table

Addressing Mode	Mode	Register		Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn		(xxx).W	111	000
An	-	-		(xxx).L	111	001
(An)	010	reg. number:An		# < data >	111	100
(An) +	011	reg. number:An				
– (An)	100	reg. number:An				
(d ₁₆ ,An)	101	reg. number:An		(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An		(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An		(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An		([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An		([bd,PC],Xn,od)	111	011

*Only if < fmt > is byte, word, long, or single

R/M field—Specifies the source operand address mode.

0 — The operation is register to register.
1 — The operation is < ea > to register.

FTANH

Hyperbolic Tangent (MC6888X, M68040FPSP)

FTANH

Source Specifier field-Specifies the source register or data format. burce specifier field—Specifies the source register or data f If R/M = 0, specifies the source floating-point data register. If R/M = 1, specifies the source floating-point data register.

- 100 Word Integer (W) 101 Double-Precision Real (D) 110 Byte Integer (B)

Destination Register field—Specifies the destination floating- point data register. If R/ M = 0 and the source and destination fields are equal, the input operand is taken from the specified floating-point data register, and the result is written into the same register. If the single register syntax is used, Motorola assemblers set the source and destination fields to the same value.

FTANH

Floating Point Instructions

Floating Point Instructions

FTENTOX

FTENTOX

 $10^{\text{Source}} \rightarrow \text{FPn}$ Operation:

Assembler FTENTOX. < fmt > < ea > ,FPn Syntax: FTENTOX.X FPm,FPn FTENTOX.X FPn	

Format = (Byte, Word, Long, Single, Double, Extended, Packed) Attributes:

10^x (MC6888X, M68040FPSP)

Description: Converts the source operand to extended precision (if necessary) and calculates 10 to the power of that number. Stores the result in the destination floatingpoint data register.

Operation Table:

DESTINATION					SOURCE				
	+	In Range	-	+	Zero	-	+	Infinity	-
Result		10 ^x			+ 1.0		+ inf		+0.0

Floating-Point Status Register:

aning i onit otatao negiste					
Condition Codes:	Affected as described in 3.6.2 Conditional Testing.				
Quotient Byte:	Not affected	L			
Exception Byte:	BSUN SNAN OPERR OVFL	Cleared Refer to 1.6.5 Not-A-Numbers . Cleared Refer to overflow in the appropriate user's manual.			
	UNFL	Refer to underflow in the appropriate user's manual.			
	DZ	Cleared			
	INEX2	Refer to inexact result in the appropriate user's manual.			
	INEX1	If < fmt > is packed, refer to the appropriate user's manual inexact result on decimal input; cleared otherwise.			
Accrued Exception Byte: Affected as described in IEEE exception and trability in the appropriate user's manual.					

5-142

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

FTENTOX

MOTOROLA

Floating Point Instructions

FTENTOX

10^x (MC6888X, M68040FPSP)

R/M field—Specifies the source operand address mode 0 — The operation is register to register.
1 — The operation is < ea > to register.

Source Specifier field-Specifies the source register or data format.

If R/M = 0, specifies the source floating-point data register. If R/M = 1, specifies the source data format:

- 000 Long-Word Integer (L) 001 Single-Precision Real (S) 010 Extended-Precision Real (X) 011 Packed-Decimal Real (P)

- 100 Word Integer (W) 101 Double-Precision Real (D) 110 Byte Integer (B)

Destination Register field—Specifies the destination floating- point data register. If R/ M = 0 and the source and destination fields are equal, the input operand is taken from the specified floating-point data register, and the result is written into the same register. If the single register syntax is used, Motorola assemblers set the source and destination fields to the same value.

FTRAPco	Trap on Floating-Point Condition (MC6888X, MC68040)	FTRAPCC			
Operation:	If Condition True Then TRAP				
Assembler Syntax:	FTRAPcc FTRAPcc.W # < data > FTRAPcc.L # < data >				
Attributes:	Size = (Word, Long)				
Description: If the selected condition is true, the processor initiates exception processing. A vector number is generated to reference the TRAPcc exception vector. The stacked					

program counter points to the next instruction. If the selected condition is not true, there is no operation performed and execution continues with the next instruction in sequence. The immediate data operand is placed in the word(s) following the conditional predicate word and is available for user definition for use within the trap handler

The conditional specifier cc selects one of the 32 conditional tests defined in 3.6.2 Conditional Testing

Eloating-Point Status Register

 ating i onit otatao negiste	••			
Condition Codes:	Not affected.			
Quotient Byte:	Not affected.			
Exception Byte:	BSUN	Set if the NAN condition code is set and the condition selected is an IEEE nonaware test.		
	SNAN	Not Affected.		
	OPERR	Not Affected.		
	OVFL	Not Affected.		
	UNFL	Not Affected.		
	DZ	Not Affected.		
	INEX2	Not Affected.		
	INEX1	Not Affected.		
Accrued Exception Byte:	The IOP bit is set if the BSUN bit is set in the exception byte; no other bit is affected.			

5-144

FTENTOX

Instruction Format:	
---------------------	--

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	
1	1	1	1	COF	COPROCESSOR ID		0	0	0		EFI MODE	FECTIVE		ESS EGISTE	R	
0	R/M	0		SOURCE			STINATI		0	0	1	0	0	1	0	

10^x (MC6888X, M68040FPSP)

Instruction Fields:

FTENTOX

Coprocessor ID	field-Spe	cifies which	coproces	sor	in the	e sy	stem	is to	o execute this
instruction.	Motorola	assemblers	default	to	ID =	= 1	for	the	floating-point
coprocesso	r.								

Effective Address field—Determines the addressing mode for external operands. If R/M = 0, this field is unused and should be all zeros. If R/M = 1, this field is encoded with an M68000 family addressing mode as listed in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn	(xxx).W	111	000
An	-	_	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	111	100
(An) +	011	reg. number:An			
- (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

if < fmt > is byte, word, long, or single

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

5-143

FTRAPCC Trap on Floating-Point Condition (MC6888X, MC68040) **FTRAPcc**

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COF	ROCES	SOR	0	0	1	1	1	1		MODE	
0	0	0	0	0	0 0 0			0	0		CON	DITIONA	L PRED	DICATE	
16-BIT OPERAND OR MOST SIG							IFICANT	WORD	OF 32-E	IT OPER	RAND (IF	NEEDE	D)		
				LEAST	SIGNIFI	CANT W	ORD OR	32-BIT	OPERA	ND (IF N	EEDED)				

Instruction Fields:

Mode field-Specifies the form of the instruction.

- 010 The instruction is followed by a word operand. 011 The instruction is followed by a long-word operand. 100 - The instruction has no operand.
- Conditional Predicate field—Specifies one of 32 conditional tests as described in 3.6.2 Conditional Testing.

Operand field—Contains an optional word or long-word operand that is user defined.

NOTE

When a BSUN exception occurs, a preinstruction exception is when a book exception cocurs, a preinstruction exception is taken by the main processor. If the exception handler returns without modifying the image of the program counter on the stack frame (to point to the instruction following the FTRAPcc), it must clear the cause of the exception (by clearing the NAN bit or dis-abling the BSUN trap), or the exception occurs again immediate-ly upon return to the routine that caused the exception.

FTST

Assembler Syntax:

Test Floating-Point Operand (MC6888X, MC68040)

Condition Codes for Operand \rightarrow FPCC Operation:

FTST. < fmt > < ea >

FTST.X FPm

Format = (Byte, Word, Long, Single, Double, Extended, Packed) Attributes:

Description: Converts the source operand to extended precision (if necessary) and sets the condition code bits according to the data type of the result.

Operation Table: The contents of this table differfrom the other operation tables. A letter in an entry of this table indicates that the designated condition code bit is always set by the FTST operation. All unspecified condition code bits are cleared during the operation.

					SOURCE				
DESTINATION	+	In Range	-	+	Zero	-	÷	Infinity	-
Result	none		N	Z	1	ΝZ	I		NI

NOTE: If the source operand is a NAN, set the NAN condition code bit. If the source operand is an SNAN, set the SNAN bit in the floating-point status register exception byte

Floating-Point Status Register:

Condition Codes:	Affected as o	described in 3.6.2 Conditional Testing.
Quotient Byte:	Not affected	
Exception Byte:	BSUN SNAN OPERR OVFL UNFL DZ INEX2 INEX1	Cleared Refer to 1.6.5 Not-A-Numbers . Cleared Cleared Cleared Cleared Cleared If < fmt > is packed, refer to exception processing in the appropriate user's manual; cleared otherwise.
Accrued Exception Byte:	Affected as of priate user's	lescribed in exception processing in the appro- manual.
Accrued Exception Byte:		lescribed in exception processing in the ap

5-146

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

5-147

Floating Point Instructions

Floating Point Instructions

F	ST	•	Test Floating-Point Operand (MC6888X, MC68040)	FTST	FTST Test Floating-Point Oper (MC6888X, MC68040)	and FTST
Inst	ruction	n Forr	nat:		R/M field—Specifies the source operand address mo 0 — The operation is register to register.	de.
15	14	13	12 11 10 9 8 7 6 5 4	3 2 1 0	 The operation is < ea > to register. 	
1	1	1	1 ID 0 0 0 MODE	ECTIVE ADDRESS REGISTER	Source Specifier field—Specifies the source register	or data format.
0	R/M	0	SOURCE DESTINATION 0 1 1	1 0 1 0	If R/M = 0, specifies the source floating-point data	register.
	-		of content incontent		If R/M = 1, specifies the source data format:	
					000 — Long-Word Integer (L)	
Inst	ructior	n Field	ls:		001 — Single-Precision Real (S)	
					010 — Extended-Precision Real (X)	
	Effect	ive Ac	dress field-Determines the addressing mode for ex	ternal operands.	011 — Packed-Decimal Real (P)*	
	lf R	M = 0), this field is unused and should be all zeros.		100 — Word Integer (W)	
	lf R	/M = 1	, specifies the location of the source operand. Only da	ata addressing modes	101 — Double-Precision Real (D)	

can be used as listed in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	111	100
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

*Only if < fmt > is byte, word, long, or single

110 - Byte Integer (B)

This encoding will cause an unimplemented data type exception in the MC68040 to allow emulation in software.

Destination Register field—Since the floating-point unit uses a common command word format for all of the arithmetic instructions (including FTST), this field is treated in the same manner for FTST as for the other arithmetic instructions, even though the destination register is not modified. This field should be set to zero to maintain compatibility with future devices; however, the floating-point unit does not signal an illegal instruction trap if it is not zero.

FTST

Floating Point Instructions

FTWOTOX (MC6888X, M68040FPSP) $2^{\text{Source}} \to \text{FPn}$ Operation:

FTWOTOX. < fmt > < ea > ,FPn Assemble FTWOTOX.X FPm,FPn FTWOTOX.X FPn Syntax:

Format = (Byte, Word, Long, Single, Double, Extended, Packed) Attributes:

Description: Converts the source operand to extended precision (if necessary) and calculates two to the power of that number. Stores the result in the destination floatingpoint data register.

Operation Table:

			SOURCE			
DESTINATION	+ In Range	-	+ Zero -	+	Infinity	-
Result	2 ^x		+ 1.0	+ inf		+0.0

Floating-Point Status Register

ating-Point Status Registe	er:	
Condition Codes:	Affected as	described in 3.6.2 Conditional Testing.
Quotient Byte:	Not affected	L
Exception Byte:	BSUN SNAN OPERR OVFL	Cleared Refer to 1.6.5 Not-A-Numbers . Cleared Refer to overflow in the appropriate user's
	UNFL	manual. Refer to underflow in the appropriate user's manual.
	DZ	Cleared
	INEX2	Refer to inexact result in the appropriate user's manual.
	INEX1	If < fmt > is packed, refer to inexact result on decimal input in the appropriate user's manual; cleared otherwise.
Accrued Exception Byte:		described in IEEE exception and trap compati- appropriate user's manual.

5-150

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

FTWOTOX

FTWOTOX

```
FTWOTOX
```

2^x (MC6888X, M68040FPSP)

FTWOTOX

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COP	COPROCESSOR ID		0	0	0			FECTIVE			
											MODE		н	EGISTE	к
0	R/M	0		SOURCE		DESTINATION REGISTER		0	0	1	0	0	0	1	

Instruction Fields:

Coprocessor ID	field—Spe	cifies which	coproces	sor	in t	he	sys	stem	is to	o execute this
instruction.	Motorola	assemblers	default	to	ID	=	1	for	the	floating-point
coprocesso	r.									

Effective Address field-Determines the addressing mode for external operands.

If R/M = 0, this field is unused and should be all zeros.

If R/M = 1, this field is encoded with an M68000 family addressing mode as listed in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	111	100
(An) +	011	reg. number:An			
– (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011
([bd,An,Xn],od)	110	reg. number:An	([bd,PC,Xn],od)	111	011
([bd,An],Xn,od)	110	reg. number:An	([bd,PC],Xn,od)	111	011

*Only if < fmt > is byte, word, long, or single

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

5-151

Floating Point Instructions

FTWOTOX

2^x (MC6888X, M68040FPSP)

- R/M field—Specifies the source operand address mode 0 — The operation is register to register
 1 — The operation is < ea > to register.
- Source Specifier field-Specifies the source register or data format.
- If R/M = 0, specifies the source floating-point data register. If R/M = 1, specifies the source data format:

 - 000 Long-Word Integer (L)

 - 001 Single-Precision Real (S) 010 Extended-Precision Real (X) 011 Packed-Decimal Real (P)

 - 100 Word Integer (W) 101 Double-Precision Real (D) 110 Byte Integer (B)
- Destination Register field—Specifies the destination floating- point data register. If R/ M = 0 and the source and destination fields are equal, the input operand is taken from the specified floating-point data register, and the result is written into the same register. If the single register syntax is used, Motorola assemblers set the source and destination fields to the same value.

SECTION 6 SUPERVISOR (PRIVILEGED) INSTRUCTIONS

This section contains information about the supervisor privileged instructions for the M68000 family. Each instruction is described in detail, and the instruction descriptions are arranged in alphabetical order by instruction mnemonic.

Any differences within the M68000 family of instructions are identified in the instruction. If an instruction only applies to a certain processor or processors, the processor(s) that the instruction pertains to is identified under the title of the instruction. For example:

Invalidate Cache Lines (MC68040)

All references to the MC68000, MC68020, and MC68030 include references to the corresponding embedded controllers, MC68EC000, MC68EC020, and MC68EC030. All references to the MC68040 include the MC68LC040 and MC68EC040. This applies throughout this section unless otherwise specified.

If the instruction applies to all the M68000 family but a processor or processors may use a different instruction field, instruction format, etc., the differences will be identified within the paragraph. For example:

MC68020, M	C68030 and	MC68040 only										
(bd,An,Xn)*	110	reg. number: An		(bd,PC,Xn)*	-	-						
*Can be used y	Can be used with CPU32 processo											

The following instructions are listed separately for each processor due to the many differences involved within the instruction:

PFLUSH	Flush ATC Entries
PMOVE	Move PMMU Register
PTEST	Test Logical Address

Appendix A Processor Instruction Summary provides a listing of all processors and the instructions that apply to them for quick reference.

ANDI to SR	AND Immediate to the Status Register	ANDI to SR	CINV	Invalidate Cache Lines (MC68040, MC68LC040)	CINV
	(M68000 Family)		Operation:	If Supervisor State Then Invalidate Selected Cache Lines	
Operation:	If Supervisor State Then Source L SR \rightarrow SR ELSE TRAP		Assembler	ELSE TRAP	
Assembler Syntax:	ANDI # < data > ,SR		Syntax:	CINVL < caches > ,(An) CINVP < caches > ,(An) CINVA < caches >	
Attributes:	size = (word)			Where < caches > specifies the instruction cache,	
status registe	orms an AND operation of the immediate operand with th r and stores the result in the status register. All implem r are affected.		Attributes:	data cache, both caches, or neither cache. Unsized	
Condition Codes			caches, or	validates selected cache lines. The data cache, instructi neither cache can be specified. Any dirty data in data of	cache lines that
X N * *	Z V C * * *			re lost; the CPUSH instruction must be used when dir the data cache.	ty data may be
X—Cleared if	bit 4 of immediate operand is zero; unchanged otherwis	e.	1. CINV	lines can be selected in three ways: /L invalidates the cache line (if any) matching the physical	address in the
N—Cleared if	bit 3 of immediate operand is zero; unchanged otherwis	e.		ified address register.	
Z—Cleared if	bit 2 of immediate operand is zero; unchanged otherwis	e.		/P invalidates the cache lines (if any) matching the physical especified address register. For example, if 4K-byte pages	
V—Cleared if	bit 1 of immediate operand is zero; unchanged otherwis	e.		nd An contains \$12345000, all cache lines matching page	
C—Cleared if	bit 0 of immediate operand is zero; unchanged otherwis	e.	valida	ate.	
Instruction Forma	at:			/A invalidates all cache entries.	
5 14 13	12 11 10 9 8 7 6 5 4 3	2 1 0	Condition Code	s:	
0 0 0	0 0 0 1 0 1 1 1 1 16-BIT WORD DATA	1 0 0	Not affected	L.	

Supervisor (Privileged) Instructions


M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

6-3

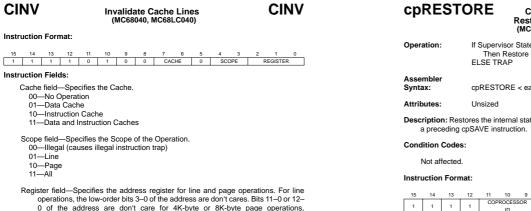

Register field—Specifies the address register for line and page operations. For line operations, the low-order bits 3–0 of the address are don't cares. Bits 11–0 or 12–0 of the address are don't care for 4K-byte or 8K-byte page operations, respectively.

Supervisor (Privileged) Instructions **CDRESTORE**

Supervisor (Privileged) Instructions

cpRE	ST	OR	E	Rest	oproc ore F 8020,	unct	ions		ср	RE	EST	ΓΟΙ	RE
Operation:			Superviso Then Re SE TRAP	store li	nterna	l Stat	e of C	oproce	essor				
Assembler Syntax:		срҒ	RESTOR	E < ea	>								
Attributes:		Un	sized										
Description a prec			the intern /E instruc		e of a o	copro	cessoi	rusua	ly afte	er it ha	as bee	en sav	ed by
Condition	Code	s:											
Not af	fected	l.											
Instruction	Form	nat:											
15 14	13	12	11 10	9	8	7	6	5	4	3	2	1	0
1 1	1	1	COPROCE	SSOR	1	0	1		EFF	ECTIVE	ADDRE	SS	

1 0 1

ID

MODE

REGISTER

cpRESTORE

cpRESTORE Coprocessor Restore Functions (MC68020, MC68030)

Instruction Fields:

Coprocessor ID field—Identifies the coprocessor that is to be restored. Coprocessor ID of 000 results in an F-line exception for the MC68030.

Effective Address field—Specifies the location where the internal state of the coprocessor is located. Only postincrement or control addressing modes can be used as listed in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	-	-	(xxx).W	111	000
An	-	_	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	111	100
(An) +	011	reg. number:An			
— (An)	-	-			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011
([bd,An,Xn], od)	110	reg. number:An	([bd,PC,Xn], od)	111	011
([bd,An],Xn,od)	110	reg.number:An	([bd,PC],Xn, od	111	011

NOTE

If the format word returned by the coprocessor indicates "come again", pending interrupts are not serviced.

cpSAVE	Coprocessor Save Function (MC68020, MC68030)	cpSAVE
Operation:	If Supervisor State Then Save Internal State of Coprocessor ELSE TRAP	

Assembler Syntax:

Attributes: Insized

coSAVE < ea >

Description: Saves the internal state of a coprocessor in a format that can be restored by a cpRESTORE instruction.

Condition Codes

Not affected

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COF	COPROCESSOR ID			0	0	EFFECTIVE AI MODE				ADDRESS REGISTER	
Instru	uctior	n Field	ds:												

Coprocessor ID field-Identifies the coprocessor for this operation. Coprocessor ID of 000 results in an F-line exception for the MC68030.

Effective Address field—Specifies the location where the internal state of the coprocessor is to be saved. Only predecrement or control alterable addressing modes can be used as listed in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	-	_	(xxx).W	111	000
An	-	_	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	-	_
(An) +	_	_			
— (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	-
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	-	-
([bd,An,Xn], od)	110	reg. number:An	([bd,PC,Xn],od)	-	-
([bd,An],Xn, od)	110	reg. number:An	([bd,PC],Xn, od)	-	_

6-6

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

6-7

Supervisor (Privileged) Instructions

CPUSH	Push and Invalidate Cache Lines (MC68040, MC68LC040)	CPUSH
Operation:	If Supervisor State Then If Data Cache Then Push Selected Dirty Data Cache Lines Invalidate Selected Cache Lines ELSE TRAP	
Assembler Syntax:	CPUSHL < caches > ,(An) CPUSHP < caches > ,(An) CPUSHA < caches >	
	Where < caches > specifies the instruction cache, da both caches, or neither cache.	ata cache,

Attributes: Unsized

Description: Pushes and then invalidates selected cache lines. The DATA cache, instruction cache, both caches, or neither cache can be specified. When the data cache is specified, the selected data cache lines are first pushed to memory (if they contain dirty DATA) and then invalidated. Selected instruction cache lines are invalidated. Specific cache lines can be selected in three ways

- CPUSHL pushes and invalidates the cache line (if any) matching the physical address in the specified address register.
- CPUSHP pushes and invalidates the cache lines (if any) matching the physical memory page in the specified address register. For example, if 4K-byte page sizes are selected and An contains \$12345000, all cache lines matching page \$12345000 are selected.
- 3. CPUSHA pushes and invalidates all cache entries.

Condition Codes

Not affected.

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	0	1	0	0	CA	CHE	1	SCO	OPE	R	EGISTE	R

CPUSH

CPUSH

Supervisor (Privileged) Instructions

- Cache field-Specifies the Cache.
 - 00—No Operation 01—Data Cache
 - 10-Instruction Cache 11—Data and Instruction Caches
- Scope field-Specifies the Scope of the Operation.
- 00—Illegal (causes illegal instruction trap) 01—Line

10-Page

11—All


Register field-Specifies the address register for line and page operations. For line operations, the low-order bits 3-0 of the address are don't care. Bits 1-0 or 12-0 of the address are don't care for 4K-byte or 8K-byte page operations, respectively.

Push and Invalidate Cache Lines (MC68040, MC68LC040) Instruction Fields:

EORI to SR	Exclusive-OR Immediate to the Status Register (M68000 Family)	EORI to SR
Operation:	If Supervisor State Then Source ⊕ SR → SR ELSE TRAP	
Assembler Syntax:	EORI # < data > ,SR	
Attributes:	Size = (Word)	

Description: Performs an exclusive-OR operation on the contents of the status register using the immediate operand and stores are affected.

Condition Codes

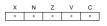

X-Changed if bit 4 of immediate operand is one; unchanged otherwise

N-Changed if bit 3 of immediate operand is one; unchanged otherwise

Z-Changed if bit 2 of immediate operand is one; unchanged otherwise

- V-Changed if bit 1 of immediate operand is one: unchanged otherwise.
- C-Changed if bit 0 of immediate operand is one; unchanged otherwise.

Instruction Format:

	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	0	0	0	0	1	0	1	0	0	1	1	1	1	1	0	0
Г	16-BIT WORD DATA															

Supervisor (Privileged) Instructions FRESTORE

Restore Internal Floating-Point State (MC68881, MC68882, MC68040 only) If in Supervisor State Operation: Then FPU State Frame \rightarrow Internal State ELSE TRAP Assemble Syntax: FRESTORE < ea >

Attributes: Unsized

Description: Aborts the execution of any floating-point operation in progress and loads a new floating-point unit internal state from the state frame located at the effective address. The first word at the specified address is the format word of the state frame. It specifies the size of the frame and the revision number of the floating-point unit that created it. A format word is invalid if it does not recognize the size of the frame or the revision number does not match the revision of the floating-point unit. If the format word is invalid, FRESTORE aborts, and a format exception is generated. If the format word is valid, the appropriate state frame is loaded, starting at the specified location and proceeding through higher addresses.

The FRESTORE instruction does not normally affect the programmer's model registers The FRESTORE instruction does not normally affect the programmer's model registers of the floating-point coprocessor, except for the NULL state size, as described below. It is only for restoring the user invisible portion of the machine. The FRESTORE instruction is used with the FMOVEM instruction to perform a full context restoration of the floating-point unit, including the floating-point data registers and system control registers. To accomplish a complete restoration, the FMOVEM instructions are first executed to load the programmer's model, followed by the FRESTORE instruction to load the internal state and continue any previously suspended operation.

6-10

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

FRESTORE

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

6-11

Supervisor (Privileged) Instructions

FRESTORE Restore Internal Floating-Point State (MC68881, MC68882, MC68040 only)

- The current implementation supports the following four state frames: NULL: This state frame is 4 bytes long, with a format word of \$0000. An FRE-STORE operation with this size state frame is equivalent to a hardware reset STORE operation with this size state inter is equivalent to a national reset, of the floating-point unit. The programmer's model is set to the reset state, with nonsignaling NANs in the floating-point data registers and zeros in the floating-point control register, floating-point status register, and floating-point instruction address register. (Thus, it is unnecessary to load the pro-grammer's model before this operation.)
- This state frame is 4 bytes long in the MC68040, 28 (\$1C) bytes long in the IDI E. MC68881, and 60 (\$3C) bytes long in the MC6882. An FRESTORE oper-ation with this state frame causes the floating-point unit to be restored to the idle state, waiting for the initiation of the next instruction, with no exceptions pending. The programmer's model is not affected by loading this type of state frame.
- UNIMP: This state frame is generated only by the MC68040. It is 48 (\$30) bytes long. This state frame is generated only by the MC68040. It is 48 (\$30) bytes long, An FSAVE that generates this size frame indicates either an unimplemented floating-point instruction or only an E1 exception is pending. This frame is never generated when an unsupported data type exception is pending or an E3 exception is pending. If both E1 and E3 exceptions are pending, a BUSY frame is generated.
- This state frame is 96 (\$60) bytes long in the MC68040, 184 (\$B8) bytes long in the MC68881, and 216 (\$D8) bytes long in the MC68882. An FRESTORE operation with this size state frame causes the floating-point unit to be BUSY: restored to the busy state, executing the instructions that were suspended by a previous FSAVE operation. The programmer's model is not affected by loading this type of state frame; however, the completion of the suspended instructions after the restore is executed may modify the programmer's model

Floating-Point Status Register: Cleared if the state size is NULL; otherwise, not affected.

Supervisor (Privileged) Instructions FRESTORE

FRESTORE

Restore Internal Floating-Point State (MC68881, MC68882, MC68040 only)

11 10 9 COPROCESSOR EFFECTIVE ADDRESS 1 1 1 1 1 0 MODE REGISTER

Instruction Field:

1

Instruction Format:

Effective Address field—Determines the addressing mode for the state frame. Only postincrement or control addressing modes can be used as listed in the following

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	-	-	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	-	_
(An) +	011	reg. number:An			
—(An)	-	-			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011
([bd,An,Xn], od)	110	reg. number:An	([bd,PC,Xn], od)	111	011
([bd,An],Xn, od)	110	reg. number:An	([bd,PC],Xn, od)	111	011

FSAVE Save Internal Floating-Point State (MC68881, MC68882, MC68040 only) FSAVE Operation: If in Supervisor State Then FPU Internal State → State Frame ELSE TRAP State Frame

Assembler	
Syntax:	FSAVE < ea >
A	11

Attributes: Unsized

Description: FSAVE allows the completion of any floating-point operation in progress for the MC68040. It saves the internal state of the floating-point unit in a state frame located at the effective address. After the save operation, the floating-point unit is in the idle state, waiting for the execution of the next instruction. The first word written to the state frame is the format word specifying the size of the frame and the revision number of the floating-point unit.

Any floating-point operations in progress when an FSAVE instruction is encountered can be completed before the FSAVE executes, saving an IDLE state frame. Execution of instructions already in the floating-point unit pipeline continues until completion of all instructions in the pipeline or generation of an exception by one of the instructions. An IDLE state frame is created by the FSAVE if no exceptions occurred; otherwise, a BUSY or an UNIMP stack frame is created.

FSAVE suspends the execution of any operation in progress and saves the internal state in a state frame located at the effective address for the MC68881/MC68882. After the save operation, the floating-point coprocessor is in the idle state, waiting for the execution of the next instruction. The first word written to the state frame is the format word, specifying the size of the frame and the revision number of the floating-point coprocessor. The microprocessor unit initiates the FSAVE instruction by reading the floating-point coprocessor save CIR. The floating-point coprocessor save CIR is encoded with a format word that indicates the appropriate action to be taken by the main processor. The current implementation of the floating-point coprocessor always returns one of five responses in the save CIR:

Value	Definition
\$0018	Save NULL state frame
\$0118	Not ready, come again
\$0218	Illegal, take format exception
\$XX18	Save IDLE state frame
\$XXB4	Save BUSY state frame

number.

6-14

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL MOTOROLA

```
Supervisor (Privileged) Instructions
```

FSAVE Save Internal Floating-Point State (MC68881, MC68882, MC68040 only)

FSAVE

The FSAVE does not save the programmer's model registers of the floating-point unit; it saves only the user invisible portion of the machine. The FSAVE instruction may be used with the FMOVEM instruction to perform a full context save of the floating-point unit that includes the floating-point data registers and system control registers. To accomplish a complete context save, first execute an FSAVE instruction to suspend the current operation and save the internal state, then execute the appropriate FMOVEM instructions to store the programmer's model.

Floating-Point Status Register: Not affected.

Instruction Format

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COF	COPROCESSOR		1	0	0		EF MODE	FECTIVI	E ADDRI	ESS REGISTE	R

Instruction Field:

Effective Address field—Determines the addressing mode for the state frame. Only predecrement or control alterable addressing modes can be used as listed in the following table:

Addressing Mode	Mode	Register]	Addressing Mode	Mode	Register
Dn	-	-	1	(xxx).W	111	000
An	-	-	1	(xxx).L	111	001
(An)	010	reg. number:An	1	# < data >	-	-
(An) +	-	-	1			
—(An)	100	reg. number:An				
(d ₁₆ ,An)	101	reg. number:An	1	(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An	1	(d ₈ ,PC,Xn)	-	-
(bd,An,Xn)	110	reg. number:An	1	(bd,PC,Xn)	-	-
([bd,An,Xn] ,od)	110	reg. number:An	1	([bd,PC,Xn] ,od)	-	-
([bd,An],Xn ,od)	110	reg. number:An	1	([bd,PC],Xn ,od)	-	-

FSAVE Save Internal Floating-Point State (MC68881, MC68882, MC68040 only)

FSAVE

The not ready format word indicates that the floating-point coprocessor is not prepared to perform a state save and that the microprocessor unit should process interrupts, if necessary, and re-read the save CIR. The floating-point coprocessor uses this format word to cause the main processor to wait while an internal operation completes, if possible, to allow an IDLE frame rather than a BUSY frame to be saved. The illegal format word above an FSAVE instruction that is attempted while the floating-point coprocessor executes a previous FSAVE instruction. All other format words cause the microprocessor unit to save the indicated state frame at the specified address. For state frame details see state frames in the appropriate user's manual.

The following state frames apply to both the MC68040 and the MC68881/MC68882.

- NULL: This state frame is 4 bytes long. An FSAVE instruction that generates this state frame indicates that the floating-point unit state has not been modified since the last hardware reset or FRESTORE instruction with a NULL state frame. This indicates that the programmer's model is in the reset state, with nonsignaling NANs in the floating-point data registers and zeros in the floating- point control register, floating-point status register, and floating-point instruction address register. (Thus, it is not necessary to save the programmer's model.)
- IDLE: This state frame is 4 bytes long in the MC68040, 28 (\$1C) bytes long in the MC68881, and 60 (\$3C) bytes long in the MC68882. An FSAVE instruction that generates this state frame indicates that the floating-point unit finished in an idle condition and is without any pending exceptions waiting for the initiation of the next instruction.
- UNIMP: This state frame is generated only by the MC68040. It is 48 (\$30) bytes long. An FSAVE that generates this size frame indicates either an unimplemented floating-point instruction or that only an E1 exception is pending. This frame is never generated when an unsupported data type exception or an E3 exception is pending. If both E1 and E3 exceptions are pending, a BUSY frame is generated.
- BUSY: This state frame is 96 (\$60) bytes long in the MC68040, 184 (\$B8) bytes long in the MC68881, and 216 (\$D8) bytes long in the MC68882. An FSAVE instruction that generates this size state frame indicates that the floatingpoint unit encountered an exception while attempting to complete the execution of the previous floating-point instructions.
- MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL


6-15

Supervisor (Privileged) Instructions

MOVE MOVE from SR from SR Move from the Status Register (MC68EC000, MC68010, MC68020, MC68030, MC68040, CPU32) If Supervisor State Operation: Then SR → Destination Else TRAP Assemble Syntax: MOVE SR. < ea > Size = (Word) Attributes: Description: Moves the data in the status register to the destination location. The destination is word length. Unimplemented bits are read as zeros. Condition Codes

Not affected.

Instruction Format:

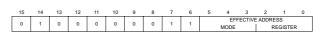

MOTOROLA

Supervisor (Privileged) Instructions

MOVE from SR

Move from the Status Register (MC68EC000, MC68010, MC68020, MC68030, MC68040, CPU32)

MOVE from SR

> Register 000

001

Instruction Field:

Effective Address field—Specifies the destination location. Only data alterable addressing modes can be used as listed in the following tables:

Addressing Mode	Mode	Register	Addressing Mode	
Dn	000	reg. number:Dn	(xxx).W	I
An	-	-	(xxx).L	
(An)	010	reg. number:An	# < data >	
(An) +	011	reg. number:An		İ
—(An)	100	reg. number:An		I
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	I
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	

MC68020, MC68030, and MC68040 only 110 reg. numb (bd.An.Xn)*

(bd,An,Xn)*	110	reg. number:An		(bd,PC,Xn)*				
([bd,An,Xn] ,od)	110	reg. number:An		([bd,PC,Xn] ,od)				
([bd,An],Xn ,od)	110	reg. number:An		([bd,PC],Xn ,od)				
*Available for the CPU32.								

NOTE

Use the MOVE from CCR instruction to access only the condition codes.

MOVE to SR

Move to the Status Register (M68000 Family) If Supervisor State

Then Source → SR Else TRAP

Assembler Syntax: Attributes:

MOVE

to SR

Operation:

Size = (Word)

MOVE < ea > ,SR

Description: Moves the data in the source operand to the status register. The source operand is a word, and all implemented bits of the status register are affected.

Condition Codes:

Set according to the source operand.

Instruction Format:



6-18

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

6-19

Supervisor (Privileged) Instructions

MOVE ŬŚP

Supervisor (Privileged) Instructions

MOVE to SR

Move to the Status Register (M68000 Family)

MOVE to SR

Instruction Field:

Effective Address field-Specifies the location of the source operand. Only data addressing modes can be used as listed in the following tables

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	000	reg. number:Dn	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	111	100
(An) +	011	reg. number:An			
—(An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011

MC68020. MC68030. and MC68040 only

(bd,An,Xn)*	110	reg. number:An		(bd,PC,Xn)*	111	011		
([bd,An,Xn] ,od)	110	reg. number:An		([bd,PC,Xn] ,od)	111	011		
([bd,An],Xn ,od)	110	reg. number:An		([bd,PC],Xn ,od)	111	011		

*Available for the CPU32



UJF	
Operation:	lf

Then USP \rightarrow An or An \rightarrow USP Else TRAP

MOVE USP,An MOVE An,USP Assembler Syntax:

Attributes: Size = (Long)

Description: Moves the contents of the user stack pointer to or from the specified address register.

Condition Codes:

Not affected.

Instruction Format:

 15
 14
 13
 12
 11
 10
 9
 8
 7
 6
 5
 4
 3
 2
 1
 0

 0
 1
 0
 0
 1
 1
 1
 0
 0
 1
 1
 0
 dr
 REGISTER
 Instruction Fields:

dr field-Specifies the direction of transfer.

0—Transfer the address register to the user stack pointer. 1—Transfer the user stack pointer to the address register.

Register field—Specifies the address register for the operation.

6-20

Move User Stack Pointer (M68000 Family)

MOVEC MOVEC MOVEC Move Control Register (MC68010, MC68020, MC68030, MC68040, CPU32) Move Control Register (MC68010, MC68020, MC68030, MC68040, CPU32) MOVEC Operation: If Supervisor State Register field-Specifies the register number. Then $\text{Rc} \rightarrow \text{Rn}$ or $\text{Rn} \rightarrow \text{Rc}$ Control Register field-Specifies the control register. Else TRAP Control Register Г Hex¹ MOVEC Rc,Rn MOVEC Rn,Rc Assembler Syntax: Attributes: Size = (Long) Description: Moves the contents of the specified control register (Rc) to the specified general register (Rn) or copies the contents of the specified general register to the specified control register. This is always a 32-bit transfer, even though the control register may be implemented with fewer bits. Unimplemented bits are read as zeros. Condition Codes: Not affected Instruction Format:

0 1 0 0 1 1 0 1 1 1 0 1 dr A/D REGISTER CONTROL REGISTER	1	5	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
A/D REGISTER CONTROL REGISTER	0	1	1	0	0	1	1	1	0	0	1	1	1	1	0	1	dr
	A/	D	F	REGISTER CONTROL REGISTER											-		

Instruction Fields:

- dr field-Specifies the direction of the transfer. 0-Control register to general register 1-General register to control register.
- A/D field—Specifies the type of general register 0—Data Register 1-Address Rregister

Supervisor (Privileged) Instructions

	oonaloi nogiotoi									
MC68010/MC68020/MC68030/MC68040/CPU32										
000	Source Function Code (SFC)									
001	Destination Function Code (DFC)									
800	User Stack Pointer (USP)									
801	Vector Base Register (VBR)									
MC68020/MC68030/MC68040										
002	Cache Control Register (CACR)									
802	Cache Address Register (CAAR) ²									
803	Master Stack Pointer (MSP)									
804	Interrupt Stack Pointer (ISP)									
MC68040/MC68LC040										
003	MMU Translation Control Register (TC)									
004	Instruction Transparent Translation Register 0 (ITT0)									
005	Instruction Transparent Translation Register 1 (ITT1)									
006	Data Transparent Translation Register 0 (DTT0)									
007	DI TI III DI III DI III (DTTI)									
007	Data Transparent Translation Register 1 (DTT1)									
805	MMU Status Register (MMUSR)									
805	MMU Status Register (MMUSR)									
805 806	MMU Status Register (MMUSR) User Root Pointer (URP)									
805 806	MMU Status Register (MMUSR) User Root Pointer (URP) Supervisor Root Pointer (SRP)									
805 806 807	MMU Status Register (MMUSR) User Root Pointer (URP) Supervisor Root Pointer (SRP) MC68EC040 only									
805 806 807 004	MMU Status Register (MMUSR) User Root Pointer (URP) Supervisor Root Pointer (SRP) MC68EC040 only Instruction Access Control Register 0 (IACR0)									

Any other code causes an illegal instruction exception

2. For the MC68020 and MC68030 only

6-22

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

6-23

Supervisor (Privileged) Instructions

MOVES	Move Address Space (MC68010, MC68020, MC68030, MC68040, CPU32)	MOVES
Operation:	If Supervisor State Then Rn \rightarrow Destination [DFC] or Source [SFC] – Else TRAP	→ Rn
Assembler Syntax:	MOVES Rn, < ea > MOVES < ea > ,Rn	
Attributes:	Size = (Byte, Word, Long)	

Description: This instruction moves the byte, word, or long operand from the specified general register to a location within the address space specified by the destination function code (DFC) register, or it moves the byte, word, or long operand from a location within the address space specified by the source function code (SFC) register to the specified general register. If the destination is a data register, the source operand replaces the corresponding low-order bits of that data register, the source operand or the operation. If the destination is an address register, the source operand is signextended to 32 bits and then loaded into that address register

Condition Codes: Not affected.

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	1	1	1	0	SI	ZE	EFFE		FECTIVE		ESS EGISTE	R
A/D	R	EGISTE	R	dr	0	0	0	0	0	0	0	0	0	0	0

Supervisor (Privileged) Instructions

MOVES

MOVES

Move Address Space (MC68010, MC68020, MC68030, MC68040, CPU32)

Instruction Fields:

Size field-Specifies the size of the operation.

Addressing Mode Mode

00—Byte Operation 01—Word Operation

10-Long Operation

the following tables

address space. Only memory alterable addressing modes can be used as listed in Addressing Mode Mode Register Register

Dn	-	-	(xxx).W	111	000
An	-	—	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	-	-
(An) +	011	reg. number:An			
—(An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	-

Effective Address field-Specifies the source or destination location within the alternate

	MC68	3020, MC68030,	an	d MC68040 only
(bd,An,Xn)*	110	reg. number:An		(bd,PC,Xn)*
([bd,An,Xn] ,od)	110	reg. number:An		([bd,PC,Xn] ,od)
([bd,An],Xn ,od)	110	reg. number:An		([bd,PC],Xn ,od)

*Available for the CPU32. A/D field—Specifies the type of general register -Data Register 0-

1-Address Register

Register field-Specifies the register number.

dr field-Specifies the direction of the transfer. 0—From < ea > to general register. 1—From general register to < ea >

Supervisor (Privileged) Instructions

MOVES MOVES Move Address Space (MC68010, MC68020, MC68030, MC68040, CPU32) NOTE

The value stored is undefined for either of the two following examples with the same address register as both source and destination.

MOVES.x An,(An) + MOVES.x An,D(An)

The current implementations of the MC68010, MC68020, MC68030, and MC68040 store the incremented or decremented value of An. Check the following code sequence to determine what value is stored for each case.

MOVEA.L #\$1000,A0 MOVES.L A0,(A0) + MOVES.L A0,D(A0)

Because the MC68040 implements a merged instruction and data space, the MC68040's integer unit into data references (SFC/DFC = 5 or 1) translates MOVES accesses to the OinstructionO address spaces (SFC/DFC = 6 or 2). The data memory unit handles these translated accesses as normal data accesses. If the access fails due to an ATC fault or a physical bus present the security the security the security the security of the securit accesses. In the access fails due to an ATC fault of a physical bus error, the resulting access error stack frame contains the converted function code in the TM field for the faulted access. To maintain cache coherency, MOVES accesses to write the CinstructionO address space must be preceded by invalidation of the instruction cache line containing the referenced location.

ORI

to SR

ORI to SR

Operation:

Inclusive-OR Immediate to the Status Register (M68000 Family) If Supervisor State

Then Source V SR \rightarrow SR Else TRAP

ORI # < data > ,SR

Assembler Syntax:

Attributes: Size = (Word)

Description: Performs an inclusive-OR operation of the immediate operand and the status register's contents and stores the result in the status register. All implemented bits of the status register are affected.

Condition Codes:

X N Z V C

X-Set if bit 4 of immediate operand is one; unchanged otherwise

N-Set if bit 3 of immediate operand is one; unchanged otherwise.

Z-Set if bit 2 of immediate operand is one; unchanged otherwise.

V-Set if bit 1 of immediate operand is one: unchanged otherwise.

C-Set if bit 0 of immediate operand is one; unchanged otherwise.

 15
 14
 13
 12
 11
 10
 9
 8
 7
 6
 5
 4
 3
 2
 1
 0

 0
 0
 0
 0
 0
 0
 0
 1
 1
 1
 1
 0
 0

Instruction Format:

6-26

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

6-27

Supervisor (Privileged) Instructions

Supervisor (Privileged) Instructions

PBcc	Branch on PMMU Condition (MC68851)	PBcc	PBcc	Branch on PMMU Condition (MC68851)					
Operation:	If Supervisor State Then If cc True Then (PC) + dn \rightarrow PC Else TRAP		Instruction Fields: Size field—Specifies the size of the displacement. 0—Displacement is 16 bits. 1—Displacement is 32 bits.						
Assembler Syntax: Attributes:	PBcc. < size > < label > Size = (Word. Long)		MC68851 Condition field—Specifies the coprocessor condition to be tested. This fie is passed to the MC68851, which provides directives to the main processor f processing this instruction.						
Description: If t continues a	the specified paged memory management unit condition at location (PC) + displacement. The displacement is counts the relative distance in bytes. The value in the	a twos complement	Word Displacement field—The shortest displacement form for MC68851 branches is 16 bits.						

Long-Word Displacement field—Allows a displacement larger than 16 bits.

The condition specifier cc indicates the following conditions

Specifier	Description	Condition Field	Specifier	Description	Condition Field
BS	B set	000000	BC	B clear	000001
LS	L set	000010	LC	L clear	000011
SS	S set	000100	SC	S clear	000101
AS	A set	000110	AC	A clear	000111
WS	W set	001000	WC	W clear	001001
IS	l set	001010	IC	l clear	001011
GS	G set	001100	GC	G clear	001101
CS	C set	001110	CC	C clear	001111


the address of the displacement word(s). The displacement may be either 16 or 32 bits.

PMMU Status Register: Not affected.

Instruction Format:

	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Γ	1	1	1	1	0	0	0	0	1	SIZE	MC68851 CONDITION					
Γ	16-BIT DISPLACEMENT OR MOST SIGNIFICANT WORD OF 32-BITDISPLACEMENT															
Г	LEAST SIGNIFICANT WORD OF 32-BIT DISPLACEMENT (IF NEEDED)															

MOTOROLA

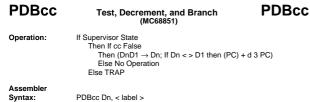

Size = (Word)

Attributes:

Description: This instruction is a looping primitive of three parameters: an MC68851 condition, a counter (an MC68020 data register), and a 16-bit displacement. The instruction first tests the condition to determine if the termination condition for the loop has been met. If so, the main processor executes the next instruction in the instruction stream. If the termination condition is not true, the low-order 16 bits of the counter register are decremented by one. If the result is not D1, execution continues at the location specified by the current value of the program counter plus the sign-extended 16-bit displacement. The value of the program counter used in the branch address calculation is the address of the PDBcc instruction plus two.

The condition specifier cc indicates the following conditions

Specifier	Description	Description Condition Field		Specifier	Description	Condition Field
BS	B set	000000		BC	B clear	000001
LS	L set	000010		LC	L clear	000011
SS	S set	000100		SC	S clear	000101
AS	A set	000110		AC	A clear	000111
WS	W set	001000		WC	W clear	001001
IS	l set	001010		IC	l clear	001011
GS	G set	001100		GC	G clear	001101
CS	C set	001110		CC	C clear	001111

PDBcc

PDBCC Test, Decrement, and Branch

PMMU Status Register:Not affected.

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	0	0	0	0	0	1	0	0	1	COUN	IT REG	ISTER
0	0 0 0 0 0 0 0 0 0 0 0 0 MC68851 CONDITION														
	16-BIT DISPLACEMENT														

Instruction Fields:

Register field—Specifies the data register in the main processor to be used as the counter.

MC68851 Condition field—Specifies the MC68851 condition to be tested. This field is passed to the MC68851, which provides directives to the main processor for processing this instruction.

Displacement field—Specifies the distance of the branch in bytes.

6-30

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

6-31

Supervisor (Privileged) Instructions

PFLUSH	Flush Entry in the ATC (MC68030 only)	PFLUSH
Operation:	If Supervisor State Then Invalidate ATC Entries for Destination Ar Else TRAP	ddresses
Assembler Syntax:	PFLUSHA PFLUSH FC,MASK PFLUSH FC,MASK, < ea >	

Attributes: Unsized

Description: PFLUSH invalidates address translation cache entries. The instruction has three forms. The PFLUSHA instruction invalidates all entries. When the instruction specifies a function code and mask, the instruction invalidates all entries for a selected function code(s). When the instruction also specifies an < ea > , the instruction invalidates the page descriptor for that effective address entry in each selected function code.

The mask operand contains three bits that correspond to the three function code bits. Each bit in the mask that is set to one indicates that the corresponding bit of the FC operand applies to the operation. Each bit in the mask that is zero indicates a bit of FC and of the ignored function code. For example, a mask operand of 100 causes the instruction to consider only the most significant bit of the FC operand. If the FC operand is 001, function codes 000, 001, 010, and 011 are selected.

The FC operand is specified in one of the following ways:

- 1. Immediate-Three bits in the command word.
- 2. Data Register—The three least significant bits of the data register specified in the instruction.
- 3. Source Function Code (SFC) Register
- 4. Destination Function Code (DFC) Register

Condition Codes:

Not affected.

MMU Status Register

Not affected.



PFLUSH

Flush Entry in the ATC (MC68030 only)

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	0	0	0	0	0	0		EFI MODE	ECTIVE	ADDRE	ESS EGISTE	R
0	0	1		MODE		0	0		MASK			FC			

Instruction Fields:

Effective Address field—Specifies a control alterable address. The address translation cache entry for this address is invalidated. Valid addressing modes are in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	-	_	(xxx).W	111	000
An	-	_	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	-	-
(An) +	-	_			
—(An)	-	_			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	_
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	-
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	-	-
([bd,An,Xn] ,od)	110	reg. number:An	([bd,PC,Xn] ,od)	-	_
([bd,An],Xn ,od)	110	reg. number:An	([bd,PC],Xn ,od)	_	_

NOTE

The address field must provide the memory management unit with the effective address to be flushed from the address translation cache, not the effective address describing where the PFLUSH operand is located. For example, to flush the address translation cache entry corresponding to a logical address that is temporarily stored on top of the system stack, the instruction PFLUSH [(SP)] must be used since PFLUSH (SP) would invalidate the address translation cache entry mapping the system stack (i.e., the effective address of the system stack, not the effective address formed by the operand located on the top of the stack). Supervisor (Privileged) Instructions

PFLUSH

Flush Entry in the ATC (MC68030 only) Mode field—Specifies the type of flush operation.

001-Flush all entries.

100—Flush by function code only.110—Flush by function code and effective address

Mask field—Mask for selecting function codes. Ones in the mask corr applicable bits; zeros are bits to be ignored. When mode is 001, mas 000.

FC field—Function code of entries to be flushed. If the mode field is 001, FC India—Function code of entries to be flushed. If the mode field is 001, FC be 00000; otherwise: 10XXX — Function code is specified as bits XXX. 01DDD — Function code is specified as bits 2–0 of data register DDI 00000 — Function code is specified as SFC register. 00001 — Function code is specified as DFC register.

Supervisor (Privileged) Instructions

PFLUSH	PFLUSH	Flush ATC Entries (MC68040, MC68LC040)	PFLUSH
	Operation:	If Supervisor State Then Invalidate Instruction and Data ATC En Address Else TRAP	tries for Destination
nask correspond to 001, mask must be	Assembler Syntax: Syntax: Syntax:	PFLUSH (An) PFLUSHN (An) PFLUSHA PFLUSHAN	
is 001, FC field must	Attributes:	Unsized	
gister DDD.	address trans invalidates all	dates address translation cache entries in both th ation caches. The instruction has two forms. The entries. The PFLUSH (An) instruction invalidat ation cache which matches the logical address in	PFLUSHA instruction tes the entry in each
	Destination fu lation cache e result in flushi	code for PFLUSH is specified in the destination f nction code values of 1 or 2 will result in flushing ntries in both address translation caches; wherea ng of supervisor address translation cache entries. i function code values of 0, 3, 4, and 7 and may ntry.	of user address trans- is, values of 5 or 6 will PFLUSH is undefined
	date only none code have the	V and PFLUSHAN instructions have a global optic global entries. For example, if only page descriptor global bit set, these two PFLUSH variants can be ation cache entries during task swaps.	s for operating system

Condition Codes:

Not affected.

6-34

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA


MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

6-35

Supervisor (Privileged) Instructions

Supervisor (Privileged) Instructions

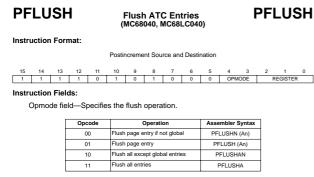

Register field-Specifies the address register containing the effective address to be flushed when flushing a page entry

PFLUSH PFLUSH Flush ATC Entries (MC68EC040) If Supervisor State Operation: Then No Operation Else TRAP PFLUSH (An) Assembler Syntax: PFLUSHN (An) Attributes: Unsized Description: This instruction should not be executed when using an MC68EC040. The PFLUSH encoding suspends operation of the MC68EC040 for an indefinite period of time and subsequently continues with no adverse effects. Condition Codes:

Not affected

Instruction Format:

Postincrement Source and Destination

 15
 14
 13
 12
 11
 10
 9
 8
 7
 6
 5
 4
 3

 1
 1
 1
 0
 1
 0
 1
 0
 0
 0
 OPMODE
 2 1 0 REGISTER

Instruction Fields:

Opmode field-Specifies the flush operation.

Opcode	Operation	Assembler Syntax
00	Flush page entry if not global	PFLUSHN (An)
01	Flush page entry	PFLUSH (An)
10	Flush all except global entries	PFLUSHAN
11	Flush all entries	PFLUSHA

Register field-Specifies the address register containing the effective address to be flushed when flushing a page entry

MOTOROLA



PFLUSH PFLUSHA PFLUSHS Invalidate Entries in the ATC

Operation:	If Supervisor State Then Address Translation Cache Entries For Destination Address Are Invalidated Else TRAP
Assembler Syntax:	PFLUSHA PFLUSH FC,MASK PFLUSH FC,MASK PFLUSH FC,MASK, < ea > PFLUSH FC,MASK, < ea >
Attributes:	Unsigned

(MC68851)

Description: PFLUSHA invalidates all entries in the address translation cache

PFLUSH invalidates a set of address translation cache entries whose function code bits satisfy the relation: (address translation cache function code bits and mask) = (FC and MASK) for all entries whose task alias matches the task alias currently active wher the instruction is executed. With an additional effective address argument, PELUSH invalidates a set of address translation cache entries whose function code satisfies the relation above and whose effective address field matches the corresponding bits of the evaluated effective address argument. In both of these cases, address translation cache entries whose SG bit is set will not be invalidated unless the PFLUSHS is specified.

The function code for this operation may be specified as follows:

- 1. Immediate—The function code is four bits in the command word.
- 2. Data Register-The function code is in the lower four bits of the MC68020 data register specified in the instruction.
- Source Function Code (SFC) Register—The function code is in the CPU SFC register. Since the SFC of the MC68020 has only three implemented bits, only function codes \$0D\$7 can be specified in this manner.
- Destination Function Code (DFC) Register—The function code is in the CPU DFC register. Since the DFC of the MC68020 has only three implemented bits, only function codes \$0D\$7 can be specified in this manner.

6-38

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

PFLUSH

PFLUŠHA PFLUSHS

Invalidate Entries in the ATC (MC68851)

PFLUSH PFLUSHA PFLUSHS

Supervisor (Privileged) Instructions

PMMU Status Register: Not affected.

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	0	0	0	0	0	0		EFFECTIVE ADDRESS		R		
0	0	1		MODE		0		M40	SK	FC					

Instruction Fields:

Effective Address field-Specifies an address whose page descriptor is to be flushed from (invalidated) the address translation cache. Only control alterable addressing modes can be used as listed in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	-	_	W.(xxx)	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	-	-
(An) +	-	_			
—(An)	-	_			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	-
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	-	-
([bd,An,Xn] ,od)	110	reg. number:An	([bd,PC,Xn] ,od)	-	-
([bd,An],Xn ,od)	110	reg. number:An	([bd,PC],Xn ,od)	-	-

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

6-39

Supervisor (Privileged) Instructions

Supervisor (Privileged) Instructions



Invalidate Entries in the ATC (MC68851)

NOTE

The effective address field must provide the MC68851 with the effective address of the entry to be flushed from the address translation cache, not the effective address describing where the PFLUSH operand is located. For example, in order to flush the address translation cache entry corresponding to a logical address that is temporarily stored on the top of the system stack, the instruction PFLUSH [(SP)] must be used since PFLUSH (SP) would invalidate the address translation cache entry mapping the system stack (i.e., the effective address passed to the MC68851 is the effective address of the system stack, not the effective address formed by the operand located on the top of the stack).

Mode field—Specifies how the address translation cache is to be flushed. 001—Flush all entries. 100—Flush by function code only. 101—Flush by function code including shared entries. 110—Flush by function code and effective address.

111-Flush by function code and effective address including shared entries.

Mask field—Indicates which bits are significant in the function code compare. A zero indicates that the bit position is not significant; a one indicates that the bit position

is significant. If mode = 001 (flush all entries), mask must be 0000.

FC field—Function code of address to be flushed. If the mode field is 001 (flush all entries), function code must be 00000; otherwise:

1DDDD — Function code is specified as four bits DDDD

01RRR — Function code is contained in CPU data register RRR. 00000 — Function code is contained in CPU SFC register.

00001 - Function code is contained in CPU DFC register

PFLUSHR Invalidate ATC and RPT Entries (MC68851) PFLUSHR Operation: If Supervisor State Then RPT Entry (If Any) Matching Root Pointer Specified by < ea > Corresponding Address Translation Cache Entries Are Invalidated Else TRAP

Assemble Syntax: PFLUSHR < ea >

Attributes: Unsized

Description: The quad word pointed to by < ea > is regarded as a previously used value of the CPU root pointer register. The root pointer table entry matching this CPU root pointer register (if any) is flushed, and all address translation cache entries loaded with this value of CPU root pointer register (except for those that are globally shared) are invalidated. If no entry in the root pointer table matches the operand of this instruction, no action is taken.

If the supervisor root pointer is not in use, the operating system should not issue the PFLUSHR command to destroy a task identified by the current CPU root pointer reg-ister. It should wait until the CPU root pointer register has been loaded with the root pointer identifying the next task until using the PFLUSHR instruction. At any time, exe-cution of the PFLUSHR instruction for the current CPU root pointer register causes the current task alias to be corrupted.

Instruction Format

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	0	0	0	0	0	0		EFI	FECTIVE	ADDRE	SS EGISTE	R
1	0	1	0	0	0	0	0	0	0	0	0	0	0	0	0

6-40

Supervisor (Privileged) Instructions

PFLUSHR Invalidate ATC and RPT Entries PFLUSHR (MC68851)

Instruction Field:

Effective Address field-Specifies the address of a previous value of the CPU root pointer register register. Only memory addressing modes can be used as listed in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	-	-	(xxx).W	111	000
An	-	_	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	111	100
(An) +	011	reg. number:An			
—(An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011
([bd,An,Xn] ,od)	110	reg. number:An	([bd,PC,Xn] ,od)	111	011
([bd,An],Xn ,od)	110	reg. number:An	([bd,PC],Xn ,od)	111	011

NOTE

The effective address usage of this instruction is different than that of other PFLUSH variants

PLOAD

PLOAD

Operation:

Load an Entry into the ATC (MC68030 only, MC68851)

If Supervisor State

Then Search Translation Table and Make Address Translation Cache Entry for Effective Address Else TRAP

PLOADR FC, < ea > PLOADW FC, < ea > Assembler Syntax:

Attributes: Unsized

Description: For the MC68851, PLOAD searches the translation table for a translation of the specified effective address. If one is found, it is flushed from the address translation of cache, and an entry is made as if a bus master had run a bus cycle. Used and modified bits in the table are updated as part of the table search. The MC68851 ignores the logical bus arbitration signals during the flush and load phases at the end of this instruction. This prevents the possibility of an entry temporarily disappearing from the address translation cache and causing a false table search.

This instruction will cause a paged memory management unit illegal operation exception (vector \$39) if the E-bit of the translation control register is clear.

The function code for this operation may be specified to be:

- 1. Immediate—The function code is specified as four bits in the command word.
- 2. Data Register-The function code is contained in the lower four bits in the MC68020 data register specified in the instruction.
- Source Function Code (SFC) Register—The function code is in the CPU SFC register. Since the SFC of the MC68020 has only three implemented bits, only function codes \$0D\$7 can be specified in this manner.
- 4. Destination Function Code (DFC) Register—The function code is in the CPU DFC register. Since the DFC of the MC68020 has only three implemented bits, only function codes \$0D\$7 can be specified in this manner.

6-42

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

6-43

Supervisor (Privileged) Instructions

PLOAD

Load an Entry into the ATC (MC68030 only, MC68851)

PLOAD

For the MC68030, PLOAD searches the address translation cache for the specified effective address. It also searches the translation table for the descriptor corresponding to the specified effective address. It creates a new entry as if the MC68030 had attempted to access that address. Sets the used and modified bits appropriately as part of the search. The instruction executes despite the value of the E-bit in the translation control register or the state of the MMUDIS signal.

The < function code > operand is specified in one of the following ways:

- 1 Immediate—Three bits in the command word
- 2. Data Register-The three least significant bits of the data register specified in the instruction.
- 3. Source Function Code (SFC) Register
- 4. Destination Function Code (DFC) Register

The effective address field specifies the logical address whose translation is to be loaded.

PLOADR causes U bits in the translation tables to be updated as if a read access had occurred. PLOADW causes U and M bits in the translation tables to be updated as if a write access had occurred.

PMMU Status Register: Not affected.

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4 3	2	1	0
1	1	1	1	0	0	0	0	0	0		EFFECT MODE	IVE ADDI	RESS REGISTEI	R
0	0	1	0	0	0	R/W	0	0	0	0		FC		

PLOAD

Instruction Fields:

PLOAD

Effective Address field—Specifies the logical address whose translation is to be loaded into the address translation cache. Only control alterable addressing modes are allowed as listed in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	-	_	(xxx).W	111	000
An	-	_	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	-	-
(An) +	-	-			
—(An)	-	_			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	-
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	-	-
([bd,An,Xn] ,od)	110	reg. number:An	([bd,PC,Xn] ,od)	-	-
([bd,An],Xn ,od)	110	reg. number:An	([bd,PC],Xn ,od)	-	-

NOTE

The effective address field must provide the MC68851 with the effective address of the entry to be loaded into the address translation cache, not the effective address describing where the PLOAD operand is located. For example, to load an address translation cache entry to map a logical address that is temporarily stored on the system stack, the instruction PLOAD [(SP)] must be used since PLOAD (SP) would load an address translation cache entry mapping the system stack (i.e., the effective address passed to the MC68851 is the effective address of the system stack, not the effective address formed by the operand located on the top of the stack).

R/W field-Specifies whether the tables should be updated for a read or a write. 1-Read 0__Write

Load an Entry into the ATC (MC68030 only, MC68851)

Supervisor (Privileged) Instructions

Supervisor (Privileged) Instructions Supervisor (Privileged) Instructions **PMOVE** PLOAD PLOAD **PMOVE** Load an Entry into the ATC (MC68030 only, MC68851) Move to/from MMU Registers (MC68030 only FC field (MC68851)—Function code of address to load. If Supervisor State Operation: 1DDDD — Function code is specified as four bits DDDD. Then (Source) \rightarrow MRn or MRn \rightarrow (Destination) 00000 — Function code is contained in CPU data register RRR. 00000 — Function code is contained in CPU data register RRR. 00001 — Function code is contained in CPU DFC register. PMOVE MRn, < ea > PMOVE < ea > ,MRn PMOVEFD < ea > ,MRn Assemble Syntax: FC field (MC68030)—Function code of address corresponding to entry to be loaded. 10XXX — Function code is specified as bits XXX. 01DDD — Function code is specified as bits 2–0 of data register DDD. Attributes: Size = (Word, Long, Quad) Description: Moves the contents of the source effective address to the specified memory 00000 — Function code is specified as SFC register 00001 — Function code is specified as DFC register management unit register or moves the contents of the memory management unit register to the destination effective address. The instruction is a quad-word (8 byte) operation for the CPU root pointer and the supervisor root pointer. It is a long-word operation for the translation control register and the transparent translation registers (TT0 and TT1). It is a word operation for the MMU status register. The PMOVEFD form of this instruction sets the FD-bit to disable flushing the address translation cache when a new value loads into the supervisor root pointer, CPU root pointer, TT0, TT1 or translation control register (but not the MMU status register). Writing to the following registers has the indicated side effects: CPU Root Pointer—When the FD-bit is zero, it flushes the address translation cache. If the operand value is invalid for a root pointer descriptor, the instruction takes an memory management unit configuration error exception after moving the operand to the CPU root pointer. Supervisor Root Pointer-When the FD-bit is zero, it flushes the address translation cache. If the operand value is invalid as a root pointer descriptor, the instruction takes an memory management unit configuration error exception after moving the operand to the supervisor root pointer. Translation Control Register—When the FD-bit is zero, it flushes the address translation cache. If the E-bit = 1, consistency checks are performed on the PS and Tlx fields. If the checks fail, the instruction takes an memory management unit configuration exception after moving the operand to the translation control register. If the checks pass, the translation control register is loaded with the operand and the E-bit is cleared. TT0, TT1-When the FD-bit is zero, it flushes the address translation cache. It enables or disables the transparent translation register according to the E-bit written. If the E-bit = 1, the transparent translation register is enabled. If the E- bit = 0, the register is disabled 6-46 M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL MOTOROLA MOTOROLA M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL 6-47

Supervisor (Privileged) Instructions

PMOVE PMOVE Move to/from MMU Registers (MC68030 only) Condition Codes:

Not affected.

MMU Status Register:

Not affected (unless the MMU status register is specified as the destination operand).

Instruction Format

..

gisters

	15	14	13	12	11	10	9	8		ь	5	4	3	2	1	0
Γ	4				0	0		0	0	0		EF	FECTIVE	ADDRE	SS	
		l '		· ·	0		0				MODE			R	REGISTE	R
E	0	1	0	P-REGISTER		R/W	FD	0	0	0	0	0	0	0	0	

Instruction Fields

Effective Address field-Specifies the memory location for the transfer. Only control alterable addressing modes can be used as in the following table

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	-	-	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	-	-
(An) +	-	-			
—(An)	-	-			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	-
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	-	-
([bd,An,Xn] ,od)	110	reg. number:An	([bd,PC,Xn] ,od)	-	-
([bd,An],Xn ,od)	110	reg. number:An	([bd,PC],Xn ,od)	-	-

PMOVE Move to/from MMU Registers (MC68030 only)

Supervisor (Privileged) Instructions

P-Register field—Specifies the memory management unit register. 000-Translation Control Register 010—Supervisor Root Pointer 011—CPU Root Pointer

R/W field—Specifies the direction of transfer. 0—Memory to memeory management unit register.

1-Memeory management unit register to memory.

FD field-Disables flushing of the address translation cache on writes to memeory management unit registers. —Address translation cache is flushed. 0-

- 1-Address translation cache is not flushed.

Instruction Format:

PMOVE

	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	1	1	1	1	0	0	0	0	0	0	EFFECTIVE ADDRESS MODE REGISTER					R
1	0	1	1	0	0	0	R/W	0	0	0	0	0	0	0	0	0

MMU Status Register

Instruction Fields:

Effective Address field—Specifies the memory location for the transfer. Control alterable addressing modes shown for supervisor root pointer register apply.

R/W field-Specifies the direction of transfer.

0-Memory to MMU status register.

1-MMU status register to memory.

NOTE

The syntax of assemblers for the MC68851 use the symbol PMMU status register for the MMU status register.

MOTOROLA

PN	10	٧E		N	love					ster	5		P٨	/0	VE
Instru	uction	Forr	nat:												
	PMOVE Move to/from MMU Registers (MC68030 only) PMOVE Instruction Format: TT Registers 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0 1 1 1 0 <														
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	0	0	0	0	0	0			FECTIVE			R
0	0	0	P-	REGIST	ER	R/W	FD	0	0	0	0	0	0	0	0
	Effecti	ve Ad	dres			ecifies es sho									ontrol

P-Register field—Specifies the transparent translation register. 010—Transparent Translation Register 0 011—Transparent Translation Register 1

R/W field—Specifies the direction of transfer. 0—Memory to MMU status register. 1—MMU status register to memory.

FD field—Disables flushing of the address translation cache. 0—Address translation cache is flushed. 1—Address translation cache does not flush. PMOVE Move to/from MMU Registers

Operation:

If Supervisor State Then (Source) \rightarrow MRn or MRn \rightarrow (Destination)

(MC68EC030)

Assembler Syntax:

PMOVE MRn, < ea > PMOVE < ea > ,MRn

Attributes: Size = (Word, Long, Quad)

Description: Moves the contents of the source effective address to an access control register or moves the contents of an access control register to the destination effective address.

The instruction is a long-word operation for the access control registers (AC0 and AC1). It is a word operation for the access control unit status register (ACUSR).

Writing to the ACx registers enables or disables the access control register according to the E-bit written. If the E-bit = 1, the access control register is enabled. If the E-bit = 0, the register is disabled

Condition Codes:

Not affected.

Instruction Format:

ACUSR:

Not affected unless the ACUSR is specified as the destination operand.

							ACI	JSR							
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	0	0	0	0	0	0		EFI MODE	FECTIVE	ADDRE	ESS EGISTE	R
0	1	1	0	0	0	R/W	0	0	0	0	0	0	0	0	0

Instruction Fields:

PMOVE

Operation:

Assemble

Effective Address field—Specifies the memory location for the transfer.

R/W field—Specifies the direction of transfer. 0—Memory to ACUSR 1—ACUSR to memory

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

6-51

Supervisor (Privileged) Instructions

PMOVE

Supervisor (Privileged) Instructions

PMOVE Move to/from MMU Registers (MC68EC030) PMOVE NOTE Assembler syntax for the MC68851 uses the symbol PMMU status register for the ACUSR; and for the MC68030, the symbols TT0 and TT1 for ACU and AC1. Instruction Format:

 15
 14
 13
 12
 11
 10
 9
 8
 7
 6
 5
 4
 3
 2
 1
 0

 1
 1
 1
 1
 0
 0
 0
 0
 0
 EFFECTIVE ADDRESS

 0
 0
 0
 0
 0
 0
 0
 0
 0
 REGISTER

 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 0
 <td

Instruction Fields:

Effective Address field-Specifies the memory location for the transfer.

P-Register field—Specifies the ACx register 001—Access Control Register 0 011—Access Control Register 1

R/W field—Specifies the direction of transfer 0—Memory to ACUSR 1—ACUSR to memory If Supervisor State Then MC68851 Register →Destination Or Source → MC68851 Register Else TRAP PMOVE < PMMU Register > , < ea > PMOVE < ea > , < PMMU Register >

Syntax: PMOVE < ea > , < PMMU Register >

Attributes: Size = (Byte, Word, Long, Double Long)

Description: The contents of the MC68851 register copies to the address specified by < ea > , or the data at < ea > copies into the MC68851 register.

Move PMMU Register (MC68851)

The instruction is a quad-word operation for CPU root pointer, supervisor root pointer, and DMA root pointer registers. It is a long-word operation for the translation control register and a word operation for the breakpoint acknowledge control, breakpoint acknowledge data, access control, PMMU status, and PMMU cache status registers. PMOVE is a byte operation for the current access level, valid access level, and stack change control registers.

The following side effects occur when data is read into certain registers:

CPU Root Pointer—Causes the internal root pointer table to be searched for the new value. If there is no matching value, an entry in the root pointer table is selected for replacement, and all address translation cache entries associated with the replaced entry are invalidated.

Supervisor Root Pointer—Causes all entries in the address translation cache that were formed with the supervisor root pointer (even globally shared entries) to be invalidated.

DMA Root Pointer—Causes all entries in the address translation cache that were formed with the DMA root pointer (even globally shared entries) to be invalidated.

Translation Control Register—If data written to the translation control register attempts to set the E-bit and the E-bit is currently clear, a consistency check is performed on the IS, TIA, TIB, TIC, TID, and PS fields.

PMOVE

⁶⁻⁵⁰

PMOVE

Move PMMU Register (MC68851



PMMU Status Register: Not affected unless the PMMU status register is written to by the instruction

Instruction Format 1

PMOVE to/from TC, CRP, DRP, SRP, CAL, VAL, SCC, AC

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	0	0	0	0	0	0			FECTIVE	ADDRE		
	· ·			Ŭ	Ŭ	Ů	0		Ŭ	MODE		R	EGISTE	R	
0	1	0	P-REGISTER		R/W	0	0	0	0	0	0	0	0	0	

Instruction Fields:

Effective Address field—for memory-to-register transfers, any addressing mode is allowed as listed in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn	(xxx).W	111	000
An*	001	reg. number:An	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	111	100
(An) +	011	reg. number:An			
—(An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011
([bd,An,Xn] ,od)	110	reg. number:An	([bd,PC,Xn] ,od)	111	011
([bd,An],Xn ,od)	110	reg. number:An	([bd,PC],Xn ,od)	111	011

*PMOVE to CRP, SRP, and DMA root pointer not allowed with these modes

PMOVE

Move PMMU Register

PMOVE

Supervisor (Privileged) Instructions

(MC68851 For register-to-memory transfers, only alterable addressing modes can be used as listed in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn*	000	reg. number:Dn	(xxx).W	111	000
An*	001	reg. number:An	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	-	-
(An) +	011	reg. number:An			
—(An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	_
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	-
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	-	-
([bd,An,Xn] ,od)	110	reg. number:An	([bd,PC,Xn] ,od)	-	-
([bd,An],Xn ,od)	110	reg. number:An	([bd,PC],Xn ,od)	_	-

*PMOVE to CRP, SRP, and DMA root pointer not allowed with these modes

Register field-Specifies the MC68851 register.

000—Translation Control Register 001—DMA Root Pointer

010—Supervisor Root Pointer 011—CPU Root Pointer

- 100-Current Access Level

101—Valid Access Level 110—Stack Change Control Register

111-Access Control Register

R/W field—Specifies the direction of transfer. 0—Transfer < ea > to MC68851 register. 1—Transfer MC68851 register to < ea > .

Instruction Format 2:

						F	MOVE	to/fror	n BAD	x, BAC	x				
	15	14	13	12	11	10	9	8	7	6	5	4 3	2	1	0
ſ	1	1	1	1	0	0	0	0	0	0	EFFECTI MODE			ESS EGISTE	R
1	0	1	1	P-REGISTER		R/W	0	0	0	0	NUM		0	0	

6-54

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

6-55

Supervisor (Privileged) Instructions

Supervisor (Privileged) Instructions

PMOVE PMOVE Move PMMU Register (MC68851) Instruction Fields: Effective Address field—Same as format 1 P-Register field-Specifies the type of MC68851 register. 100-Breakpoint Acknowledge Data 101-Breakpoint Acknowledge Control Syntax: R/W field—Specifies the direction of transfer 0—Transfer < ea > to MC68851 register 1-Transfer MC68851 register to < ea > Num field-Specifies the number of the BACx or BADx register to be used Instruction Format 3: PMOVE to/from PSR, from PCSR 4 3 2 EFFECTIVE ADDRESS 1 1 1 1 0 0 0 0 0 0 мо D. DECISTED R/W 0 0 0 0 0 0 0 0 Instruction Fields: Effective Address field—Same as format 1. P Register field-Specifies the MC68851 register. 000 — PMMU Status Register 001 — PMMU Cache Status Register R/W field-Specifies direction of transfer 0-Transfer < ea > to MC68851 register 1—Transfer MC68851 register to < ea > (must be one to access PMMU cache status register using this format).NULL: IDLE:

PRESTORE PMMU Restore Function (MC68851) PRESTORE If Supervisor State Operation: Then MC68851 State Frame → Internal State, Programmer Registers Else TRAP Assemble PRESTORE < ea > Attributes: Unsized, Privileged

Description: The MC68851 aborts execution of any operation in progress. New programmer registers and internal states are loaded from the state frame located at the effective address. The first word at the specified address is the format word of the state frame, specifying the size of the frame and the revision number of the MC68851 that created it. The MC68020 writes the first word to the MC68851 restore coprocessor interface register, initiating the restore operation. Then it reads the response coprocessor interface register to verify that the MC68851 recognizes the format as valid. The format is invalid if the MC68851 does not recognize the frame size or the revision number does not match. If the format is invalid, the MC68020 takes a format exception, and the MC68851 returns to the idle state with its user visible registers unchanged. However, if the format is valid, then the appropriate state frame loads, starting at the specified location and proceeding up through the higher addresses

The PRESTORE instruction restores the nonuser visible state of the MC68851 as well as the PMMU status register, CPU root pointer, supervisor root pointer, current access level, valid access level, and stack change control registers of the user programming model. In addition, if any breakpoints are enabled, all breakpoint acknowledge control and breakpoint acknowledge data registers are restored. This instruction is the inverse of the PSAVE instruction.

The current implementation of the MC68851 supports four state frame sizes

- This state frame is 4 bytes long, with a format word of \$0. A PRESTORE with this size state frame places the MC68851 in the idle state with no coproces-sor or module operations in progress.
- This state frame is 36 (\$24) bytes long. A PRESTORE with this size state frame causes the MC68851 to place itself in an idle state with no coprocessor operations in progress and no breakpoints enabled. A module operation may or may not be in progress. This state frame restores the minimal set of MC68851 registers.

PRESTORE PMMU Restore Function PRESTORE (MC68851)

MID-COPROCESSOR: This state frame is 44 (\$2C) bytes long. A PRESTORE with this size frame restores the MC68851 to a state with a coprocessor operation in progress and no breakpoints enabled.

BREAKPOINTS ENABLED: This state frame is 76 (\$4C) bytes long. A PRESTORE with this size state frame restores all breakpoint registers, along with other states. A coprocessor operation may or may not be in progress.

PMMU Status Register: Set according to restored data.

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	
1	1	1	1	0	0	0	1	0	1	EFFECTIVE ADDRESS						
	-									MODE REGISTER						

Instruction Fields

Effective Address field-Specifies the source location. Only control or post-increment addressing modes can be used as listed in the following table:

Addressing Mode	Mode	Register]	Addressing Mode	Mode	Register
Dn	-	_	1	(xxx).W	111	000
An	-	-	1	(xxx).L	111	001
(An)	010	reg. number:An	1	# < data >	-	-
(An) +	011	reg. number:An	1			
—(An)	-	-				
(d ₁₆ ,An)	101	reg. number:An	1	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	1	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An]	(bd,PC,Xn)	111	011
([bd,An,Xn] ,od)	110	reg. number:An		([bd,PC,Xn] ,od)	111	011
([bd,An],Xn ,od)	110	reg. number:An	1	([bd,PC],Xn ,od)	111	011

PMMU Save Function (MC68851)

PSAVE

Supervisor (Privileged) Instructions

If Supervisor State Then MC68851 Internal State, Programmer Operation: Registers → State Frame Else TRAP

Assembler Syntax:

Attributes: Unsized, Privileged

PSAVE < ea >

Description: The MC68851 suspends execution of any operation that it is performing and saves its internal state and some programmer registers in a state frame located at the effective address. The following registers are copied: PMMU status, control root pointer, supervisor root pointer, current access level, valid access level, and stack change control. If any breakpoint is enabled, all breakpoint acknowledge control and breakpoint acknowledge data registers are copied. After the save operation, the MC68851 is in an idle state waiting for another operation to be requested. Programmer registers are not changed.

The state frame format saved by the MC68851 depends on its state at the time of the PSAVE operation. In the current implementation, three state frames are possible

- This state frame is 36 (\$24) bytes long. A PSAVE of this size state frame indi-cates that the MC68851 was in an idle state with no coprocessor operations IDLE: in progress and no breakpoints enabled. A module call operation may or may not have been in progress when this state frame was saved.
- MID-COPROCESSOR: This state frame is 44 (\$2C) bytes long. A PSAVE of this size frame indicates that the MC68851 was in a state with a coprocessor or module call operation in progress and no breakpoints enabled.
- BREAKPOINTS ENABLED: This state frame is 76 (\$4C) bytes long. A PSAVE of this size state frame indicates that one or more breakpoints were enabled. A coprocessor or module call operation may or may not have been in progress.

PMMU Status Register: Not affected

6-58

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

6-59

Supervisor (Privileged) Instructions

PS	A۷	/E			PI			e Fui 8851)	nctio	n			P	SA	VE
Instru	uction	Form	nat:												
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	0	0	0	1	0	0		EFF	ECTIVE	EADDRE	SS	
	· ·		· ·	Ŭ	Ĭ	Ŭ	· ·	ľ	ľ		MODE		R	EGISTE	R

Instruction Fields:

Effective Address field-Specifies the destination location. Only control or predecrement addressing modes can be used as listed in the following table

Addressing Mode	Mode	Register		Addressing Mode	Mode	Register
Dn	-	-		(xxx).W	111	000
An	-			(xxx).L	111	001
(An)	010	reg. number:An		# < data >	-	-
(An) +	-	-				
—(An)	100	100 reg. number:An				
(d ₁₆ ,An)	101	reg. number:An		(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An		(d ₈ ,PC,Xn)	-	-
(bd,An,Xn)	110	reg. number:An		(bd,PC,Xn)	-	-
([bd,An,Xn] ,od)	110	reg. number:An		([bd,PC,Xn] ,od) -		-
([bd,An],Xn ,od)	110	reg. number:An		([bd,PC],Xn ,od)	-	-

Supervisor (Privileged) Instructions

PScc	Set on PMMU unit Condition (MC68851)	PScc
Operation:	If Supervisor State Then If cc True Then 1s → Destination Else 0s → Destination Else TRAP	
Assembler Syntax:	PScc < ea >	
Attributes:	Size = (Byte)	
Description: T	he specified MC68851 condition code is tested. If the cond	lition is true, the

byte specified by the effective address is set to TRUE (all ones); otherwise, that byte is set to FALSE (all zeros)

The condition code specifier cc may specify the following conditions:

Specifier	Description	Condition Field	1	Specifier	Description	Condition Field
BS	B set	000000		BC	B clear	000001
LS	L set	000010		LC	L clear	000011
SS	S set	000100		SC	S clear	000101
AS	A set	000110		AC	A clear	000111
WS	W set	001000		WC	W clear	001001
IS	l set	001010		IC	I clear	001011
GS	G set	001100		GC	G clear	001101
CS	C set	001110	1	CC	C clear	001111

PMMU Status Register: Not affected

PScc	Set on PMMU Condition (MC68851)	PScc
------	------------------------------------	------

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	0	0	0	0	0	1			ECTIVE	ADDRE	SS EGISTEI	-
0	0	0	0	0	0	0	0	0	0		MODE	68851 0			ĸ

Instruction Fields:

Effective Address field—Specifies the destination location. Only data alterable addressing modes can be used as listed in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	000	reg. number:Dn	(xxx).W	111	000
An	-	_	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	-	-
(An) +	011	reg. number:An			
—(An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	-
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	-	-
([bd,An,Xn] ,od)	110	reg. number:An	([bd,PC,Xn] ,od)	-	-
([bd,An],Xn ,od)	110	reg. number:An	([bd,PC],Xn ,od)	-	-

MC68851 Condition field—Specifies the coprocessor condition to be tested. This field is passed to the MC68851, which provides directives to the main processor for processing this instruction.

PTEST

Test a Logical Address (MC68030 only) Operation: If Supervisor State Then Logical Address Status $\rightarrow \mathsf{MMUSR}$ Else TRAP PTESTR FC, < ea > ,# < level > Assemble PTESTR FC, < ea > # < level > ,An PTESTW FC, < ea > ,# < level > PTESTW FC, < ea > ,# < level > PTESTW FC, < ea > ,# < level > ,An Syntax:

Attributes: Unsized

PTEST

Description: This instruction searches the address translation cache or the translation tables to a specified level. Searching for the translation descriptor corresponding to the can be a specified with the bits of the MMU status register according to the status of the descriptor. Optionally, PTEST stores the physical address of the last table entry accessed during the search in the specified address register. The PTEST instruction searches the address translation cache or the translation tables to obtain status information, but alters neither the used or modified bits of the translation tables nor the address translation cache. When the level operand is zero, only the transparent translation of either read or write accesses causes the operations of the PTESTR and PTESTW to return different results.

The < function code > operand is specified as one of the following:

- 1. Immediate-Three bits in the command word. 2. Data Register-The three least significant bits of the data register specified in
- the instruction.
- 3. Source Function Code (SFC) Register
- 4. Destination Function Code (DFC) Register

The effective address is the address to test. The < level > operand specifies the level of the search. Level 0 specifies searching the addrass translation cache only. Levels 1–7 specify searching the translation tables only. The search ends at the specified level. A level 0 test does not return the same MMU status register values as a test at a nonzero level number.

Execution of the instruction continues to the requested level or until detecting one of the following conditions:

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

- Invalid Descriptor
- Limit Violation •
- Bus Error Assertion (Physical Bus Error)

MOTOROLA

6-63

Supervisor (Privileged) Instructions

PTEST

6-62

Test a Logical Address (MC68030 only)

PTEST

MOTOROLA

The instruction accumulates status as it accesses successive table entries. When the instruction specifies an address translation cache search with an address register operand, the MC68030 takes an F-line unimplemented instruction exception.

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

If there is a parameter specification for a translation table search, the physical address of the last descriptor successfully fetched loads into the address register. A success-fully fetched descriptor occurs only if all portions of the descriptor can be read by the MC68030 without abnormal termination of the bus cycle. If the root pointer's DT field indicates page descriptor, the returned address is \$0. For a long descriptor, the address of the first long word is returned. The size of the descriptor (short or long) is not returned and must be determined from a knowledge of the translation table.

Condition Codes:

Not affected.

MMUSR:

B L S W I M T * * * 0 * * * 0 0 0 0 0 0

PTEST

Supervisor (Privileged) Instructions

PTEST Test a Logical Address (MC68030 only)

The MMU status register contains the results of the search. The values in the fields of the MMU status register for an address translation cache search are given in the following table

MMUSR Bit	PTEST, Level 0	PTEST, Levels 1–7
Bus Error (B)	This bit is set if the bus error bit is set in the ATC entry for the specified logical address.	This bit is set if a bus error is encountered during the table search for the PTEST in- struction.
Limit (L)	This bit is cleared.	This bit is set if an index exceeds a limit during the table search.
Supervis or Violatio n (S)	This bit is cleared.	This bit is set if the S-bit of a long (S) format table descriptor or long format page de- scriptor encountered during the search is set and if the FC2-bit of the function code specified by the PTEST instruction is not equal to one. The S-bit is undefined if the I- bit is set.
Write Protecte d (W)	The bit is set if the WP-bit of the ATC entry is set. It is undefined if the I-bit is set.	This bit is set if a descriptor or page de- scriptor is encountered with the WP-bit set during the table search. The W-bit is unde- fined if the I-bit is set.
Invalid (I)	logical address is not resident in the ATC	This bit indicates an invalid translation. The l-bit is set if the DT field of a table or a page descriptor encountered during the search is set to invalid or if either the B or L bits of the MMUSR are set during the table search.
Modified (M)	This bit is set if the ATC entry correspond- ing to the specified address has the modi- fied bit set. It is undefined if the I-bit is set.	This bit is set if the page descriptor for the specified address has the modified bit set. It is undefined if I-bit is set.
Transparent (T)	This bit is set if a match occurred in either (or both) of the transparent translation reg- isters (TT0 or TT1).	This bit is set to zero.
Number of Levels (N)	This 3-bit field is set to zero.	This 3-bit field contains the actual number of tables accessed during the search.

PTEST

PTEST

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	0	0	0	0	0	0		EFI MODE	FECTIVE	E ADDRI	ESS EGISTE	R
1	0	0		LEVEL		R/W	A		REGI	STER			F	с	

Test a Logical Address (MC68030 only)

Instruction Fields:

Effective Address field—Specifies the logical address to be tested. Only control alterable addressing modes can be used as listed in the following table:

Addressing Mode	Mode	Register		Addressing Mode	Mode	Register
Dn	-	-		(xxx).W	111	000
An	-	_	(xxx).L		111	001
(An)	010	reg. number:An		# < data >	-	-
(An) +	-	-				
—(An)	-	-				
(d ₁₆ ,An)	101	reg. number:An		(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An		(d ₈ ,PC,Xn)	-	-
(bd,An,Xn)	110	reg. number:An		(bd,PC,Xn)	-	-
([bd,An,Xn] ,od)	110	reg. number:An		([bd,PC,Xn] ,od)	-	-
([bd,An],Xn ,od)	110	reg. number:An		([bd,PC],Xn ,od)	-	-

Level field—Specifies the highest numbered level to be searched in the table. When this field contains 0, the A field and the register field must also be 0. The instruction takes an F-line exception when the level field is 0 and the A field is not 0.

R/W field—Specifies simulating a read or write bus cycle (no difference for MC68030 MMU). 0-Write

1—Read

A field—Specifies the address register option.

0—No address register. 1—Return the address of the last descriptor searched in the address register specified in the register field.

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

6-67

Supervisor (Privileged) Instructions

PTEST	Test a Logical Address (MC68EC030)	PTEST
Operation:	If Supervisor State Then Logical Address Status → ACUSR Else TRAP	
Assembler Syntax:	PTESTR FC, < ea > PTESTW FC, < ea >	

Attributes: Unsized

Description: This instruction searches the access control registers for the address descriptor corresponding to the < ea > field and sets the bit of the access control unit status register (ACUSR) according to the status of the descriptor.

The < function code > operand is specified in one of the following ways:

- 1. Immediate-Three bits in the command word.
- 2. Data Register-The three least significant bits of the data register specified in
- the instruction 3. Source Function Code (SFC) Register
- 4. Destination Function Code (DFC) Register
- The effective address is the address to test

Condition Codes:

Not affected.

ACUSR:

x = May be 0 o

 x
 x
 0
 x
 x
 0
 0
 AC
 0
 0
 x
 x
 x

The AC-bit is set if a match occurs in either (or both) of the access control registers.

Instruction Format:

	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	1	1	1	1	0	0	0	0	0	0		EFI MODE	EFFECTIVE ADDRESS MODE REGISTER			
I	1	0	0	0	0	0	R/W	0	REGISTER				FC			

Test a Logical Address (MC68030 only)

Register field-Specifies an address register for the instruction. When the A field contains 0, this field must contain 0.

FC field—Function code of address to be tested.

- eid—Function code of address to be tested. 10XXX Function code is specified as bits XXX. 01DDD Function code is specified as bits 2–0 of data register DDD. 00000 Function code is specified as source function code register. 00001 Function code is specified as destination function code register.

Test a Logical Address (MC68EC030)

Supervisor (Privileged) Instructions

PTEST

Instruction Fields:

PTEST

Effective Address field—Specifies the logical address to be tested. Only control alterable addressing modes can be used as listed in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	-	_	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	-	-
(An) +	-	_			
—(An)	-	_			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	_
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	-
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	-	-
([bd,An,Xn] ,od)	110	reg. number:An	([bd,PC,Xn] ,od)	-	_
([bd,An],Xn ,od)	110	reg. number:An	([bd,PC],Xn ,od)	-	_

R/W field—Specifies simulating a read or write bus cycle.

0—Write 1—Read

Register field—Specifies an address register for the instruction. When the A field contains 0, this field must contain 0.

FC field—Function code of address to be tested.

- 10XX Function code is specified as bits XXX.
 01DDD Function code is specified as bits 2–0 of data register DDD.
 00000 Function code is specified as source function code register.

00001 — Function code is specified as destination function code register.

NOTE

Assembler syntax for the MC68030 is PTESTR FC, < ea > ,#0 and PTESTW FC, < ea > ,#0.

PTEST

PTEST	Test a Logical Address (MC68040, MC68LC040)	PTEST
Operation:	If Supervisor State Then Logical Address Status \rightarrow MMUSR; Entry – Else TRAP	→ ATC
Assembler	PTESTR (An)	

PTESTW (An) Syntax: Attributes Unsized

Description: This instruction searches the translation tables for the page descriptor corresponding to the test address in An and sets the bits of the MMU status register according to the status of the descriptors. The upper address bits of the translated physical address are also stored in the MMU status register. The PTESTR instruction simulates a read access and sets the U-bit in each descriptor during table searches; PTESTW simulates a write access and also sets the M-bit in the descriptors, the address translation cache entry, and the MMU status register.

A matching entry in the address translation cache (data or instruction) specified by the function code will be flushed by PTEST. Completion of PTEST results in the creation of a new address translation cache entry. The specification of the function code for the test address is in the destination function code (DFC) register. A PTEST instruction with a DFC value of 0, 3, 4, or 7 is undefined and will return an unknown value in the MMUSR.

Execution of the instruction continues until one of the following conditions occurs:

- · Match with one of the two transparent translation registers
- Transfer Error Assertion (physical transfer error)
- Invalid Descriptor
- Valid Page Descriptor

Condition Codes

Not affected.

MMU Status Register:

PHYSICAL ADDRESS	в	G	U1	UO	s	CM	м		W	т	R
*	*	*	*	*	*	*	*	0	*	*	*

6	1	5	1	h

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

PTEST

for a search are:

are zero

Instruction Format:

Instruction Fields:

0—Write 1—Read

instruction.

actual physical address.

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

Register field-Specifies the address register containing the effective address for the

Test a Logical Address (MC68040, MC68LC040) The MMUSR contains the results of the search. The values in the fields of the MMUSR

Physical Address—This 20-bit field contains the upper bits of the translated physical address. Merging these bits with the lower bits of the logical address forms the

Bus Error (B)—Set if a transfer error is encountered during the table search for the PTEST instruction. If this bit is set, all other bits are zero.

User Page Attributes (U1, U0)—Set if corresponding bits in the page descriptor are set.

Supervisor Protection (S)-Set if the S-bit in the page descriptor is set. This bit does

Cache Mode (CM)-This 2-bit field is copied from the CM-bit in the page descriptor.

Modified (M)-Set if the M-bit is set in the page descriptor associated with the address.

Write Protect (W)-Set if the W-bit is set in any of the descriptors encountered during the table search. Setting of this bit does not indicate that a violation occurred Transparent Translation Register Hit (T)-Set if the PTEST address matches an

Resident (R)-Set if the PTEST address matches a transparent translation register or

if the table search completes by obtaining a valid page descriptor.

 15
 14
 13
 12
 11
 10
 9
 8
 7
 6
 5
 4
 3

 1
 1
 1
 0
 1
 0
 1
 0
 1
 R/W
 0
 1

R/W field—Specifies simulating a read or write bus transfer.

instruction or data transparent translation register and the R-bit is set; all other bits

Globally Shared (G)-Set if the G-bit is set in the page descriptor

not indicate that a violation has occurred.

6-71

REGISTER

Supervisor (Privileged) Instructions

PTEST	Test a Logical Address (MC68EC040)	PTEST
Operation:	If Supervisor State Then No Operation, Possibly Run Extraneous Bus Else TRAP	s Cycles
Assembler Syntax:	PTESTR (An) PTESTW (An)	
Attributes:	Unsized	

Description: This instruction must not be executed on an MC68EC040. This instruction may cause extraneous bus cycles to occur and may result in unexpected exception

types.

Instruction Format:

 15
 14
 13
 12
 11
 10
 9
 8
 7
 6
 5
 4
 3

 1
 1
 1
 1
 0
 1
 0
 1
 0
 1
 R/W
 0
 1

Instruction Fields:

6-72

R/W field—Specifies simulating a read or write bus transfer. 0-Write

1—Read

Register field-Specifies the address register containing the effective address for the instruction

PTEST Get Information About Logical Address

Supervisor (Privileged) Instructions

	(MC68851)	
peration:	If Supervisor State Then Information About Logical Address \rightarrow PSTATUS Else TRAP	
ssembler /ntax:	PTESTR FC, < ea > ,# < level > ,(An) PTESTW FC, < ea > ,# < level > ,(An)	

Attributes: Unsized

PTEST

Or

As Sy

Description: If the E-bit of the translation control register is set, information about the logical address specified by FC and < ea > is placed in the PMMU status register. If the E-bit of the translation control register is clear, this instruction will cause a paged memory management unit illegal operation exception (vector \$39).

The function code for this operation may be specified as follows:

- 1. Immediate-The function code is four bits in the command word. 2. Data Register-The function code is in the lower four bits in the MC68020 data
- register specified in the instruction.
- Source Function Code (SFC) Register—The function code is in the SFC register in the CPU. Since the SFC of the MC68020 has only three implemented bits, 3. only function codes \$0D\$7 can be specified in this manner.
- Destination Function Code (DFC) Register—The function code is in the DFC register in the CPU. Since the DFC of the MC68020 has only three implemented bits, only function codes \$0D\$7 can be specified in this manner.

The effective address field specifies the logical address to be tested.

The # < level > parameter specifies the depth to which the translation table is to be searched. A value of zero specifies a search of the address translation cache only. Values 1–7 cause the address translation cache to be ignored and specify the maximum number of descriptors to fetch.

NOTE

Finding an address translation cache entry with < level > set to zero may result in a different value in the PMMU status register than forcing a table search. Only the I, W, G, M, and C bits of the PMMU status register are always the same in both cases

PTEST

Supervisor (Privileged) Instructions

PTEST PTEST Get Information About Logical Address (MC68851)

Either PTESTR or PTESTW must be specified. These two instructions differ in the set ting of the A-bit of the PMMU status register. For systems where access levels are not in use, either PTESTR or PTESTW may be used. U and M bits in the translation table are not modified by this instruction.

If there is a specified address register parameter, the physical address of the last successfully fetched descriptor is loaded into the address register. A descriptor is success fully fetched if all portions of the descriptor can be read by the MC68851 without abnormal termination of the bus cycle. If the DT field of the root pointer used indicates page descriptor, the returned address is \$0.

The PTEST instruction continues searching the translation tables until reaching the requested level or until a condition occurs that makes further searching impossible (i.e., a DT field set to invalid, a limit violation, or a bus error from memory). The information in the PMMU status register reflects the accumulated values.

PMMU Status Register:

- Bus Error (B)—Set if a bus error was received during a descriptor fetch, or if < level > = 0 and an entry was found in the address translation cache with its BERR bit set; cleared otherwise
- Limit (L)-Set if the limit field of a long descriptor was exceeded; cleared otherwise
- Supervisor Violation (S)-Set if a long descriptor indicated supervisor-only access and the < fc > parameter did not have bit 2 set; cleared otherwise.
- Access Level Violation (A)—If PTESTR was specified, set if the RAL field of a long descriptor would deny access. If PTESTW was specified, set if a WAL or RAL field of a long descriptor would deny access; cleared otherwise.
- Write Protection (W)-Set if the WP-bit of a descriptor was set or if a WAL field of a long descriptor would deny access; cleared otherwise

Invalid (I)-Set if a valid translation was not available; cleared otherwise

Modified (M)—If the tested address is found in the address translation cache, set to the value of the M-bit in the address translation cache. If the tested address is found in the translation table, set if the M-bit of the page descriptor is set; cleared

6-74

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

PTEST

PTEST PTEST Get Information About Logical Address (MC68851)

Gate (G)--If the tested address is found in the address translation cache, set to the value of the G-bit in the address translation cache. If the tested address is found in the translation table, set if the G-bit of the page descriptor is set; cleared otherwise.

Globally Shared (C)-Set if the address is globally shared; cleared other

Level Number (N)-Set to the number of levels searched. A value of zero indicates an early termination of the table search in the root pointer (DT = page descriptor) if the level specification was not zero. If the level specification was zero, N is always set to zero

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	0	0	0	0	0	0		EFFECTIVE ADDRESS				
	•	•		Ŭ		Ŭ		Ŭ			MODE		REGISTER		R
1	0	0		LEVEL		R/W	A-	REGIST	ER	FC					

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

6-75

Supervisor (Privileged) Instructions

PTEST Get Information About Logical Address (MC68851)

Instruction Fields:

Effective Address field—Specifies the logical address about which information is requested. Only control alterable addressing modes can be used as listed in the following table

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	-	-	(xxx).W	111	000
An	-	_	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	-	-
(An) +	-	-			
—(An)	-	-			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	-	-
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	-	-
([bd,An,Xn] ,od)	110	reg. number:An	([bd,PC,Xn] ,od)	-	-
([bd,An],Xn ,od)	110	reg. number:An	([bd,PC],Xn ,od)	-	-

NOTE

The effective address field must provide the MC68851 with the effective address of the logical address to be tested, not the effective address describing where the PTEST operand is located. For example, to test a logical address that is temporarily stored on the system stack, the instruction PTEST [(SP)] must be used since PTEST (SP) would test the mapping of the system stack (i.e., the effective address passed to the MC68851 is the effective address of the system stack, not the effective address formed by the operand located on the top of the stack).

Supervisor (Privileged) Instructions

PTEST PTEST Get Information About Logical Address (MC68851)

Level field-Specifies the depth to which the translation table should be searched.

R/W field—Specifies whether the A-bit should be updated for a read or a write 1—Read 0—Write

A-Register field-Specifies the address register in which to load the last descriptor

address. 0xxx - Do not return the last descriptor address to an address register 1RRR - Return the last descriptor address to address register RRR

NOTE

When the PTEST instruction specifies a level of zero, the Aregister field must be 0000. Otherwise, an F-line exception is generated.

- FC field—Function code of address to test.

 - 1DDDD Function code is specified as four bits DDDD. 01RRR Function code is contained in CPU data register RRR. 00000 Function code is contained in CPU source function code register.
 - 00001 Function code is contained in CPU destination function code
 - register

Supervisor (Privileged) Instructions

PTRAPcc TRAP on PMMU Condition **PTRAPcc** (M68851 Operation: If Supervisor State Then If cc True Then TRAP Else TRAP PTRAPcc Assemble PTRAPcc.W # < data > PTRAPcc.L # < data > Syntax:

Attributes: Unsized or Size = (Word, Long)

Description: If the selected MC68851 condition is true, the processor initiates exception processing. The vector number is generated referencing the cpTRAPcc exception vector; the stacked program counter is the address of the next instruction. If the selected condition is not true, no operation is performed, and execution continues with the next instruction. The immediate data operand is placed in the next word(s) following the MC68851 condition and is available for user definition to be used within the trap handler. Following the condition word, there may be a user-defined data operand, specified as immediate data, to be used by the trap handler.

The condition specifier cc may specify the following conditions:

Specifier	Description	Condition Field	Specifier	Description	Condition Field
BS	B set	000000	BC	B clear	000001
LS	L set	000010	LC	L clear	000011
SS	S set	000100	SC	S clear	000101
AS	A set	000110	AC	A clear	000111
WS	W set	001000	WC	W clear	001001
IS	l set	001010	IC	l clear	001011
GS	G set	001100	GC	G clear	001101
CS	C set	001110	CC	C clear	001111

PMMU Status Register: Not affected

6-78

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

Supervisor (Privileged) Instructions

6-79

PVALID	Validate a Pointer (MC68851)	PVALID
Operation:	If (Source AL Bits) \rightarrow (Destination AL Bits)	

PVALID VAL, < ea > Assemble PVALID An, < ea > Syntax: Attributes: Size = (Long)

Description: The upper bits of the source, VAL or An, compare with the upper bits of the destination, < ea > . The ALC field of the access control register defines the number of bits compared. If the upper bits of the source are numerically greater than (less privileged than) the destination, they cause a memory management access level exception. Otherwise, execution continues with the next instruction. If the MC field of the access control register = 0, then this instruction always causes a paged memory management unit access level exception.

PMMU Status Register: Not affected.

Supervisor (Privileged) Instructions

Instruction Format 1:

VAL Contains Access Level to Test Against

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	0	0	0	0	0	0		EFI MODE	FECTIVE	E ADDRESS REGISTER		
0	0	1	0	1	0	0	0	0	0	0	0	0	0	0	0

PVALID Validate a Pointer (MC68851)

Instruction Field:

PVALID

Effective Address field—Specifies the logical address to be evaluated and compared against the valid access level register. Only control alterable addressing modes can be used as listed in the following table:

Addressing Mode	Mode	Register	1	Addressing Mode	Mode	Register
Dn	-	_		(xxx).W	111	000
An	-	_		(xxx).L	111	001
(An)	010	reg. number:An	1	# < data >	-	-
(An) +	-	_	1			
—(An)	-	_	1			
(d ₁₆ ,An)	101	reg. number:An		(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An	1	(d ₈ ,PC,Xn)	-	-
(bd,An,Xn)	110	reg. number:An	1	(bd,PC,Xn)	-	-
([bd,An,Xn] ,od)	110	reg. number:An	1	([bd,PC,Xn] ,od)	-	-
([bd,An],Xn ,od)	110	reg. number:An	1	([bd,PC],Xn ,od)	-	-

16-BIT OPERAND OR MOST SIGNIFICANT WORD OF 32-BIT OPERAND (IFNEEDED)
LEAST SIGNIFICANT WORD OF 32-BIT OPERAND (IF NEEDED)

(M68851)

Instruction Fields:

PTRAPcc

Instruction Format:

Opmode field—Selects the instruction form. 010 — Instruction is followed by one operand word. 011 — Instruction is followed by two operand words.

- 100 Instruction has no following operand words.
- MC68851 Condition field—Specifies the coprocessor condition to be tested. This field is passed to the MC68851, which provides directives to the main processor for processing this instruction.

OPMODE

PVALID

PVALID

Instruction Format 2:

Main Processor Register Contains Access Level to Test Against

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	0	0	0	0	0	0	EFFECTIVE ADDRESS MODE REGISTER		R			
0	0	1	0	1	0	0	0	0	0	0	0	0	REGISTER		R

Validate a Pointer (MC68851)

Instruction Fields:

Effective Address field—Specifies the logical address to be evaluated and compared against specified main processor address register. Only control alterable addressing modes can be used as listed in the following table:

Addressing Mode	Mode	Register		Addressing Mode	Mode	Register
Dn	-	-	1	(xxx).W	111	000
An	-	_	1	(xxx).L	111	001
(An)	010	reg. number:An	1	# < data >	-	-
(An) +	-	-	1			
—(An)	-	-	1			
(d ₁₆ ,An)	101	reg. number:An	1	(d ₁₆ ,PC)	-	-
(d ₈ ,An,Xn)	110	reg. number:An		(d ₈ ,PC,Xn)	-	-
(bd,An,Xn)	110	reg. number:An	1	(bd,PC,Xn)	-	-
([bd,An,Xn] ,od)	110	reg. number:An	1	([bd,PC,Xn] ,od)	-	-
([bd,An],Xn ,od)	110	reg. number:An	1	([bd,PC],Xn ,od)	-	-

NOTE

The effective address field must provide the MC68851 with the effective address of the logical address to be validated, not the effective address describing where the PVALID operand is located. For example, to validate a logical address that is temporarily stored on the system stack, the instruction PVALID VAL.[(SP) must be used since PVALID VAL.(SP) would validate the mapping on the system stack (i.e., the effective address passed to the MC68851 is the effective address of the system stack, not the effective address formed by the operand located on the top of the stack).

Register field—Specifies the main processor address register to be used in the compare.

6-82

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

STOP

Operation:

Assembler Syntax:

Attributes:

Condition Codes:

Instruction Format:

Instruction Fields:

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

Load Status Register and Stop (M68000 Family)

Description: Moves the immediate operand into the status register (both user and supervisor portions), advances the program counter to point to the next instruction, and stops the fetching and executing of instructions. A trace, interrupt, or reset exception causes the processor to resume instruction execution. A trace exception occurs if

instruction tracing is enabled (T0 = 1, T1 = 0) when the STOP instruction begins execution. If an interrupt request is asserted with a priority higher than the priority level

set by the new status register value, an interrupt exception occurs; otherwise, the interrupt request is ignored. External reset always initiates reset exception processing.

Then Immediate Data → SR; STOP

If Supervisor State

STOP # < data >

Else TRAP

Unsized

Set according to the immediate operand.

 15
 14
 13
 12
 11
 10
 9
 8
 7

 0
 1
 0
 0
 1
 1
 1
 0
 0

 IMMEDIATE DATA

6-83

Supervisor (Privileged) Instructions

STOP

Supervisor (Privileged) Instructions

RTE	Return from Exception (M68000 Family)	ΤE
Operation:	If Supervisor State Then (SP) \rightarrow SR; SP + 2 \rightarrow SP; (SP) \rightarrow PC; SP + 4 \rightarrow SP; Res State and Deallocate Stack According to (SP) Else TRAP	store
Assembler Syntax:	RTE	
Attributes:	Unsized	

Description: Loads the processor state information stored in the exception stack frame located at the top of the stack into the processor. The instruction examines the stack format field in the format/offset word to determine how much information must be restored.

Condition Codes:

Set according to the condition code bits in the status register value restored from the stack.

Instruction Format:

Г

 15
 14
 13
 12
 11
 10
 9
 8
 7
 6
 5
 4
 3
 2
 1
 0

 0
 1
 0
 0
 1
 1
 1
 0
 0
 1
 1
 1
 0
 0
 1
 1
 1
 0
 0
 1
 1
 1
 0
 0
 1
 1
 1
 0
 0
 1
 1
 1
 0
 0
 1
 1
 1
 0
 0
 1
 1
 1
 0
 0
 1
 1
 1
 0
 0
 1
 1
 1
 0
 0
 1
 1
 1
 0
 0
 1
 1
 1
 0
 0
 1
 1
 1
 0
 0
 1
 1
 1
 0
 0
 1
 1
 1
 0
 0
 1
 1
 1
 0
 0
 1
 1
 1
 0
 0
 1
 1
 1
 0
 0
 1
 1
 1
 0
 0
 1
 1
 1

MC68010, MC68020, MC68030, MC68040, CPU32

15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0 FORMAT 0 0 VECTOR OFFSET

Format Field of Format/Offset Word:

Contains the format code, which implies the stack frame size (including the format/ offset word). For further information, refer to Appendix B Exception Processing Reference.

RESET	
-------	--

Operation:

Reset External Devices (M68000 Family)

If Supervisor State____

Then Assert RESET (RSTO, MC68040 Only) Line Else TRAP

Assembler	
Syntax:	RESET

Attributes: Unsized

Description: Asserts the RSTO signal for 512 (124 for MC68000, MC68EC000, MC68HC000, MC68HC000, MC68HC001, MC68008, MC68010, and MC68302) clock periods, resetting all external devices. The processor state, other than the program counter, is unaffected, and execution continues with the next instruction.

Condition Codes: Not affected

Instruction Format:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	0	0	1	1	1	0	0	1	1	1	0	0	0	0



Immediate field-Specifies the data to be loaded into the status register.

RESET

SECTION 7 CPU32 INSTRUCTIONS

This section describes the instructions provided for the CPU32. The CPU32 can execute object code from an MC68000 and MC68010 and many of the instructions of the MC68020.

There are three new instructions provided for the CPU32: enter background mode (BGND), low-power stop (LPSTOP), and table lookup and interpolate (TBLS, TBLSN, TBLU, and TBLUN). Table 7-1 lists the MC68020 instructions not supported by the CPU32.

Mnemonic	Description
BFCHG	Test Bit Field and Change
BFCLR	Test Bit Field and Clear
BFEXTS	Signed Bit Field Extract
BFEXTU	Unsigned Bit Field Extract
BFFFO	Bit Field Find First One
BFINS	Bit Field Insert
BFSET	Test Bit Field and Set
BFTST	Test Bit Field
CALLM	CALL Module
CAS	Compare and Swap Operands
CAS2	Compare and Swap Dual Operands
cpBcc	Branch on Coprocessor Condition
cpDBcc	Test Coprocessor Condition Decrement and Branch
cpGEN	Coprocessor General Function
cpRESTORE	Coprocessor Restore Function
cpSAVE	Coprocessor Save Function
cpScc	Set on Coprocessor Condition
cpTRAPcc	Trap on Coprocessor Condition
RTM	Return from Module
PACK	Pack BCD
UNPK	Unpack BCD

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

7-1

CPU32 Instructions

Addressing in the CPU32 is register oriented. Most instructions allow the results of the specified operation to be placed either in a register or directly in memory. This flexibility eliminates the need for extra instructions to store register contents in memory. Table 7-2 lists the M68000 family addressing modes with cross-references to the MC68000, MC68010, CPU32, and MC68020. When referring to instructions in the previous sections, refer to Table 7-2 to identify the addressing modes available to the CPU32. Table 7-3 lists the instructions for the CPU32.

|--|

Addressing Mode	Syntax	MC68000 MC68010	CPU32	MC68020
Register Indirect	Rn	X	х	Х
Address Register Indirect	(An)	X	х	х
Address Register Indirect with Postincrement	(An) +	X	х	х
Address Register Indirect with Postdecrement	– (An)	X	х	х
Address Register Indirect with Displacement	(d ₁₆ ,An)	Х	х	х
Address Register Indirect with Index (8-Bit Displacement)	(d ₈ ,An,Xn)	x	x	х
Address Register Indirect with Index (Base Displacement)	(d ₈ ,An,Xn+SCALE)		х	x
Memory Indirect with Postincrement	([bd,An],Xn, od)			Х
Memory Indirect with Preincrement	([bd,An],Xn, od)			х
Absolute Short	(xxx).W	X	х	х
Absolute Long	(xxx).L	X	х	х
Program Counter Indirect with Displacement	(d ₁₆ ,PC)	Х	х	х
Program Counter Indirect with Index (8-Bit Displacement)	(d ₈ ,PC,Xn)	x	x	x
Program Counter Indirect with Index (Base Displacement)	(d ₈ ,PC,Xn*SC ALE)		х	х
Immediate	# < data >	X	х	X
PC Memory Indirect with Postincrement	([bd,PC],Xn, od)			х
PC Memory Indirect with Predecrement	([bd,PC],Xn, od)			Х

NOTE: Xn,SIZE*SCALE—Denotes index register n (data or address), the index size (W for word, L for long word and scale factor (1, 2, 4, or 8 for no-word, long-word, or 8 for quad- word scaling, respectively) X—Supported

CPU32 Instructions

Table 7-3. CPU32 Instruction Set

Mnemonic	Description	Mnemonic	Description
ABCD	Add Decimal with Extend	MOVE	
ADD	Add	MOVEA	Move
ADDA	Add Address	MOVEA MOVE from	Move Address
ADDI	Add Immediate	CCR	Move Condition Code Register
ADDO	Add Quick	Move from SR	Move from Status Register
ADDX	Add with Extend		Move to Status Register
ADDA	Logical AND	MOVE to SR	Move User Stack Pointer
AND	Logical AND Immediate	MOVE USP	Move Control Register
ANDI to CCR	AND Immediate to Condition Code	MOVEC	Move Multiple Registers
ANDI 10 CCK	Register	MOVEM	Move Peripheral
ANDI to SR		MOVEP	Move Quick
ANDI to SK ASL. ASR	AND Immediate to Status Register	MOVEQ	Move Alternate Address Space
ASL, ASR	Arithmetic Shift Left and Right	MOVES	Signed Multiply
Bcc	Branch Conditionally	MULS	Unsigned Multiply
BCHG	Test Bit and Change	MULU	choightea maraphy
BCLR	Test Bit and Clear	NBCD	Negate Decimal with Extend
BGND	Enter Background Mode	NEG	Negate
BKPT	Breakpoint	NEGX	Negate with Extend
BRA	Branch	NOP	No Operation
BSET	Test Bit and Set	NOT	Logical Complement
BSR	Branch to Subroutine	PEA	Push Effective Address
BTST	Test Bit	PEA	Push Effective Address
	Check Register Against Bound	RESET	Reset External Devices
CHK	Check Register Against Bound Check Register Against Upper and	ROL ROR	Reset External Devices Rotate Left and Right
CHK2	Lower Bound		
	Lower Bound Clear	ROXL, ROXR	Rotate with Extend Left and Right
CLR		RTD	Return and Deallocate
CMP	Compare	RTE	Return from Exception
CMPA	Compare Address	RTR	Return and Restore Codes
CMPI	Compare Immediate	RTS	Return from Subroutine
CMPM	Compare Memory to Memory		
CMP2	Compare Register Against Upper and	SBCD	Subtract Decimal with Extend
-	Lower Bounds	Scc	Set Conditionally
		STOP	Stop
		SUB	Subtract
DBcc	Test Condition, Decrement, and	SUBA	Subtract Address
	Branch	SUBI	Subtract Immediate
DIVS. DIVSL	Signed Divide	SUBQ	Subtract Quick
DIVU, DIVUL	Unsigned Divide	SUBX	Subtract with Extend
		SWAP	Swap Register Words
		TAS	Test Operand and Set
EOR	Logical Exclusive-OR	TBLS, TBLSN	Signed/Unsigned Table Lookup and
EORI	Logical Exclusive-OR Immediate		Interpolate
EORI to CCR	Exclusive-OR Immediate to	TBLU, TBLUN	Signed/Unsigned Table Lookup and
	Condition Code Register		Interpolate
EORI to SR	Exclusive-OR Immediate to	TRAP	Trap
	Status Register	TRAPcc	Trap Conditionally
EXG	Exchange Registers	TRAPV	Trap an Overflow
EXT, LSR	Sign-Extend	TST	Test Operand
ILLEGAL	Take Illegal Instruction Trap	UNLK	Unlink
JMP	Jump		
JSR	Jump to Subroutine		
LEA	Load Effective Address		
LINK	Link and Allocate		
LPSTOP	Low Power Stop		
LSL, LSR	Logical Shift Left and Right		

BGND	Enter Background Mode (CPU32)	BGND	LPSTOP	Low-Power Stop (CPU32)	LPSTOP			
Operation:	If Background Mode Enabled Then Enter Background Mode Else Format/Vector Offset $\rightarrow -$ (SSP); PC $\rightarrow -$ (SSP) SR $\rightarrow -$ (SSP)		Operation:	If Supervisor State Immediate Data → SR Interrupt Mask → External Bus Interface (STOP Else TRAP	EBI)			
Assembler	$(Vector) \rightarrow PC$		Assembler Syntax:	LPSTOP # < data >				
yntax:	BGND		Attributes:	Size = (Word) Privileged				
if backgroun into backgr continues w mode is not The vector i	Size = (Unsized) a processor suspends instruction execution and ent d mode is enabled. The freeze output is asserted to a ound mode. Upon exiting background mode, ith the instruction pointed to by the current program enabled, the processor initiates illegal instruction number is generated to reference the illegal instruction	acknowledge entrance instruction execution counter. If background exception processing. tion exception vector.	 Description: The immediate operand moves into the entire status register, the program counter advances to point to the next instruction, and the processor stops fetching and executing instructions. A CPU LPSTOP broadcast cycle is executed to CPU space \$3 to copy the updated interrupt mask to the external bus interface (EBI). The internal clocks are stopped. Instruction execution resumes when a trace, interrupt, or reset exception occurs. A trace exception will occur if the trace state is on when the LPSTOP instruction is 					
Refer to the Condition Code X N	appropriate user's manual for detailed information o s:C	n background mode.	executed. If priority level otherwise, tl	r priority that the currer errupt exception occurs of the immediate dat on will cause a privileg				
X — Not a			Condition Codes	:				
N — Not a Z — Not a V — Not a C — Not a	iffected. iffected.		Set according	to the immediate operand. at:				
15 14 13	nat: 12 11 10 9 8 7 6 5 4 0 1 0 1 0 1 1 1 1 1	3 2 1 0 1 0 1 0	15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0 1 1 1 1 0 <t< td=""></t<>					
			Instruction Fields Immediate fie	St Id—Specifies the data to be loaded into the sta	tus register.			
'-4	M68000 FAMILY PROGRAMMER'S REFERENCE MANU	AL MOTOROLA	MOTOROLA	M68000 FAMILY PROGRAMMER'S REFERENCE MA	NUAL 7-			
PU32 Instructions	3				CPU32 Instruction			
TBLS TBLSN		TBLS TBLSN	TBLS TBLSN					

For register interpolate mode, the interpolation occurs using the Dym and Dyn registers For register interpolate mode, the interpolation occurs using the Uym and Uyn registers in place of the two table entries. For this mode, only the fractional portion, Dx 7 - 0, is used in the interpolation, and the integer portion, Dx 15 - 8, is ignored. The register interpolation mode may be used with several table lookup and interpolations to model multidimensional functions.

Signed table entries range from -2^{n-1} to $2^{n-1} - 1$; whereas, unsigned table entries range from 0 to 2^{n-1} where n is 8, 16, or 32 for byte, word, and long-word tables, respectively.

Rounding of the result is optionally selected via the "R" instruction field. If R = 0 (TABLE), the fractional portion is rounded according to the round-to-nearest algorithm. The following table summerizes the rounding procedure:

Adjusted Difference Fraction	Rounding Adjustment
≤ - 1/2	- 1
> - 1/2 and < 1/2	+ 0
≥ 1/2	+ 1

The adjusted difference is then added to the selected table entry. The rounded result is returned in the destination data register, Dx. Only the portion of the register corresponding to the selected size is affected.

	31	24	23	16	15	8	7	0	
BYTE	UNAFFE	CTED	UNAFF	ECTED	UNAFF	ECTED	RESULT		
WORD	UNAFFECTED		UNAFF	ECTED	RES	SULT	RESULT		
LONG	RESULT		RESULT		RES	SULT	RESULT		

Operation:

Assemble

Attributes:

mode

register, Dx

Syntax:

Rounded:

Unrounded

TBLS. < size > < ea > .Dx

Size = (Byte, Word, Long)

TBLSN. < size > < ea > ,Dx TBLS. < size > Dym:Dyn, Dx

ENTRY(n) + {(ENTRY(n + 1) – ENTRY(n)) x Dx 7 – 0} \div 256 \rightarrow Dx

 $ENTRY(n) \ge 256 + {(ENTRY(n + 1) - ENTRY(n)) \ge Dx = 0} \rightarrow Dx$

1. Consecutive entries in the table pointed to by the < ea > and

Result rounded

Result not rounded

Result rounded

Where ENTRY(n) and ENTRY(n + 1) are either:

indexed by Dx 15 – 8 π SIZE or;

2. The registers Dym, Dyn respectively.

TBLSN. < size > Dym:Dyn, Dx Result not rounded

Description: The TBLS and TBLSN instructions allow the efficient use of piecewise linear compressed data tables to model complex functions. The TBLS instruction has two modes of operation: table lookup and interpolate mode and data register interpolate

For table lookup and interpolate mode, data register Dx 15 – 0 contains the independent variable X. The effective address points to the start of a signed byte, word, or long-word table containing a linearized representation of the dependent variable, Y,

or long-word table containing a linearized representation of the dependent variable, Y, as a function of X. In general, the independent variable, located in the low-order word of Dx, consists of an 8-bit integer part and an 8-bit fractional part. An assumed radix point is located between bits 7 and 8. The integer part, Dx 15 – 8, is scaled by the operand size and is used as an offset into the table. The selected entry in the table is subtracted from the next consecutive entry. A fractional portion of this difference is taken by multiplying by the interpolation fraction, Dx 7 – 0. The adjusted difference is then added to the selected table entry. The result is returned in the destination data register Dx.

v

TBLS TBI TBLŠN TBLSN Table Lookup and Interpolate (Signed) (CPU32)

If R = 1 (TABLENR), the result is returned in register Dx without rounding. If the size is byte, the integer portion of the result is returned in Dx 15 – 8; the integer portion of a word result is stored in Dx 23 – 8; the least significant 24 bits of a long result are stored in Dx 31 - 8. Byte and word results are sign-extended to fill the entire 32-bit register

	31 24	23 16	15 8	7 0		
BYTE	SIGN-EXTENDED	SIGN-EXTENDED	RESULT	FRACTION		
WORD	SIGN-EXTENDED	RESULT	RESULT	FRACTION		
LONG	RESULT	RESULT	RESULT	FRACTION		

NOTE

The long-word result contains only the least significant 24 bits of integer precision

For all sizes, the 8-bit fractional portion of the result is returned to the low byte of the data register, Dx 7 - 0. User software can make use of the fractional data to reduce cumulative errors in lengthy calculations or implement rounding algorithms different from that provided by other forms of TBLS. The previously described assumed radix point places two restrictions on the programmer

- 1. Tables are limited to 257 entries in length.
- Interpolation resolution is limited to 1/256, the distance between consecutive ta-ble entries. The assumed radix point should not, however, be construed by the be entries. The assume rank point should not not not entries to construct by the programmer as a requirement that the independent variable be calculated as a fractional number in the range 0 < π < 255. On the contrary, X should be considered an integer in the range 0 < π < 6553, realizing that the table is actually a compressed representation of a linearized function in which only every 256th value is actually stored in memory.

Table Lookup and Interpolate (Signed) (CPU32)

Condition Codes

- X N Z V C
- Not affected.
- $\begin{array}{l} \mathsf{A} = \mathsf{Not} \ \mathsf{aineted}. \\ \mathsf{N} = \mathsf{Set} \ \mathsf{if} \ \mathsf{the} \ \mathsf{most} \ \mathsf{significant} \ \mathsf{bit} \ \mathsf{of} \ \mathsf{the} \ \mathsf{result} \ \mathsf{is} \ \mathsf{set}; \ \mathsf{cleared} \ \mathsf{otherwise}. \\ \mathsf{Z} = \mathsf{Set} \ \mathsf{if} \ \mathsf{the} \ \mathsf{result} \ \mathsf{is} \ \mathsf{zero}; \ \mathsf{cleared} \ \mathsf{otherwise}. \\ \mathsf{V} = \mathsf{Set} \ \mathsf{if} \ \mathsf{the} \ \mathsf{result} \ \mathsf{is} \ \mathsf{zero}; \ \mathsf{cleared} \ \mathsf{otherwise}. \\ \mathsf{V} = \mathsf{Set} \ \mathsf{if} \ \mathsf{the} \ \mathsf{result} \ \mathsf{is} \ \mathsf{otherwise}, \ \mathsf{cleared} \ \mathsf{otherwise}, \\ \mathsf{Set} \ \mathsf{sult} \ \mathsf{sult} \ \mathsf{sult} \ \mathsf{sult} \ \mathsf{sult} \ \mathsf{is} \ \mathsf{otherwise}, \ \mathsf{sult} \ \mathsf{sult$
- Always cleared. C -

Instruction Format:

TABLE LOOKUP AND INTERPOLATE

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	1	0	0	0	0	0	EFFECTIVE ADDRE MODE R		ESS LEGISTE	R		
0	RE	GISTER	Dx	1	R	0	1	SI	ZE	0	0	0	0	0	0
DATA REGISTER INTERPOLATE															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	1	0	0	0	0	0	0 0 0 REGISTER Dy		Dym			
0	RE	GISTER	Dx	1	R	0	1	SIZE		0	0	0	RE	REGISTER Dyn	

7-8

M68000 FAMILY PROGRAMMER'S REFERENCE	MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

7-9

CPU32 Instructions

CPU32 Instructions

TBLS TBLSN

Table Lookup and Interpolate (Signed)

TBLS TBLSN

Instruction Fields:

Effective address field (table lookup and interpolate mode only)-Specifies the destination location. Only control alterable addressing modes are allowed as listed in the following table:

(CPU32)

Addressing Mode	Mode	Register		lode Register Ad		Addressing Mode	Mode	Register
Dn	-	-		(xxx).W	111	000		
An	-	-		(xxx).L	111	001		
(An)	-	-		# < data >	-	-		
(An) +	-	-						
– (An)	100	reg. number:An						
(d ₁₆ ,An)	101	reg. number:An		(d ₁₆ ,PC)	111	010		
(d ₈ ,An,Xn)	110	reg. number:An		(d ₈ ,PC,Xn)	111	011		
(bd,An,Xn)	110	reg. number:An		(bd,PC,Xn)	111	011		

Size Field—Specifies the size of operation. 00 — Byte Operation 01 — Word Operation

10 — Long Operation

Register field-Specifies the destination data register, Dx. On entry, the register contains the interpolation fraction and entry number

- Dym, Dyn field—If the effective address mode field is nonzero, this operand register is unused and should be zero. If the effective address mode field is zero, the surface interpolation variant of this instruction is implied, and Dyn specifies one of the two source operands.
- Rounding mode field—The R-bit controls the rounding of the final result. When R = 0, the result is rounded according to the round-to-nearest algorithm. When R = 1, the result is returned unrounded.

TBLU TBLUN	Table Lookup and Interpolat (CPU32)	tion (Unsigned)								
Operation:	Rounded: ENTRY(n) + {(ENTRY(n + 1) – ENTRY(n)) x Dx 7 – 0} + 256 \rightarrow Dx Unrounded: ENTRY(n) x 256 + {(ENTRY(n + 1) – ENTRY(n)) x Dx 7 – 0} \rightarrow Dx Where ENTRY(n) and ENTRY(n + 1) are either:									
	 Consecutive entries in indexed by Dx 15 – 8 : 	the table pointed to by the < ea > and π SIZE or;								
	2. The registers Dym, Dy	n respectively								
Assembler Syntax:	TBLU. < size > < ea > ,Dx TBLUN. < size > < ea > ,Dx TBLU. < size > Dym:Dyn, Dx TBLUN. < size > Dym:Dyn, Dx	Result rounded Result not rounded Result rounded Result not rounded								
A 44 - 21 - 4 - 1	0' · · (D · · ·)) · · · · · · · · ·									

Attributes: Size = (Byte, Word, Long)

Description: The TBLU and TBLUN instructions allow the efficient use of piecewise linear, compressed data tables to model complex functions. The TBLU instruction has two modes of operation: table lookup and interpolate mode and data register interpolate mode.

For table lookup and interpolate mode, data register Dx 15 - 0 contains the independent variable X. The effective address points to the start of a unsigned byte, word, or long-word table containing a linearized representation of the dependent variable, V, as a function of X. In general, the independent variable, located in the low-order word of Dx, consists of an 8-bit integer part and an 8-bit fractional part. An accuract drift post to be dependent varies by 16 + 0 for 10 +assumed radix point is located between bits 7 and 8. The integer part, bx 15 – 8, is scaled by the operand size and is used as an offset into the table. The selected entry in the table is subtracted from the next consecutive entry. A fractional portion of this difference is taken by multiplying by the interpolation fraction, Dx 7 - 0. The adjusted difference is then added to the selected table entry. The result is returned in the destination data register, Dx.

TBLSN

TBLU TBL TBLUN Table Lookup and Interpolation (Unsigned) (CPU32) TBLUŇ

For register interpolate mode, the interpolation occurs using the Dym and Dyn registers in place of the two table entries. For this mode, only the fractional portion, Dx 7 - 0, is used in the interpolation and the integer portion, Dx 15 - 8, is ignored. The register interpolation mode may be used with several table lookup and interpolations to model multidimensional functions.

Signed table entries range from -2^{n-1} to $2^{n-1} - 1$; whereas, unsigned table entries range from 0 to 2^{n-1} where n is 8, 16, or 32 for byte, word, and long-word tables, respectively. The unsigned and unrounded table results will be zero-extended instead of sign-extended.

Rounding of the result is optionally selected via the "R" instruction field. If R = 0 (TABLE), the fractional portion is rounded according to the round-to-nearest algorithm. The rounding procedure can be summarized by the following table:



The adjusted difference is then added to the selected table entry. The rounded result is returned in the destination data register, Dx. Only the portion of the register corresponding to the selected size is affected

	31	24	23	16	15	8	7	0	
BYTE	UNAFFE	CTED	UNAFF	ECTED	UNAF	ECTED	R	ESULT	
WORD	UNAFFECTED		UNAFF	ECTED	RE	SULT	RESULT		
LONG	RESU	LT	RES	SULT	RE	SULT	R	ESULT	

If R = 1 (TBLUN), the result is returned in register Dx without rounding. If the size is byte, the integer portion of the result is returned in Dx 15 – 8; the integer portion of a word result is stored in Dx 23 – 8; the least significant 24 bits of a long result are stored in Dx 31 – 8. Byte and word results are sign-extended to fill the entire 32-bit register. FRACTION FRACTION

TBLU TBLUN Table Lookup and Interpolation (Unsigned) (CPU32) TBLUŇ

	31	24	23	16	15	
BYTE	SIGN-EXT	ENDED	SIGN-E	XTENDED		RESULT
WORD	SIGN-EXT	ENDED	RE	SULT		RESULT
LONG	RESU	LT	RE	SULT		RESULT

NOTE

The long-word result contains only the least significant 24 bits of integer precision.

For all sizes, the 8-bit fractional portion of the result is returned in the low byte of the For all sizes, the 8-bit fractional portion of the result is returned in the low byte of the data register, Dx 7 – 0. User software can make use of the fractional data to reduce cumulative errors in lengthy calculations or implement rounding algorithms different from that provided by other forms of TBLU. The previously described assumed radix point places two restrictions on the programmer:

- 1. Tables are limited to 257 entries in length.
- 2. Interpolation resolution is limited to 1/256, the distance between consecutive ta-Interpolation resolution is limited to 1/256, the distance between consecutive table entries. The assumed radix point should not, however, be construed by the programmer as a requirement that the independent variable be calculated as a fractional number in the range $0 \le X \le 255$. On the contrary, X should be considered to be an integer in the range $0 \le X \le 6553$, realizing that the table is actually a compressed representation of a linearized function in which only every 256th value is actually stored in memory.

Condition Codes:

N Z V C Г

- Not affected

- Set if the most significant bit of the result is set; cleared otherwise.
- Set if the result is zero; cleared otherwise. v
 - Set if the integer portion of an unrounded long result is not in the range, $-(2^{23}) \leq \text{Result} \leq (2^{23}) 1$; cleared otherwise.
- С - Always cleared.

7-12

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

7-13

CPU32 Instructions TBLU TBLU TBLUN Table Lookup and Interpolation (Unsigned) TBLUN

Instruction Format:

TABLE LOOKUP AND INTERPOLATE

(CPU32)

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0						
1	1	1	1	1	0	0	0	0 0			0 0	0	0 0		0 0	EFFECTIVE ADDRESS					
	· ·				Ů	Ů		MODE		F	REGISTE	R									
0	0 REGISTER Dx			0	R	0	1	SIZE	0	0	0	0	0	0	0						
	DATA REGISTER INTERPOLATE																				

1 1 1 1 0 0 0 0 0 0 0 REGISTER Dym 0 REGISTER Dx 0 R 0 0 SIZE 0 0 0 REGISTER Dym		15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	ſ	1	1	1	1	1	0	0	0	0	0	0	0	0	REGISTER E		Dym
		0	REGISTER Dx			0		0	0	SIZE		0	0	0	RE	GISTER	Dyn

Instruction Fields:

Effective address field (table lookup and interpolate mode only)—Specifies the destination location. Only control alterable addressing modes are allowed as listed in the following table:

Addressing Mode	Mode	Register	Addressing Mode	Mode	Register
Dn	-	—	(xxx).W	111	000
An	-	-	(xxx).L	111	001
(An)	010	reg. number:An	# < data >	-	-
(An) +	-	-			
- (An)	100	reg. number:An			
(d ₁₆ ,An)	101	reg. number:An	(d ₁₆ ,PC)	111	010
(d ₈ ,An,Xn)	110	reg. number:An	(d ₈ ,PC,Xn)	111	011
(bd,An,Xn)	110	reg. number:An	(bd,PC,Xn)	111	011

Size field-Specifies the size of operation.

00 — Byte Operation 01 — Word Operation 10 — Long Operation



- Register field-Specifies the destination data register, Dx. On entry, the register contains the interpolation fraction and entry number.
- Dym, Dyn field-If the effective address mode field is nonzero, this operand register is unused and should be zero. If the effective address mode field is zero, the surface interpolation variant of this instruction is implied, and Dyn specifies one of the two source operands
- Rounding mode field—The R-bit controls the rounding of the final result. When R = 0, the result is rounded according to the round-to-nearest algorithm. When R = 1, the result is returned unrounded.

SECTION 8 INSTRUCTION FORMAT SUMMARY

This section contains a listing of the M68000 family instructions in binary format. It is listed in opcode order for the M68000 family instruction set.

8.1 INSTRUCTION FORMAT

The following paragraphs present a summary of the binary encoding fields.

8.1.1 Coprocessor ID Field

This field specifies which coprocessor in a system is to perform the operation. When using directly supported floating-point instructions for the MC68040, this field must be set to one.

8.1.2 Effective Address Field

This field specifies which addressing mode is to be used. For some operations, there are hardware-enforced restrictions on the available addressing modes allowed.

8.1.3 Register/Memory Field

This field is common to all arithmetic instructions. A zero in this field indicates a register-toregister operation, and a one indicates an < ea > -to-register operation.

8.1.4 Source Specifier Field

This field is common to all artihmetic instructions. The value of the register/memory (R/M) field affects this field, s definition. If R/M = 0, specifies the source floating-point data register (FPDR). If R/M = 1, specifies the source operand data format.

- 000 Long-Word Integer (L) 001 Single-Precision Real (S) 010 Extended-Precision Real (X) 011 Packed-Decimal Real (P)
- 100 Word Integer (W) 101 Double-Precision Real (D) 110 Byte Integer (B)

7-16

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

8-1

Instruction Format Summary

8.1.5 Destination Register Field

M68000 F

This field is common to all arithmetic instructions. It specifies the FPDR that that will be the destination. The results are always stored in this register.

8.1.6 Conditional Predicate Field

This field is common to all conditional instructions and specifies the conditional test that is to be evaluated. Table 8-1 shows the binary encodings for the conditional tests

8.1.7 Shift and Rotate Instructions

The following paragraphs define the fields used with the shift and rotate instructions.

8.1.7.1 Count Register Field. If *i*/r = 0, this field contains the rotate (shift) count of 1 – 8 (a zero specifies 8). If *i*/r = 1, this field specifies a data register that contains the rotate (shift) count. The following shift and rotate fields are encoded as follows:

- dr field
 - 0 Rotate (shift) Right 1 Rotate (shift) Left

- i/r field 0 Immediate Rotate (shift) Count 1 Register Rotate (shift) Count

8.1.7.2 Register Field. This field specifies a data register to be rotated (shifted).

Instruction Format Summary

Table 8-1. Conditional Predicate Field Encoding

Conditional Predicate	Mnemonic	Definition
000000	F	False
000001	EQ	Equal
000010	OGT	Ordered Greater Than
000011	OGE	Ordered Greater Than or Equal
000100	OLT	Ordered Less Than
000101	OLE	Ordered Less Than or Equal
000110	OGL	Ordered Greater Than or Less Than
000111	OR	Ordered
001000	UN	Unordered
001001	UEQ	Unordered or Equal
001010	UGT	Unordered or Greater Than
001011	UGE	Unordered or Greater Than or Equal
001100	ULT	Unordered or Less Than
001101	ULE	Unordered or Less Than or Equal
001110	NE	Not Equal
001111	Т	True
010000	SF	Signaling False
010001	SEQ	Signaling Equal
010010	GT	Greater Than
010011	GE	Greater Than or Equal
010100	LT	Less Than
010101	LE	Less Than or Equal
010110	GL	Greater Than or Less Than
010111	GLE	Greater Than or Less Than or Equal
011000	NGLE	Not (Greater Than or Less Than or Equal)
011001	NGL	Not (Greater Than or Less Than)
011010	NLE	Not (Less Than or Equal)
011011	NLT	Not (Less Than)
011100	NGE	Not (Greater Than or Equal)
011101	NGT	Not (Greater Than)
011110	SNE	Signaling Not Equal
011111	ST	Signaling True

8.1.8 Size Field

This field specifies the size of the operation. The encoding is as follows:

00 — Byte Operation	
01 — Word Operation	
10 — Long Operation	

8.1.9 Opmode Field

Refer to the applicable instruction descriptions for the encoding of this field in Section 4 Integer Instructions, Section 5 Floating Point Instructions, Section 6 Supervisor (Privaleged) Instructions, and Section 7 CPU32 Instructions.

8.1.10 Address/Data Field

This field specifies the type of general register. The encoding is:

0 — Data Register 1 — Address Register

8.2 OPERATION CODE MAP

Table 8-2 lists the encoding for bits 15 - 12 and the operation performed.

Table 8-2. Operation Code Map

Bits 15 – 12	Operation
0000	Bit Manipulation/MOVEP/Immed iate
0001	Move Byte
0010	Move Long
0011	Move Word
0100	Miscellaneous
0101	ADDQ/SUBQ/Scc/DBcc/TRAPc c
0110	Bcc/BSR/BRA
0111	MOVEQ
1000	OR/DIV/SBCD
1001	SUB/SUBX
1010	(Unassigned, Reserved)
1011	CMP/EOR
1100	AND/MUL/ABCD/EXG
1101	ADD/ADDX
1110	Shift/Rotate/Bit Field
1111	Coprocessor Interface/MC68040 and CPU32 Extensions

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL MOTOROLA

```
ORI to CCR
```

ORI to SR

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	0	0	0	0	0	1	1	1	1	1	0	0
	16-BIT WORD DATA														
ORI	ORI														

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0 0 0 0 0 0 0								ZE		EFF MODE	ECTIVE	E ADDRE	ESS REGISTE	R
		16	6-BIT WO	ORD DA	ΓA						8-BIT BY	TE DATA	A		
						3	2-BIT LC	NG DAT	A						

ANDI to CCR

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	0	0	1	0	0	0	1	1	1	1	0	0
0	0	0	0	0	0	0	0				B-BIT BY	TE DATA	4		
ANDI to SR															

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	0	0	1	0	0	1	1	1	1	1	0	0
	16-BIT WORD DATA														


ANDI

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0		
0	0	0	0	0	0	0	0	SI	ZE	EFFECTIVE ADDRESS MODE REGISTER							
		16	6-BIT WO	ORD DA	ΓA					1	3-BIT BY	TE DATA	4				
						2	2 DIT I C	NIC DAT	· A								



M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

8-5

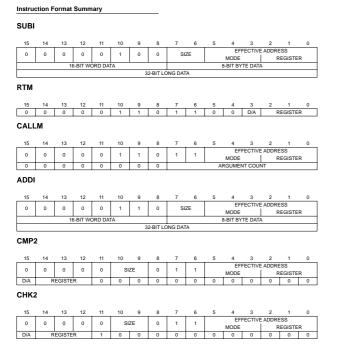

Instruction Format Summary

EORI to CCR															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	1	0	1	0	0	0	1	1	1	1	0	0
0	0	0	0	0	0	0	0	1		В	YTE DAT	A (8 BIT	S)		
	to SF														
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	1	0	1	0	0	1	1	1	1	1	0	0
16-BIT WORD DATA															
ORI	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	14	.0					<u> </u>			Ŭ			E ADDRE		
0	0	0	0	1	0	1	0	SIZE MODE REGISTER							R
		16	3-BIT WO	ORD DAT	ΓA				1	6-BIT BY	TE DAT	A			
						3	2-BIT LC	NG DAT	ΓA						

СМРІ

15	15 14 13 12 11 10 9 8								6	5	4	3	2	1	0	
0	0	0	0	4		0	61	ZE	EFFECTIVE ADDRESS							
0					· ·	0	0	31	26		MODE		R	EGISTE	R	
		16	6-BIT WO	ORD DA	ΓA			8-BIT BYTE DATA								
						3	2-BIT LC	ONG DAT	A							

BTST

				Bľ	T NUM	BER S	TATIC	, SPEC	IFIED	AS IM	MEDIA	TE DA	ΓA			
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
ſ												EFF	ECTIVE	ADDRE	SS	
	U	0	0	0	1	0	0	0	U	0		MODE		F	EGISTE	R
Ì	0	0	0	0	0	0	0	0		-	BIT NUMBER					

BCHG

			Bľ	T NUM	BER S	TATIC	, SPEC	IFIED	AS IM	MEDIA	TE DA	TA			
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0		0	0	0	0	4		EFI	FECTIVE	E ADDRE	SS	
0		0				0	0	0			MODE		R	EGISTE	R
0	0	0	0	0	0	0	0				BIT NU	JMBER			

Instruction Format Summary

BCLR

Instruction Format Summary	
	,

5 4 3 2 1 EFFECTIVE ADDRESS MODE | REGISTER

5 4 3 2 1 0 EFFECTIVE ADDRESS MODE REGISTER

MODE

0

			Bľ	T NUM	BER S	TATIC	, SPEC	IFIED	AS IMI	MEDIA	ATE DA	TA			
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	1	0	0	0	1	0		EFI	FECTIVE	E ADDRE	SS	
0		0	U U		U U	Ů	U U				MODE		R	EGISTE	R
0	0	0	0	0	0	0	0	BIT NUMBER							

BSEI															
			Bľ	T NUM	IBER S	TATIC	, SPEC	CIFIED	AS IM	MEDIA	TE DA	TA			
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0		0		4		0		4	4		EFI	FECTIV	E ADDRI	SS	
0	0	0	0	· ·	0	0	0	L '	L '		MODE		I B	FGISTE	R

0	0	0	0	1	0	0	0	1	1	MODE	REGIST
0	0	0	0	0	0	0				BIT NUMBER	

MOVE	s														
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	

0 0 0 A/D REGISTER		12		10	9	0	'	0	5		5	4		0	
0	0	0	0	1	1	1	0	51	ZE		EFI	FECTIVE			
0		0	Ů				0	51	26		MODE		F	REGISTE	R
A/D	F	EGISTE	R	dr	0	0	0	0	0	0	0	0	0	0	0
							_	_	_	_		_			
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	1	SL	ZE	0	1	1	1	1	1	1	0	0
D/A1		Rn1		0	0	0		Du1		0	0	0		Dc1	
D/A2		Rn2		0	0	0		Du2		0	0	0		Dc2	

CAS

	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	0	0	0	0	1	SI	ZE	0	1	1		EFI MODE	FECTIVE		ESS REGISTEI	٦
[0	0	0	0	0	0	0		Du		0	0	0		Dc	

0 0 0 0 0 0 0 0 0 0 Dc BTST													
0	0	0	0	0	0	0		Du		0	0	0	Dc
втят	•					DVALA		DEOIE		4.050	NOTE		

					BIT NU	IMBER	DYNA	MIC, S	PECIF	IED IN	A REC	SISTER				
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
ſ	0		0	0		REGISTER			0		EFF	ECTIVE	ADDRE	SS		
	0	0	0	0		CEGIOTEI	`		0	0		MODE		R	EGISTE	R

					IVIDER	DTINA	iviic, c	PECIF	IED IN	ARE	313165				
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	F	REGISTE	R	1	1	1			FECTIVE	E ADDRE		
											MODE		R	EGISTE	R
MOV	EP														
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	DAT	A REGIS	STER		OPMOD	E	0	0	1		DDRES	
						16-	BIT DISF	PLACEM	ENT		•				
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	(
0	0	SI	ZE		STINAT		0	0	1		MODE	SOL	JRCE R	EGISTE	R
MOV	E														
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	SI	ZE				NATION					SOU	IRCE		
				F	REGISTE	R		MODE			MODE		R	EGISTE	R
MOV	E fron	n SR													
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	0	0	0	0	0	0	1	1				IRCE		

BIT NUMBER DYNAMIC, SPECIFIED IN A REGISTER

1 0 1

1 1

BIT NUMBER DYNAMIC, SPECIFIED IN A REGISTER

BIT NUMBER DYNAMIC, SPECIFIED IN A REGISTER

0

REGISTER

11 10 9 8 7 6

REGISTER

8-8

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

0 1 0 0 0 0 0 0 1 1

BCHG

BCLR

15 14 13 12

BSET

0 0 0

15 14 13

0 0

0

0 0

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

8-9

REGISTER

Instru	ction F	ormat	Summ	nary											
MOV	E fron	n CCF	2												
15	14	13	12	11	10	9	8	7	6	5	4			1	0
0	1	0	0	0	0	1	0	1	1			ECTIVE	ADDRE		
-			, ,								MODE		R	EGISTE	R
NEG	(
15	14	13	12	11	10	9	8	7	6	5	4	3		1	0
0	1	0	0	0	0	0	0	SE	ZE1			ECTIVE	ADDRE		
-		-		-		-		-			MODE		R	EGISTE	R
CLR															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	0	0	0	0	1	0	SI	ZE				ADDRE		-
											MODE		н	EGISTE	к
MOV	E to C	CR													
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	0	0	0	1	0	0	1	1			ECTIVE	ADDRE		
-											MODE		R	EGISTE	R
NEG															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	0	0	0	1	0	0	SI	ZE				ADDRE		
-								-			MODE		R	EGISTE	R
ΝΟΤ															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	0	0	0	1	1	0	SI	ZE			ECTIVE	ADDRE		
											MODE		R	EGISTE	R
MOV	E to S	R													
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
						-							ADDRE		
0	1	0	0	0	1	1	0	1	1		MODE			EGISTE	R

											Inst	tructio	n Forn	nat Sur	nma
-xt	ЕХТВ														
						_	_	_	_	_					
15 0	14	13	12	11	10	9	8	7 OPMOD	6	5	4	3	2	1 EGISTE	0
U		0	0		0	U		JFINODI	-	U	0	U		EGISTE	ĸ
INK															
							LO	NG							
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	0	0	1	0	0	0	0	0	0	0	1	F	EGISTE	R
							RDER D								
						1011-0	NDERD	AGI LAG	LINENT						
вс	C														
15	14	13	12	11	10	9	8	7	6	5	4		2	1	0
0	1	0	0	1	0	0	0	0	0			FECTIV	EADDRE		
0		0				0	0	0	0		MODE		F	EGISTE	R
5WAI	P 14	13	12	11	10	9	8	7	6	5	4	3	2	1	Ō
0	1	0	0	1	0	0	0	0	1	0	0	0	F	EGISTE	R
3KPT	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	0	0	1	0	0	0	0	1	0	0	1		VECTOR	
PEA				1											
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	0	0	1	0	0	0	0	1		EFI MODE	FECTIV	E ADDRE	ESS EGISTE	R
BGNE	כ														
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0

ILLEGAL 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0 0 1 0 0 1 0 1 1 1 1 1 1 0 0 TAS 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0 0 1 0 1 0 1 0 1 1 EFFECTIVE ADDRESS MODE REGISTER 0 тѕт 13 0 5 4 3 2 1 0 EFFECTIVE ADDRESS MODE REGISTER 15 12 14 10 1 0 0 0 1 0 1 SIZE MULU LONG 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0 1 0 0 1 1 0 0 0 0 EFFECTIVE ADDRESS REGISTER DI 0 SiZE 0 0 0 0 0 0 REGISTER Dh 15 0 0 MULS LONG 15 14 13 12 11 10 9 8 7 6 5 4 2 1 0 0 1 0 0 1 1 0 0 0 EFFECTIVE ADDRESS 0 REGISTER DI 1 SIZE 0 0 0 0 0 REGISTER DI 0 DIVU, DIVUL LONG 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0 9 8 7 6 5 4 3 2 1 0 0 0 0 0 EFFECTIVE ADDRESS MODE REGISTER D 0 REGISTER Dq 0 SIZE 0 0 0 0 0 0 REGISTER D 0 0

														nat Su	
DIVS	DIVS	SL.													
							LO	NG							
15	14	13	12	11	10	9	8	7	6	5	4	3		1	0
0	1	0	0	1	1	0	0	0	1			FECTIV	E ADDRI		
0		GISTER		1	SIZE	0	0	0	0	0	MODE 0	0		GISTER	
U	RE	GISTER	Dq	1	SIZE	U	0	U	0	U	0	U	RE	GISTER	Dr
FRAF															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	0	0	1	1	1	0	0	1	0	0		VEC	TOR	
INK															
							WC	RD							
15	14	13	12	11	10	9	8	7	6	5	4	3	2		
0	1	0	0	1	1	1	0 RD DISF	0	1	0	1	0	F	EGISTE	R
						000	RD DISP	LAGEIN							
JNLK	(
15	14	13	12	11	10	9	8	7	6	5	4	3		1	
0	1	0	0	1	1	1	0	0	1	0	1	1	F	EGISTE	R
	E USF														
	- 03														
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	0	0	1	1	1	0	0	1	1	0	dr		EGISTE	
RESE	T														
45		40	40		40			-		-					
15 0	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
-		, v			· ·		0	v			· ·	Ŭ	Ů	0	
NOP															
	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
15	1	0	0	1	1	1	0	0	1	1	1	0	0	0	1

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

8-13

Instruction Format Summary

Instru	ction F	ormat	Summ	nary											
STOP	•														
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	0	0	1	1	1	0 IMMEDIA		1	1	1	0	0	1	0
							IMMEDIA	ALE DAT	A						
RTE															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	0	0	1	1	1	0	0	1	1	1	0	0	1	1
RTD															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	0	0	1	1	1	0	0	1	1	1	0	1	0	0
						16-	BIT DISF	PLACEM	ENT						
RTS															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	0	0	1	1	1	0	0	1	1	1	0	1	0	1
TRAF	٧														
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	0	0	1	1	1	0	0	1	1	1	0	1	1	0
RTR															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	0	0	1	1	1	0	0	1	1	1	0	1	1	1
MOV	EC														
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	0	0	1	1	1	0	0	1	1	1	1	0	1	dr
A/D	R	EGISTE	R					CC	ONTROL	REGIST	ER				

JSR															
15	14	13	12	11	10	9	8	7	6	5	4				0
0	1	0	0	1	1	1	0	1	0		EFI MODE		E ADDRE	ESS EGISTE	R
JMP															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	0	0	1	1	1	0	1	1		EFI			ESS EGISTE	ь
MOV	ЕМ														
15	14	13	12	11	10	9	8	7	6	5				1	0
0	1	0	0	1	dr	0	0	1	SIZE		EFI		E ADDRE	ESS EGISTE	R
					-	RE	GISTER	LIST M	ASK		mobe				
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	0	0	F	REGISTE	R	1	1	1				ADDRE		
снк											MODE		F	EGISTE	R
15	14	13	12	11	10	9	8	7	6	5				1	0
0	1	0	0	F	REGISTE	R	SI	ZE	0		EFI MODE		E ADDRE	ESS EGISTE	R
ADD	Q														
15	14	13	12	11	10	9	8	7	6	5				1	0
0	1	0	1		DATA		0	SI	ZE				E ADDRE	ESS EGISTE	R
SUBO	ຊ														
15	14	13	12	11	10	9	8	7	6	5	4				0
15	14	13	12	11	10 DATA	9	8		6 ZE	5		FECTIV	ADDRE		

8-14

DBcc

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	0	1		COND			1	1	0	0	1	F	REGISTE	R
						16-E	BIT DISF	PLACEM	ENT						
RAF	PCC														
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	c
0	1	0	1		COND			1	1	1	1	1	1	OPMODE	E
				-				AL WOR							
							OR LON	G WOR	0						
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	(
	14					-	0			<u> </u>			ADDR		
0	1	0	1		COND	ITION		1	1		MODE			REGISTE	R

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1 1 0 0 0 0 0 8-BIT DISPLACEMENT														
	16-BIT DISPLACEMENT IF 8-BIT DISPLACEMENT = \$00														
				32-	BIT DISF	PLACEM	ENT IF 8	-BIT DIS	PLACE	MENT =	\$FF				

BSR

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	1	1 1 0 0 0 0 1 8-BIT DISPLACEMENT													
	16-BIT DISPLACEMENT IF 8-BIT DISPLACEMENT = \$00														
				32-	BIT DISF	PLACEM	ENT IF 8	-BIT DIS	PLACE	MENT =	\$FF				

Bcc

15	5	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	
0		1	1	0		COND	ITION				8-B	IT DISP	LACEME	INT			
					16-BIT DISPLACEMENT IF 8-BIT DISPLACEMENT = \$00												
					32-	BIT DISP	LACEM	ENT IF 8	-BIT DIS	PLACE	MENT =	\$FF					

MOVEQ

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	
0	1	1	1	F	REGISTE	R	0				DA	TA				
DIVU	, DIVL	JL						PD								

							VVC	RD							
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	0	0	0	6	REGISTE	R	0	1	1			FECTIVE			
Ľ.	Ů	Ŭ	Ű				Ů				MODE		F	EGISTE	R

SBCD

 15
 14
 13
 12
 11
 10
 9
 8
 7
 6
 5
 4
 3
 2
 1
 0

 1
 0
 0
 0
 REGISTER Dy/Ay
 1
 0
 0
 0
 RM
 REGISTER Dy/Ax

 PACK

 15
 14
 13
 12
 11
 10
 9
 8
 7
 6
 5
 4
 3
 2
 1
 0

 1
 0
 0
 0
 REGISTER Dy/Ay
 1
 0
 1
 0
 0
 R/M
 REGISTER Dy/Ax

 16-BIT EXTENSION: ADJUSTMENT

UNPK

 15
 14
 13
 12
 11
 10
 9
 8
 7
 6
 5
 4
 3
 2
 1
 0

 1
 0
 0
 0
 REGISTER Dy/Ay
 1
 1
 0
 0
 0
 REGISTER Dx/Ax

 I6-BIT EXTENSION: ADJUSTMENT

DIVS, DIVSL

WORD 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0																
	15	14	13	12	11	10	9	8		ь	5	4	3	2	1	0
	1	0	0	0	F	EGISTE	R	1	1	1		ESS EGISTE	.p			
												MODE				.1
,	OR															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	1	0	0	0	F	EGISTE	R		OPMOD	=	EFFECTIVE ADDRESS MODE REGISTER					R

8-16

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

8-17

Instruction Format Summary

Instru	ction F	ormat	Summ	nary											
SUB	(
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	0	0	1	REG	ISTER D	Dy/Ay	1	SL	ZE	0	0	R/M	REG	ISTER D	Dx/Ax
SUB															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	0	0	1	R	EGISTE	R		OPMODE			EF MODE		E ADDRE	ESS EGISTE	'n
SUBA															,
15	14	13	12	11	10	9	8	7	6	5		3	2 E ADDRE	1	0
1	0	0	1	R	EGISTE	R		OPMODE	=		MODE			EGISTE	R
CMPI 15	VI 14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	0	1	1	RE	GISTER	Ax	1	SI	ZE	0	0	1	RE	GISTER	t Ay
CMP 15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	0	1	1		EGISTE	D		OPMODE	-		EF		E ADDRE		
	0				EGISTE	.r.		OFWODE	-		MODE		R	EGISTE	R
CMP	4														
15	14	13	12	11	10	9	8	7	6	5	4			1	0
1	0	1	1	R	EGISTE	R		OPMODE	•		EF MODE		E ADDRE	ESS EGISTE	R
EOR		1	1	1						1					
15	14	13	12	11	10	9	8	7	6	5	4	3		1	0
1	0	1	1	R	EGISTE	R		OPMODE	•		EF MODE		E ADDRE	ESS EGISTE	R
L							1			1	MODE		1 1	20.012	

MULU	J															
							wo	ORD								
15	14	13	12	11	10	9	8	7	6	5		3				
1	1	0	0	F	REGISTE	R	0	1	1		EF MODE	FECTIV		ESS REGISTE	D	
											NODE		r	EGIOTE	ĸ	
ABCI	0															
15	14	13	12		10		8	7	6	5	4	3		1		
1	1	0	0	RE	GISTER	t Rx	1	0	0	0	0	R/M	RE	GISTER	Ry	
MULS	5															
							wo	ORD								
15	14	13	12	11	10	9	8	7	6	5		3				
1	1	0	0	F	REGISTE	R	1	1	1	EFFECTIVE ADDRESS MODE REGISTER					R	
15	14	13	12		10		8	7		5		3		1		
1	1	0	0	RE	GISTER	Rx	1			OPMODE REGISTER Ry						
AND																
15	14	13	12	11	10	9	8	7	6	5		3				
1	1	0	0	F	REGISTE	R		OPMOD	E		EF MODE		E ADDRESS REGISTER			
ADD)	<															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1		
1	1	0	1	RE	GISTER	Rx	1	SIZE		0	0	R/M	RE	GISTER	Ry	
ADDA	4															
15	14	13	12	11	10	9	8	7	6	5	4			1		
1	1	0	1	F	REGISTE	R		OPMOD	E				E ADDRESS REGISTER			
			-													

ADD 15 14 13 12 11 10 9 8 7 6 1 1 0 1 REGISTER OPMODE 5 4 3 2 1 EFFECTIVE ADDRESS MODE REGISTER ASL. ASR 15 14 13 12 11 10 9 8 7 1 1 1 1 0 0 0 0 dr 1< 6 5 4 3 2 1 0 1 EFFECTIVE ADDRESS MODE REGISTER REGISTER LSL, LSR MEMORY SHIFT 15 14 13 12 11 10 9 8 7 1 1 1 0 0 0 1 dr 1 6 5 4 3 2 1 0 EFFECTIVE ADDRESS 1 MODE REGISTER ROXL. ROXR MEMORY ROTATE 8 7 dr 1 14 13 12 11 10 4 3 2 1 EFFECTIVE ADDRESS 0 1 0 1 1 1 0 1 1 MODE REGISTER ROL, ROR MEMORY ROTATE 9 8 7 6 1 dr 1 1 15 14 13 12 11 10 5 4 3 2 1 0 EFFECTIVE ADDRESS 1 1 1 0 0 1 MODE REGISTER BETST 5 4 3 2 1 0 EFFECTIVE ADDRESS MODE REGISTER Dw WIDTH 13 12 10 1 1 0 1 0 0 0 1 1 0 0 0 Do OFFSET OFFSET OFFSET 1

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	0	1	0	0	1	1	1			FECTIV	E ADDRE		,
0	F	EGISTE	R	Do			OFFSET	-		Dw	MODE		WIDTH	EGISTE	к
BFCH	IG														

15

BFEXTU

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	0	1	0	1	0	1	1		EFF	ECTIV	E ADDRI		
			0		Ů		Ů		· ·		MODE		F	REGISTE	R
0	0	0	0	Do		-	OFFSET			Dw			WIDTH		
BFEX	стs														

	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1												EFF	ECTIV	E ADDRE	SS	
	1	1	1	0	1	0	1	1	1	1		MODE		R	EGISTE	R
	0	F	EGISTE	R	Do			OFFSET	ſ		Dw			WIDTH		
		_														

BFCLR

	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
ſ	1	1	1	0	1	1	0	0	1	1		EF	FECTIV	ADDRE		
l	· ·			Ů			Ŭ	Ů				MODE		R	EGISTE	R
l	0	0	0	0	Do			OFFSET	r –		Dw			WIDTH		
1	BFFF	o														

	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
ĺ		4				4	0					EFF	ECTIV	E ADDRE	SS	
		l '	· ·		· ·	'	0					MODE		R	EGISTE	R
[0	F	EGISTE	R	Do		OFF	SET			Dw			WIDTH		
1	BFSE	T														

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	0	1	1	1	0	1	1		EFF	ECTIV	ADDRE	SS	
			0				0				MODE		F	EGISTE	R
0	0	0	0	Do			OFFSET			Dw			WIDTH		

0

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA


MOTOROLA

PMOVE

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

8-21

Instruction Format Summary

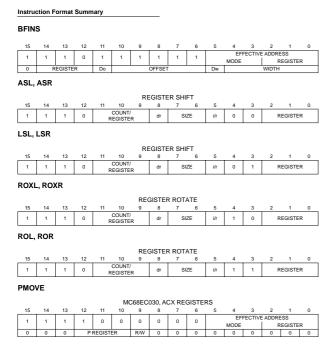

					MC	68030	ONLY.	TT RE	GISTE	RS				
15	14	13	12	11	10	9	8	7	6	5	4	3	2	
1	1	1	1	0	0	0	0	0	0			FECTIV		
			· ·	-	-	-	-	-	-		MODE		F	REG
0	0	0	0	REGIST		R/W	FD	0	0	0				
LOA		U	<u> </u>	REGIST	ER	R/W	10	0	0	U	0	0	0	
		13	12	11	10	9	8	7	6	5	4	3	2	
LOA	D		1			1					4		2 ADDR	

				VAL C	ONTAI	NS AC	CESS	LEVEL	TO TE	ST AG	AINST				
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	0	0	0	0	0	0		EFI MODE	FECTIVE		ESS EGISTE	R
0	0	1	0	1	0	0	0	0	0	0	0	0	0	0	0

PVALID

	Ν		ROCE	SSOR	REGIST	TER (CONTAI	NS AC	CESS	LEVEL	тот	EST AG	GAINST	r	
-		40	10		40	~		-	~	~					

			ROCE	550R	REGIS	IER (INS AC	UE SS	LEVE		ESTA	JAINS		
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	0	0	0	0	0	0		EF	FECTIVE	E ADDRI	ESS	
	1 °		· ·	Ŭ		0	0	0	0		MODE		F	REGISTER	۲ ا
0	0	1	0	1	0	0	0	0	0	0	0	0	F	REGISTE	۲

PFLUSH

						N	IC6803	30 ONL	Y						
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	0	0	0	0	0	0		EFI MODE	FECTIV	E ADDRE	ESS EGISTE	R
0	0	1		MODE		0	0	MA	SK				FC		

							MC6	8851							
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	0	0	0	0	0	0		EF MODE	FECTIV		ESS REGISTE	R
0	0	1		MODE		0		MA	SK				FC		
PMC		MC688	51, TC	FRON	И ТС, С 10	CRP, DF	RP, SR	P, CAL	, VAL, 3	SCC,	AND AG	C REG	ISTER	S 1	0
1	1	1	1	0	0	0	0	0	0			FECTIV			0
									0	0	MODE			REGISTE	
0	1	0	Γ P	REGIST	ER	R/W	0	0	0	0	0	0	0	0	0
р МС 15	VE	13	12	MC6	8030 C	ONLY, S	SRP, C	RP, AN	D TC F	REGIS	4	3		1	0
1	1	1	1	0	0	0	0	0	0		EF MODE	FECTIV		ESS REGISTE	R
0	1	0	Р	REGIST	ER	R/W	FD	0	0	0	0	0	0	0	0
мо	VE														
15	14	13	12	11	10	MC68 9	10 080 8	VLY, M	MUSR 6	5	4	3	2	1	0
										5		FECTIV			U
-	1	1	1	0	0	0	0	0	0		MODE	_		REGISTE	
1		1	0	0	0	R/W	0	0	0	0	0	0	0	0	0
-	1														
1						MC	20EC0		ICD						
1		13	12	11	10	MC6 9	68EC0:	30, ACI 7	USR 6	5	4	3	2	1	0
1 0 PMC	VE	13	12	11	10					5		FECTIV	E ADDR		

PTE	ST														
							MC68	EC030							
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	4	0	0	0	0	0	0		EFF	ECTIVE	ADDRE	SS	
1 '	1'	l '	l '		0	0	0	0	0		MODE		R	EGISTE	R
1	0	0	0	0	0	R/W	0	R	EGISTE	R			FC		
PTE	ST														
							1C6803								
15	14	13	12	11	10	9 N	1C6803	0 ONL 7	Y 6	5	4	3	2	1	0
15	14	13	12	11 0	10 0			7	6	5			ADDRE		
						9	8	7	6	5	EFF		ADDRE	SS	
	1	1		0		9	8	7	6	5	EFF	ECTIVE	ADDRE	SS	
1	1	1		0		9	8	7 0 REGI	6	5	EFF	ECTIVE	ADDRE	SS	

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

8-25

Instruction Format Summary

PFLUSHR

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	0	0	0	0	0 0	0		EF MODE	FECTIVE		ESS REGISTE	R
1	0	1	0	0	0	0	Ō	0	0	0	0	0	0	0	0
PScc															

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
4				0		0	0	0			EFF	ECTIVE	ADDRE	SS	
				0	0	0	0	0			MODE		R	EGISTE	R
0	0	0	0	0	0	0	0	0	0		MC	68851 0	CONDITI	ON	
PDBo	c														

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	0	0	0	0	0	1	0	0	1	COU	NT REGI	STER
0	0	0	0	0	0	0	0	0	0		M	268851 0	CONDITI	ON	
						16-	BIT DISF	PLACEM	ENT						

PTRAPcc

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0			
1	1	1	1	0	0	0	0	0	1	1	1	1 1 OPMODE						
0	0	0	0	0	0	0	0	0	0	MC68851 CONDITION								
		16	-BIT OP	ERAND	OR MOS	ST SIGN	IFICANT	WORD	OF 32-B	IT OPEF	AND (IF	NEEDE	D)					
				LEAST	SIGNIFI	CANT W	ORD OF	32-BIT	OPERAN	ND (IF N	EEDED)							

PBcc 2 11 10 9 8 7 6 5 4 3 2 0 0 0 1 ISIZE MC68851 CONDITION DISPLACEMENT RM ROST SIGNIFICANT WORD OF 32-BIT DISPLACEMENT LEAST SIGNIFICANT WORD OF 32-BIT DISPLACEMENT (IF NEEDED) 15 14 13 1 1 1 6-BIT DI

PSAVE

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	4	4	4	0	0	0	4	0			EFF	FECTIVE	ADDRE	SS	
	· · ·			0		Ū		0	0		MODE		R	EGISTE	R

											Inst	tructio	n Forn	nat Sur	nmar
RES	TOR	E													
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	0	0	0	1	0	1		EF MODE	FECTIVE		ESS EGISTE	
PFLU	SH	1													i.
		40	MC68							ND DE					
15	14	13	12	11	10	9	8	7	6	5	4	3 IODE	2	1 EGISTE	0
15	14	13	12	11	10	MC6 9	8040/N 8	/C68L 7	C040 6	5	4 OPN	3 IODE	2 F	1 EGISTE	0 R
PTES	т			-						-					
15	14	13	12	11	10	9 MC6	8040/N 8	7 7	6 CO40	5	4	3	2	1	0
1	1	1	1	0	1	0	1	0	1	R/W	0	1		EGISTE	
PTES	т						MC68	EC040							
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	0	1	0	1	0	1	R/W	0	1	F	EGISTE	R
CINV															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0

1 1 1 0 1 0 0 CACHE 0 SCOPE REGISTER CPUSH

 15
 14
 13
 12
 11
 10
 9
 8
 7
 6
 5
 4
 3
 2
 1
 0

 1
 1
 1
 1
 0
 1
 0
 0
 CACHE
 1
 SCOPE
 REGISTER

8-26

E .	

				MC68	851, T	0/FRO	M PSR	AND	PCSR	REGIS	TERS				
15															
1	1	1	1	0	0	0	0	0	0		EF MODE	FECTIVE	ADDRE	ESS EGISTE	R
0	1	1	P	REGIST	ER	R/W	0	0	0	0	0	0	0	0	0

0	/E														
				MC68	851, TO)/FROI	M BAD	X AND	BACX	REGIS	STERS				
5	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
											EFI	FECTIVE	ADDRE	SS	

0	/ =														
				MC688	851, TC)/FRO	M BAD	X AND	BACX	REGI	STERS				
5	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	1	1	1	0	0	0	0	0	0		EFF	ECTIV	E ADDR	ESS	
				0	0	0	0	0	0		MODE		1 6	DECISTE	D

			MC688	851, TC)/FROI	M BAD	X AND	BACX	REGIS	STERS			
14	13	12	11	10	9	8	7	6	5	4	3 2		1
1	1	1	0	0	0	0	0	0		EFFEC	CTIVE AD	DRE	SS
· ·	· ·	· ·		ľ	0	ľ	0			MODE		RI	EGIST
1	1	P	REGIST	ER	R/W	0	0	0	0	N	UM		0

15	14	13	12	11	10	9	8	7	6	5	4 3	2	1	0	
4	4		4	0	0	0	0	0	0		EFFECTIV	E ADDRI	SS		
	· ·	· ·	' '	0	0	0		0	0	MODE REGISTER					
0	1	1	P	REGIST	R	R/W	0	0	0	MODE REGISTER					
PTES	т							-							

								MC68	EC030									
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0		
Γ	1	1	1	1	0	0	0	0	0	0		EFF	ECTIV	ADDRE				
					0	0	0	0	0		MODE REGISTER							
C	1	0	0	0	0	0	R/W	0										

							MC6	8851							
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	0	0	0	0	0	0		EFI	FECTIVE	ADDRE	ESS EGISTE	R
1	0	0		LEVEL		R/W	A	REGIST	ER			F	с		

MOVE16

					POS	TINCR	EMEN	T SOU	RCE A	ND DE	STINA	TION				
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	1 1 1 1 0 1 1 0 0 0 1 0 0 REGISTER AX															
	1	RE	GISTER	Ay	0	0	0	0	0	0	0	0	0	0	0	0
т	BLU	, TBL	UN													

					TABL	E LOO	KUP A	ND INT	ERPO	LATE					
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	1	0	0	0	0	0			FECTIVE	ADDRE		
·									0		MODE		R	EGISTE	R
0	RE	GISTER	Dx	0	R	0	1	SIZE	0	0	0	0	0	0	0

TBLS, TBLSN

					TABL	E LOO	KUP A	ND IN	TERPO	LATE					
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	1	0	0	0	0	0		EFI MODE	FECTIVE		ESS REGISTE	R
0	RE	GISTER	Dx	1	R	0	1	SI	ZE	0	0	0	0	0	0
TBLU	J, TBL	UN													

						DA	TA REG	GISTEI	R INTE	RPOL/	ATE .					
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1 1 1 1 1 0 0 0 0 0 0 0 0 REGISTER Dym													Dym			
	0	REGISTER Dx			0	R	0	0	SI	ZE	0	0	0	RE	GISTER	Dyn

TBLS, TBLSN

DATA REGISTER INTERPOLATE 42 40

					DA	IA REG	312 I EI		RPOL	AIE						
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	
1 1 1 1 1 0 0 0 0 0 0 0 0 REGISTER Dym																
1 1 1 1 0 REGISTER Dym 0 REGISTER Dx 1 R 0 0 SIZE 0 0 0 REGISTER Dym																
LPST	ΌΡ															

1

FMOVECR

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COF	PROCES	SOR	0	0	0	0	0	0	0	0	0
0	1	0	1	1	1		STINAT					ROM OFFSET			

FINT

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COF	ROCES	SOR	0	0	0		EFI MODE	FECTIVE		ESS EGISTE	R
0	R/M	0		SOURCE			STINATI		0	0	0	0	0	0	1

FSINH

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COF	ROCES	SOR	0	0	0			FECTIVE	ADDRE		
					ID		0	0	0		MODE		R	EGISTE	R
Ō	R/M	0		SOURCE DES		STINATI		0	0	0	0	0	1	0	
0	TC/W	0	s	PECIFIE	R	R	EGISTE	R	0	0		0			

FINTRZ

	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
ſ	1	1	1	1	COP	COPROCESSOR		0	0	0		EFI	FECTIV	E ADDRE	SS	
		- ' I		l '		ID		۲ I	0			MODE		F F	EGISTE	R
	0	R/M	0		SOURCE			STINAT		0	0	0	0	0	1	1

8-28

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

8-29

REGISTER

Instruction Format Summary

FLOGNP1

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COP	ROCES	SOR	0	0	0		EFI MODE	FECTIVE		ESS EGISTE	R
0	R/M	0		SOURCE			STINATI		0	0	0	0	1	1	0

FETOXM1

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COF	COPROCESSOR ID		0	0	0		EFI MODE	FECTIVE	ADDRE	ESS EGISTE	R
0	R/M	0		SOURCE			STINATI EGISTE		0	0	0	1	0	0	0

FTANH

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COP	ROCES	SOR	0	0	0		EFI MODE	FECTIVE		ESS EGISTE	R
0	R/M	0		SOURCE			STINAT		0	0	0	1	0	0	1

FATAN

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COF	COPROCESSOR ID		0	0	0		EFF MODE	ECTIVE	ADDRE	ESS EGISTE	R
0	R/M	0		SOURCE			STINATI		Ō	0	0	1	0	1	0

FASIN

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COP	ROCES	SOR	0	0	0		EFI MODE	FECTIVE		ESS EGISTE	R
0	R/M	0		SOURCE			STINATI		0	0	0	1	1	0	0

														EGISTE	
0	R/M	0		SOURCE			STINATI		0	0	0	1	1	0	1
SIN															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COP	ROCES: ID	SOR	0	0	0		EF MODE	FECTIVE		ESS REGISTE	R
0	R/M	0		SOURCE			STINATI		0	0	0	1	1	1	0
TAN	1														
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COP	ROCES: ID	SOR	0	0	0		EF MODE	FECTIVE		ESS REGISTE	R
0	R/M	0		SOURCE			STINATI		0	0	0	1	1	1	1
ЕТС)X														
15	14	13		11		9	8					-	-		
		13	12	11	10	9	0	7	6	5	4	3	2	1	0
1	1	13	12		10 ROCESS ID		0	7	6 0	5		3 FECTIVE	ADDRI		
1 0	1 R/M		1		ROCES	SOR		0 ON		5	EF		ADDRI	ESS	R
0		1	1	COP	ROCES	SOR	0 STINATI	0 ON	0		EF MODE	FECTIVE	ADDRI F	ESS REGISTE	R
0	R/M	1	1	COP	ROCES	SOR	0 STINATI	0 ON	0		EF MODE	FECTIVE	ADDRI F	ESS REGISTE	R 0
0 TW	R/M OTOX	1	1 S	COP SOURCE PECIFIE	ROCESS ID R	DE R 9	0 STINATI EGISTE	0 ON R	0	0	EF MODE 1	0	ADDRI 0 2 ADDRI	ESS REGISTE 0	0

1	1	1	1	COPROCES ID	SOR	0	0	0		EF MODE	FECTIVE	E ADDRE	ESS EGISTE	R
0	R/M	0		SOURCE PECIFIER		STINATI		0	0	1	0	0	0	1
FTEN	тох													

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COF	ROCES	SOR	0	0	0		EF MODE	FECTIVE		ESS EGISTE	R
0	R/M	0		SOURCE			STINAT		0	0	1	0	0	1	0

Instruction Format Summary 4 3 2 EFFECTIVE ADDRESS MODE REGI COPROCESSOR 0 0 0 1 SOURCE SPECIF!" DESTINATION REGISTER 0 0 0

FSIN 15

FATANH 15 14 13

1 1

FLOGN

15	14	13	12	11 10		8	7	6	5	4			1	0
1	1	1	1	COPROCE	SSOR	0	0	0		EFI	ECTIVE		ESS REGISTE	R
0	R/M	0		SOURCE		I STINAT REGISTE		0	0	1	0	1	0	0
LOC	G10				-									
15	14	13	12	11 10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COPROCE	SSOR	0	0	0		EFI MODE	ECTIVE		ESS REGISTE	R
0	R/M	0		SOURCE		I STINAT REGISTE		0	0	1	0	1	0	1
LOC	32													
15	14	13	12	11 10	9	8	7	6	5		3		1	0
1	1	1	1	COPROCE	SSOR	0	0	0		EFI MODE	ECTIVE		ESS REGISTE	R
0	R/M	0		SOURCE		STINAT		0	0	1	0	1	1	0
cos			s	PECIFIER	F	REGISTE	R				-			
-		13	12	11 10	9	8	7	6	5	4	3		1	0
cos	SH				9			6	5		3 ECTIVE	ADDR		
CO:	5H	13	12	11 10 COPROCE	9 SSOR	8	7 0 ION		5	EFF		ADDR	ESS	
15 1	14 14 R/M	13	12	11 10 COPROCE ID SOURCE	9 SSOR	8 0 STINAT	7 0 ION	0		EFF MODE	ECTIVE	ADDR	ESS REGISTE	R
15 1	14 14 R/M	13	12	11 10 COPROCE ID SOURCE	9 SSOR DE F	8 0 STINAT	7 0 ION	0		EFI MODE 1	1 3	ADDRI F 0	ESS REGISTE 0	R
15 1 0 ACC	14 1 R/M DS	13 1 0	12 1 S	11 10 COPROCE ID SOURCE PECIFIER	9 SSOR DE F	8 0 ESTINAT REGISTE	7 0 ION ER	0	0	EFI MODE 1	1	ADDRI 0 2 ADDRI	ESS REGISTE 0	R 1
15 1 0 ACC	SH 14 1 R/M DS	13 1 0	12 1 5 12	11 10 COPROCE ID SOURCE PECIFIER 11 10 COPROCE	9 SSOR DE F 9 SSOR DE	8 0 STINAT REGISTE	7 ION ER 7 ION	0	0	EFI MODE 1 4 EFI	1 3	ADDRI 0 2 ADDRI		R 1
15 1 0 ACC 15 1	SH 14 1 R/M DS 14 1 R/M	13 1 0 13 1	12 1 5 12	11 10 COPROCE ID SOURCE PECIFIER 11 10 COPROCE ID SOURCE	9 SSOR DE F 9 SSOR DE	8 O STINAT REGISTE 8 0 STINAT	7 ION ER 7 ION	0 0 6 0	0	EFF MODE 1 4 EFF MODE	1 3 FECTIVE	ADDRI 0 2 ADDRI F	ESS REGISTE 0 1 ESS REGISTE	R 1 0 R
15 1 0 ACC 15 1 0	SH 14 1 R/M DS 14 1 R/M	13 1 0 13 1	12 1 5 12	11 10 COPROCE ID SOURCE PECIFIER 11 10 COPROCE ID SOURCE	9 SSOR DE F SSOR DE F	8 O STINAT REGISTE 8 0 STINAT	7 ION ER 7 ION	0 0 6 0	0	EFI MODE 1 4 EFI MODE 1	1 3 FECTIVE	ADDR F 0 ADDR ADDR F 1	ESS REGISTE 0 1 ESS REGISTE 0	R 1 0
15 1 0 ACC 15 1 0 COS	SH 14 1 R/M DS 14 1 R/M S	13 1 0 13 1 0	12 1 12 12 1	11 10 COPROCE JD SOURCE PECIFIER 11 10 COPROCE JD SOURCE PECIFIER	9 SSOR 9 SSOR 9 SSOR 9	8 0 ESTINAT REGISTE 8 0 STINAT REGISTE	7 0 ION ER 7 0 ION ER	0 0 6 0	0 5 0	EFI MODE 1 4 EFI MODE 1	3 FECTIVE	ADDRI P 0 2 ADDRI F 1 2 ADDRI 2 ADDRI	ESS REGISTE 0 1 ESS REGISTE 0	R 1

FGETEXP

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COF	COPROCESSOR ID		0	0	0		EFI MODE	FECTIVE	ADDRE	ESS EGISTE	R
0	R/M	0		SOURCE			STINAT		0	0	1	1	1	1	0
									-		-		-		

FGETMAN

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COPROCESSOR ID		0	0	0		EFI MODE	FECTIVE	ADDRE	ESS EGISTE		
											NODE			LOIDIE	IX.
0	R/M	0		SOURCE			STINATI EGISTE		0	0	1	1	1	1	1

FMOD

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COF	PROCES	SOR	0	0	0		EF MODE	FECTIVE		ESS LEGISTE	R
0	R/M	0		SOURCI			STINAT		0	1	0	0	0	0	1

FSGLDIV

1 1 1 COPROCESSOR 0 0 0 EFFECTIVE ADDRESS 0 R/M 0 SOURCE DESTINATION 0 1 0 1 0 1 0 1 <th>15</th> <th>14</th> <th>13</th> <th>12</th> <th>11</th> <th>10</th> <th>9</th> <th>8</th> <th>7</th> <th>6</th> <th>5</th> <th>4</th> <th>3</th> <th>2</th> <th>1</th> <th>0</th>	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	1	1	1	1	COF		SOR	0	0	0			FECTIVE			R
SPECIFIER REGISTER	0	R/M	0		SOURCE			STINATI EGISTE		0	1	0	0	1	0	0

FREM

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COF	PROCES	SOR	0	0	0		EFI MODE	FECTIVE		ESS EGISTE	R
0	R/M	0		SOURCE			STINAT		0	1	0	0	1	0	1

FSCALE

	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
ĺ	1	1	1	1	COF	ROCES	SOR	0	0	0		EF MODE	FECTIVE		ESS EGISTE	R
	0	R/M	0		SOURCE			STINAT		0	1	0	0	1	1	0

8-32

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL MOTOROLA MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

8-33

Instruction Format Summary

FSGLMUL

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COF	ROCES	SOR	0	0	0		EFI MODE	ECTIVE	ADDRE	ESS EGISTE	R
0	R/M	0		SOURCE			STINATI		0	1	0	0	1	1	1

FSINCOS

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COF	ROCES	SOR	0	0	0		EF MODE	FECTIVE		ESS REGISTE	R
0	R/M	0		SOURCE			STINATI		0	1	1	0		STINATI GISTER,	

FCMP

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	Ō
1	1	1	1	COP	ROCES	SOR	0	0	0		EFI MODE	FECTIVE		ESS REGISTE	R
0	R/M	0		SOURCE			STINATI		0	1	1	1	0	0	0

FTST

15		14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1		1	1	1	COP	ROCES ID	SOR	0	0	0		EFI MODE	ECTIVE	ADDRE R	SS EGISTE	R
0	R	R/M	0		SOURCE			STINATI		0	1	1	1	0	1	0

FABS

	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
ſ	1	1	1	1	COF	ROCES	SOR	0	0	0		EFI MODE	FECTIVI		ESS REGISTE	R
	0	R/M	0		SOURCE			STINAT				(OPMOD	E		

FADD

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	Ō
1	1	1	1	COP	ROCES	SOR	0	0	0		EFI MODE	ECTIVE	E ADDRI	ESS REGISTE	R
0	R/M	0		SOURCE			STINATI				c	OPMOD	E		

Instruction Format Summary

FDIV 1

15	14	13	12	11 10 9 COPROCESSOR			8	7	6	5	4	3	2	1	0
1	1	1	1	COPROCESSOR ID			0	0	0		EF MODE	FECTIV	E ADDRI	ESS EGISTE	R
0	R/M	0		SOURCE DE			STINATI				(OPMOD	E		

						MODE	REDIDIER
0	R/M	0	SOURCE PECIFIER	STINATI		OPMODE	1
FMO\	/E			 	 		

			Di	ATA RE	GIST	=R, EFI	-FCUV	/E ADL	DRESS	10 R	EGISTE	=R			
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COF	ROCES	SOR	0	0	0		EFI MODE	FECTIVE	ADDRE	ESS EGISTE	R
0	R/M	0		SOURCE			STINATI				(OPMODI	E		

FMUL

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COF	ROCES	SOR	0	0	0		EF MODE	FECTIV	E ADDRE	ESS EGISTE	R
0	R/M	0		SOURCE			STINAT				(OPMOD	E		

FNEG

	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
ſ	1	1	1	1	COF	PROCES	SOR	0	0	0		EF	FECTIV	E ADDRE	SS	
	· ·					COPROCESSOR ID			0	0		MODE		R	EGISTE	R
	0	R/M	0		SOURCI			STINAT				(OPMOD	E		

FSQRT

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COF	ROCES	SOR	0	0	0			FECTIVE	ADDRE		
					ID						MODE		R	EGISTE	R
0	R/M	0		SOURCE			STINATI				(OPMOD	E		

FSUB

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COF	PROCES	SOR	0	0	0		EFI MODE	FECTIVE	ADDRE	ESS EGISTE	R
0	R/M	0		SOURCI			STINAT				(OPMOD	E		

FMOVE

	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	0	0	1	0	0	0		EFI MODE	FECTIVE		ESS REGISTE	R
0	1	1		SOURCE			STINAT					-FACTO REQUIR			
NO	/E														
					SY	STEM	CONT	ROL R	EGIST	ER					
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COP	ROCES	SOR	0	0	0			FECTIVE			
					ID				, ,		MODE		F	EGISTE	R
1	0	dr		SELECT		0	0	0	0	0	0	0	0	0	0
NO	/EM														
						CON	TROL I	REGIS	TERS						
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COP	ROCES ID	SOR	0	0	0		EFI MODE	FECTIVE		ESS REGISTE	R
1	0	dr		EGISTE		0	0	0	0	0	0	0	0	0	0

						DA	TARE	GISTE	RS						
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
4	4		4	COF	ROCES	SOR	0	0	0		EFI	FECTIVI	e addre	SS	
			· ·		ID						MODE		R	EGISTE	R
1	1	dr	MC	DE	0	0	0				REGIST	ER LIST	r i		

cpGEN

	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
[1	1	1	1	COP	ROCES	SOR	0	0	0		EFF	FECTIVE	ADDRE	SS	
	•	•	•			ID		Ŭ	Ŭ	0		MODE		R	EGISTE	R
[CC	OPROCE	SSOR I	D-DEPE	NDENT	СОММА	ND WO	RD				
[OPT	ONAL E	FFECTIV	/E ADDF	RESS OF	R COPR	OCESSO	DR ID-DE	FINED	EXTENS	SION WC	RDS		

FScc

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COF	ROCES	ROCESSOR 0 0 1 EFFECTI							E ADDRE	SS	
	· ·		· ·		ID		l °	0			MODE		R	EGISTE	R
0	0 0		0	0	0	0	0	0	0	CON	DITIONA	L PRED	ICATE		
cpSc	с														

15

	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Γ	1	1	1	1	COF	11 10 9 COPROCESSOR ID			0	1		EFI MODE	FECTIV	E ADDRI	ESS REGISTE	R
	0	0	0	0	0	0	0	0	0	0		COPRO	CESSO	R ID CO	NDITION	
			OPT	IONAL E	FFECTI	VE ADDI	RESS OF	R COPR	OCESSO	DR ID-DI	FINED	EXTENS	ION WO	ORDS		

FBcc

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COF	ROCES	SOR	0	1	SIZE	c	ONDITIO	ONAL PF	REDICAT	E	
		1	6-BIT DI	SPLACE	MENT C	R MOS	T SIGNIF	ICANT	VORD O	F 32-BI	DISPL/	CEMEN	п		
			LE	AST SIG	SNIFICA	NT WOR	RD OF 32	BIT DIS	PLACEN	IENT (II	- NEEDE	D)			

срВсс

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COP	ROCES	SOR	0	1	SIZE		COPRO	CESSOF		DITION	
				OPTION	VAL COF	ROCES	SOR ID	DEFINE	D EXTER	NSION 1	NORDS				
							WOR	D OR							
						LONG-	WORD D	DISPLAC	EMENT						

cpSAVE

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COF	PROCES	SOR	1	0	0		EFI MODE	FECTIV	E ADDRE	ESS EGISTE	R
FSAV	'E														
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COF	ROCES	SOR	1	0	0			FECTIV	E ADDRE		
l .	l .	· ·	l .		ID		l .	Ŭ	ľ		MODE		R	EGISTE	R

8	-3	6

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

8-37

Instruction Format Summary

cpRESTORE

	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	1	1	1	1	COP	ROCES	SOR	1	0	1		EFI MODE	ECTIVE	E ADDRI	ESS REGISTE	R
1	FRES	TORI	E													
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	1	1	1	1	COP	ROCES	SOR	1	0	1		EFI MODE	ECTIVE	ADDRI F	ESS REGISTE	R

1	1	1	1	00	ROCES	SOR	1	0	1			LOUVE				
					ID			-			MODE		R	REGISTE	R	
FDBo						_	_	_	_	_		_	_		_	
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	
				COP	POCES	SUB								COLINIT		

1	1	1	1	COP	ROCES	SOR	0	0	1	0	0	1	COUNT REGISTER
0	0	0	0	0	0	0	0	0	0		CON	DITIONA	L PREDICATE
						16-	BIT DISF	LACEM	ENT				

cpDBcc



FTRAPcc

	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	1	1	1	1	COP	COPROCESSOR ID			0	1	1	1	1		MODE	
ſ	0	0	0	0	0				0	0		CONE	DITIONA	L PRED	ICATE	
ſ			16	S-BIT OP	ERAND	OR MOS	ST SIGN	FICANT	WORD	OF 32-B	IT OPER	RAND (IF	NEEDE	D)		
Ī					LEAST	SIGNIFI	CANT W	ORD OF	32-BIT	OPERA	ND (IF N	EEDED)				

Instruction Format Summary

cpTR	APcc														
15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0															
15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0 1 1 1 1 COPMCCESSOR 0 0 1 1 1 1 OPMODE															
0	0	0	0	0	0	0	0	0	0		COPRO	CESSO	R ID COI	DITION	
				OPTIO	NAL CO	PROCES	SOR ID	-DEFINE	D EXTE	NSION V	NORDS				
						(OPTION/	AL WOR	D						
						OR LC	DNG-WC	RD OPE	RAND						

FNOP

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	1	1	COF	ROCES	SOR	0	1	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

APPENDIX A PROCESSOR INSTRUCTION SUMMARY

This appendix provides a quick reference of the M68000 family instructions. The organization of this section is by processors and their addressing modes. All references to the MC68000, MC68020, and MC68020, and MC68EC030. All references to the MC68LC040 include the MC68LC040 and MC68EC040. This referencing applies throughout this section unless otherwise specified. Table A-1 lists the M68000 family instructions by mnemonic and indicates which processors they apply to.

Table A-1. M68000 Family Instruction Set And Processor Cross-Reference

Mnemonic	68000	68008	68010	68020	68030	68040	68881/ 68882	68851	CPU32
ABCD	Х	Х	Х	Х	Х	Х			Х
ADD	Х	Х	Х	Х	Х	Х			Х
ADDA	X	Х	Х	Х	Х	Х			Х
ADDI	X	Х	Х	Х	Х	Х			Х
ADDQ	Х	Х	Х	Х	Х	Х			Х
ADDX	Х	Х	Х	Х	Х	Х			Х
AND	X	Х	Х	Х	Х	Х			Х
ANDI	Х	Х	Х	Х	Х	Х			Х
ANDI to CCR	Х	Х	Х	Х	Х	Х			Х
ANDI to SR ¹	х	х	х	х	х	х			Х
ASL, ASR	X	Х	Х	Х	Х	Х			Х
Bcc	Х	Х	Х	Х	Х	Х			Х
BCHG	Х	Х	Х	Х	Х	Х			Х
BCLR	Х	Х	Х	Х	Х	Х			Х
BFCHG				Х	х	х			
BFCLR				Х	Х	Х			
BFEXTS				Х	Х	х			
BFEXTU				Х	х	х			
BFFFO				Х	х	х			

8-40

M68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

MC68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

A-1

Processor Instruction Summary

Processor Instruction Summary

Table A-1. M68000 Family Instruction Set And Processor Cross-Reference (Continued)

68000	68008	68010	68020	68030	68040	68881/ 68882	68851	CPU32
			X	X	X			
			Х	Х	X			
			Х	Х	Х			
								X
		Х	Х	Х	Х			X
Х	Х	Х	Х	Х	Х			X
Х	Х	Х	Х	Х	Х			X
Х	Х	Х	Х	X	X			X
Х	Х	Х	Х	Х	Х			X
			Х					
			Х	X	X			
Х	Х	Х	Х	X	X			X
			Х	Х	Х			X
					Х			
Х	х	х	X	X	X			X
Х	х	X	X	X	X			x
Х	Х	Х	Х	X	X			X
Х	Х	Х	Х	X	X			X
Х	Х	Х	Х	Х	Х			X
			Х	X	X			X
			Х	X				
			Х	Х				
			Х	X				
			Х	Х				
			X	X				
			x	x				
			X	X				
1					x			
X	x	x	X	x	x			x
X	X	X	X	X	X			X
	- ···	- ···	X	X	X	-		X
х	x	x	X	X	X	-		X
			X	X	X			X
	x x x x x x x x x x x x x x x x x x x	x x x x	x x x x	X X X X	X X X X X X	X X X X X - X X X X - X X X X - X X X X - X X X X - X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X	68000 68008 68010 68020 68030 68040 68882 I X X X X X I X X X X X I X X X X X I X X X X X I X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X X	68000 68008 68010 68020 68030 68040 58882 68851 × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × × ×

Table A-1. M68000 Family Instruction Set And Processor Cross-Reference (Continued)

Mnemonic	68000	68008	68010	68020	68030	68040	68881/ 68882	68851	CPU32
EOR	Х	Х	Х	Х	х	х			х
EORI	Х	Х	Х	Х	Х	Х			Х
EORI to CCR	X	Х	Х	Х	Х	Х			Х
EORI to SR ¹	X	Х	Х	Х	Х	Х			Х
EXG	X	Х	Х	Х	Х	Х			Х
EXT	Х	Х	Х	Х	Х	Х			Х
EXTB				Х	Х	Х			Х
FABS						X ²	Х		
FSABS,						X ²			
FDABS						X2			
FACOS						2,3	Х		
FADD						X ²	Х		
FSADD,									
FDADD						X ²			
FASIN						2,3	Х		
FATAN						2,3	Х		
FATANH						2,3	Х		
FBcc						X ²	Х		
FCMP						X ²	х		
FCOS						2,3	х		
FCOSH						2,3	х		
FDBcc						X ²	Х		
FDIV						X ²	х		
FSDIV, FDDIV						X ²			
FETOX						2,3	х		
FETOXM1	1	ł	<u> </u>	+		2,3	x		
FGETEXP						2,3	X		
FGETMAN						2,3	X		
FINT				-		2,3	х		
FINTRZ						2,3	х		
FLOG10						2,3	Х		
FLOG2						2,3	Х		
FLOGN						2,3	Х		

Table A-1. M68000 Family Instruction Set And Processor Cross-Reference (Continued)

Mnemonic	68000	68008	68010	68020	68030	68040	68881/ 68882	68851	CPU32
FLOGNP1	00000		000.0	00020		2,3	00002		0.002
FMOD						2,3	X		
FMOVE						X ²	X		
FSMOVE,									
FDMOVE						X2			
FMOVECR						2,3	X		
FMOVEM						X ²	X		
FMUL						X ²	X		
FSMUL,									
FDMUL						X2			
FNEG						X2	X		
FSNEG,									
FDNEG						X2			
FNOP						X2	X		
FREM						2,3	X		
FRESTORE ¹						X ²	X		
FSAVE*						X ²	X		
FSCALE						2,3	X		
FScc						X ²	X		
FSGLDIV						2,3	X		
FSGLMUL						2,3	Х		
FSIN						2,3	Х		
FSINCOS						2,3	Х		
FSINH						2,3	Х		
FSQRT						X ²	Х		
FSSQRT,						X ²			
FDSQRT						X-			
FSUB						X ²	Х		
FSSUB,						X ²			
FDSUB						×-			
FTAN						2,3	Х		
FTANH						2,3	Х		
FTENTOX						2,3	Х		
FTRAPcc						X ²	Х		
FTST						X ²	Х		

Table A-1. M68000 Family Instruction Set And Processor Cross-Reference (Continued)

Mnemonic	68000	68008	68010	68020	68030	68040	68881/ 68882	68851	CPU32
FTWOTOX						2,3	Х		
ILLEGAL	Х	Х	Х	Х	Х	Х			Х
JMP	Х	Х	Х	Х	Х	Х			Х
JSR	Х	Х	Х	Х	Х	Х			Х
LEA	Х	Х	Х	Х	Х	Х			Х
LINK	Х	Х	Х	Х	Х	Х			Х
LPSTOP									Х
LSL,LSR	х	Х	Х	х	х	х			Х
MOVE	Х	Х	Х	Х	Х	Х			Х
MOVEA	Х	Х	Х	Х	Х	Х			Х
MOVE from CCR			Х	Х	Х	Х			Х
MOVE to CCR	Х	Х	Х	Х	Х	Х			Х
MOVE from SR ¹	4	4	х	х	х	х			х
MOVE to SR ¹	х	х	х	х	х	х			х
MOVE USP1	Х	Х	Х	Х	Х	Х			Х
MOVE16						Х			
MOVEC ¹			Х	Х	Х	Х			Х
MOVEM	Х	X	Х	х	х	х			х
MOVEP	Х	Х	Х	Х	Х	Х			Х
MOVEQ	Х	X	Х	Х	Х	Х			Х
MOVES ¹			Х	Х	Х	Х			Х
MULS	х	X	х	х	х	х			х
MULU	Х	х	х	х	х	х			Х
NBCD	х	х	Х	х	х	х			х
NEG	х	х	х	х	х	х			х
NEGX	Х	X	Х	х	Х	Х	1		Х
NOP	Х	х	х	х	х	х			X
NOT	Х	х	Х	х	х	х			х
OR	Х	X	х	Х	х	х			X

A-4

MC68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

MC68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

A-5

Processor Instruction Summary

Processor Instruction Summary

Table A-1. M68000 Family Instruction Set And Processor Cross-Reference (Continued)

Mnemonic	68000	68008	68010	68020	68030	68040	68881/ 68882	68851	CPU32
ORI	Х	Х	Х	Х	Х	Х			Х
ORI to CCR	Х	Х	Х	Х	Х	Х			Х
ORI to SR ¹	Х	Х	Х	Х	Х	Х			Х
PACK				Х	Х	Х			
PBcc ¹								X	
PDBcc ¹								X	
PEA	Х	Х	Х	Х	Х	Х			Х
PFLUSH ¹					X ⁵	Х		Х	
PFLUSHA ¹					X ⁵			Х	
PFLUSHR ¹								X	
PFLUSHS ¹								X	
PLOAD ¹					X ⁵			x	
PMOVE ¹					X			x	
PRESTORE ¹								x	
PSAVE ¹								X	
PScc ¹								x	
PTEST ¹					x	x		x	
PTRAPcc ¹								x	
PVALID								x	
RESET ¹	х	х	X	X	X	X			X
ROL,ROR	Х	х	X	X	X	X			X
ROXL,	x	x	x	x	x	x			x
ROXR	^	^	^	^	^	^			^
RTD			Х	Х	X	Х			Х
RTE ¹	Х	Х	Х	Х	Х	Х			Х
RTM				Х					
RTR	Х	Х	Х	Х	Х	Х			Х
RTS	Х	Х	Х	Х	Х	Х			Х
SBCD	Х	Х	Х	Х	Х	Х			Х
Scc	Х	Х	х	Х	Х	Х			Х
STOP1	х	х	Х	Х	х	Х			Х
SUB	Х	Х	Х	Х	Х	Х			Х
SUBA	Х	Х	х	Х	Х	Х			Х
SUBI	X	X	X	X	X	X			X
SUBQ	X	X	X	X	X	X			X
SUBX	Х	Х	Х	Х	Х	Х			Х

Table A-1. M68000 Family Instruction Set And Processor Cross-Reference (Concluded)

Mnemonic	68000	68008	68010	68020	68030	68040	68881/ 68882	68851	CPU32
SWAP	Х	Х	Х	Х	Х	Х			Х
TAS	Х	Х	Х	Х	Х	Х			Х
TBLS,									x
TBLSN									^
TBLU,									
TBLUN									x
TRAP	Х	Х	Х	Х	Х	Х			Х
TRAPcc				Х	Х	Х			Х
TRAPV	Х	Х	Х	Х	Х	Х			Х
TST	Х	Х	Х	Х	Х	Х			Х
UNLK	Х	Х	Х	Х	Х	Х			Х
UNPK				Х	Х	Х			
NOTES: 1. Privileged (2. Not applica 3. These instr 4. This instruc 5. Not applica	ble to MC68 uctions are tion is not p	BEC040 an software su privileged fo	d MC68LC upported or	n the MC68					

E

Table A-2 lists the M68000 family instructions by mnemonics, followed by the descriptive name.

Table A-2. M68000 Family Instruction Set

Mnemonic	Progrintian
ABCD	Description Add Decimal with Extend
ADD	Add
ADDA	Address
ADDI	Add Immediate
ADDQ	Add Quick
ADDX	Add with Extend
AND	Logical AND
ANDI	Logical AND Immediate
ANDI to CCR	AND Immediate to Condition Code Register
ANDI to SR	AND Immediate to Status Register
ASL, ASR	Arithmetic Shift Left and Right
Bcc	Branch Conditionally
BCHG	Test Bit and Change
BCLR	Test Bit and Clear
BFCHG	Test Bit Field and Change
BFCLR	Test Bit Field and Clear
BFEXTS	Signed Bit Field Extract
BFEXTU	Unsigned Bit Field Extract
BFFFO	Bit Field Find First One
BFINS	Bit Field Insert
BFSET	Test Bit Field and Set
BFTST	Test Bit Field
BGND	Enter Background Mode
BKPT	Breakpoint
BRA	Branch
BSET	Test Bit and Set
BSR	Branch to Subroutine
BTST	Test Bit
CALLM	CALL Module
CAS	Compare and Swap Operands
CAS2	Compare and Swap Dual Operands
СНК	Check Register Against Bound
CHK2	Check Register Against Upper and Lower Bounds
CINV	Invalidate Cache Entries
CLR	Clear
CMP	Compare
CMPA	Compare Address
CMPI	Compare Immediate
СМРМ	Compare Memory to Memory
CMP2	Compare Register Against Upper and Lower Bounds
cpBcc	Branch on Coprocessor Condition
cpDBcc	Test Coprocessor Condition Decrement and Branch
cpGEN	Coprocessor General Function
cpRESTORE	Coprocessor Restore Function

Table A-2. M68000 Family Instruction Set (Continued)

Mnemonic	Description
cpSAVE	Coprocessor Save Function
cpScc	Set on Coprocessor Condition
cpTRAPcc	Trap on Coprocessor Condition
CPUSH	Push then Invalidate Cache Entries
DBcc	Test Condition, Decrement and Branch
DIVS, DIVSL	Signed Divide
DIVU, DIVUL	Unsigned Divide
EOR	Logical Exclusive-OR
EORI	Logical Exclusive-OR Immediate
EORI to CCR	Exclusive-OR Immediate to Condition Code Register
EORI to SR	Exclusive-OR Immediate to Status Register
EXG	Exchange Registers
EXT. EXTB	Sian Extend
FABS	Floating-Point Absolute Value
FSFABS, FDFABS	Floating-Point Absolute Value (Single/Double Precision)
FACOS	Floating-Point Arc Cosine
FADD	Floating-Point Add
FSADD, FDADD	Floating-Point Add (Single/Double Precision)
FASIN	Floating-Point Arc Sine
FATAN	Floating-Point Arc Tangent
FATANH	Floating-Point Hyperbolic Arc Tangent
FBcc	Floating-Point Branch
FCMP	Floating-Point Compare
FCOS	Floating-Point Cosine
FCOSH	Floating-Point Hyperbolic Cosine
FDBcc	Floating-Point Decrement and Branch
FDIV	Floating-Point Divide
FSDIV. FDDIV	Floating-Point Divide (Single/Double Precision)
FETOX	Floating-Point ex
FETOXM1	Floating-Point ex - 1
FGETEXP	Floating-Point Get Exponent
FGETMAN	Floating-Point Get Mantissa
FINT	Floating-Point Integer Part
FINTR7	Floating-Point Integer Part, Round-to-Zero
FLOG10	Floating-Point Integer Part, Round-to-zero
FLOG10 FLOG2	Floating-Point Log2
FLOG2	Floating-Point Loge
FLOGN FLOGNP1	
FMOD	Floating-Point Loge (x + 1) Floating-Point Modulo Remainder
FMOD	Move Floating-Point Register
FSMOVE,FDMOVE FMOVECR	Move Floating-Point Register (Single/Double Precision)
	Move Constant ROM
FMOVEM	Move Multiple Floating-Point Registers
FMUL	Floating-Point Multiply
FSMUL,FDMUL	Floating-Point Multiply (Single/Double Precision)
FNEG	Floating-Point Negate
FSNEG,FDNEG	Floating-Point Negate (Single/Double Precision)
FNOP	Floating-Point No Operation

A-8

MOTOROLA MC68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MC68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

Processor Instruction Summary

Table A-2. M68000 Family Instruction Set (Continued)

Mnemonic	Description
FREM	IEEE Remainder
FRESTORE	Restore Floating-Point Internal State
FSAVE	Save Floating-Point Internal State
FSCALE	Floating-Point Scale Exponent
FScc	Floating-Point Set According to Condition
FSGLDIV	Single-Precision Divide
FSGLMUL	Single-Precision Multiply
FSIN	Sine
FSINCOS	Simultaneous Sine and Cosine
FSINH	Hyperbolic Sine
FSQRT	Floating-Point Square Root
FSSQRT,FDSQRT	Floating-Point Square Root (Single/Double Precision)
FSUB	Floating-Point Subtract
FSSUB,FDSUB	Floating-Point Subtract (Single/Double Precision)
FTAN	Tangent
FTANH	Hyperbolic Tangent
FTENTOX	Floating-Point 10x
FTRAPcc	Floating-Point Trap On Condition
FTST	Floating-Point Test
FTWOTOX	Floating-Point 2x
ILLEGAL	Take Illegal Instruction Trap
JMP	Jump
JSR	Jump to Subroutine
LEA	Load Effective Address
LINK	Link and Allocate
LPSTOP	Low-Power Stop
LSL, LSR	Logical Shift Left and Right
MOVE	Move
MOVEA	Move Address
MOVE from CCR	Move from Condition Code Register
MOVE from SR	Move from Status Register
MOVE to CCR	Move to Condition Code Register
MOVE to SR	Move to Status Register
MOVE USP	Move User Stack Pointer
MOVE16	16-Byte Block Move
MOVEC	Move Control Register
MOVEM	Move Multiple Registers
MOVEP	Move Peripheral
MOVEQ	Move Quick
MOVES	Move Alternate Address Space
MULS	Signed Multiply
MULU	Unsigned Multiply
NBCD	Negate Decimal with Extend
NEG	Negate
NEGX	Negate with Extend
NOP	No Operation
NOT	Logical Complement

Processor Instruction Summary

A-9

Table A-2. M68000 Family Instruction Set (Concluded)

Mnemonic	Description
OR	Logical Inclusive-OR
ORI	Logical Inclusive-OR Immediate
ORI to CCR	Inclusive-OR Immediate to Condition Code Register
ORI to SR	Inclusive-OR Immediate to Status Register
PACK	Pack BCD
PBcc	Branch on PMMU Condition
PDBcc	Test, Decrement, and Branch on PMMU Condition
PEA	Push Effective Address
PFLUSH	Flush Entry(ies) in the ATCs
PFLUSHA	Flush Entry(ies) in the ATCs
PFLUSHR	Flush Entry(ies) in the ATCs and RPT Entries
PFLUSHS	Flush Entry(ies) in the ATCs
PLOAD	Load an Entry into the ATC
PMOVE	Move PMMU Register
PRESTORE	PMMU Restore Function
PSAVE	PMMU Save Function
PScc	Set on PMMU Condition
PTEST	Test a Logical Address
PTRAPcc	Trap on PMMU Condition
PVALID	Validate a Pointer
RESET	Reset External Devices
ROL. ROR	Rotate Left and Right
ROXL, ROXR	Rotate with Extend Left and Right
RTD	Return and Deallocate
RTE	Return from Exception
RTM	Return from Module
RTR	Return and Restore
RTS	Return from Subroutine
SBCD	Subtract Decimal with Extend
Scc	Set Conditionally
STOP	Stop
SUB	Subtract
SUBA	Subtract Address
SUBI	Subtract Immediate
SUBQ	Subtract Quick
SUBX	Subtract with Extend
SWAP	Swap Register Words
TAS	Test Operand and Set
TBLS. TBLSN	Signed Table Lookup with Interpolate
TBLU, TBLUN	Unsigned Table Lookup with Interpolate
TRAP	Тгар
TRAPcc	Trap Conditionally
TRAPV	Trap on Overflow
TST	Test Operand
UNIK	Unlink
UNPK	Unpack BCD
	Onpack DOD

A.1 MC68000, MC68008, MC68010 PROCESSORS

The following paragraphs provide information on the MC68000, MC68008, and MC68010 instruction set and addressing modes.

A.1.1 M68000, MC68008, and MC68010 Instruction Set

Table A-3 lists the instructions used with the MC68000 and MC68008 processors, and Table A-4 lists the instructions used with MC68010.

Table A-3. MC68000 and MC68008 Instruction Set

	B 1.4
Mnemonic	Description
ABCD	Add Decimal with Extend
ADD	Add
ADDA	Add Address
ADDI	Add Immediate
ADDQ	Add Quick
ADDX	Add with Extend
AND	Logical AND
ANDI	Logical AND Immediate
ANDI to CCR	AND Immediate to Condition Code Register
ANDI to SR	AND Immediate to Status Register
ASL, ASR	Arithmetic Shift Left and Right
Bcc	Branch Conditionally
BCHG	Test Bit and Change
BCLR	Test Bit and Clear
BRA	Branch
BSET	Test Bit and Set
BSR	Branch to Subroutine
BTST	Test Bit
СНК	Check Register Against Bound
CLR	Clear
CMP	Compare
CMPA	Compare Address
CMPI	Compare Immediate
CMPM	Compare Memory to Memory
DBcc	Test Condition, Decrement, and Branch
DIVS	Signed Divide
DIVU	Unsigned Divide
EOR	Logical Exclusive-OR
EORI	Logical Exclusive-OR Immediate
EORI to CCR	Exclusive-OR Immediate to Condition Code Register
EORI to SR	Exclusive-OR Immediate to Status Register
EXG	Exchange Registers
EXT	Sign Extend
ILLEGAL	Take Illegal Instruction Trap
JMP	Jump
JSR	Jump to Subroutine

Table A-3. MC68000 and MC68008 Instruction Set

	(Continued)
Mnemonic	Description
LEA	Load Effective Address
LINK	Link and Allocate
LSL, LSR	Logical Shift Left and Right
MOVE	Move
MOVEA	Move Address
MOVE to CCR	Move to Condition Code Register
MOVE from SR	Move from Status Register
MOVE to SR	Move to Status Register
MOVE USP	Move User Stack Pointer
MOVEM	Move Multiple Registers
MOVEP	Move Peripheral
MOVEQ	Move Quick
MULS	Signed Multiply
MULU	Unsigned Multiply
NBCD	Negate Decimal with Extend
NEG	Negate
NEGX	Negate with Extend
NOP	No Operation
NOT	Logical Complement
OR	Logical Inclusive-OR
ORI	Logical Inclusive-OR Immediate
ORI to CCR	Inclusive-OR Immediate to Condition Code Register
ORI to SR	Inclusive-OR Immediate to Status Register
PEA	Push Effective Address
RESET	Reset External Devices
ROL. ROR	Rotate Left and Right
ROXL, ROXR	Rotate with Extend Left and Right
RTE	Return from Exception
RTR	Return and Restore
RTS	Return from Subroutine
SBCD	Subtract Decimal with Extend
Scc	Set Conditionally
STOP	Stop
SUB	Subtract
SUBA	Subtract Address
SUBI	Subtract Immediate
SUBQ	Subtract Quick
SUBX	Subtract with Extend
SWAP	Swap Register Words
TAS	Test Operand and Set
TRAP	Trap
TRAPV	Trap on Overflow
TST	Test Operand
UNLK	Unlink
UNER	

A-12

A-14

MC68000 FAMILY PROGRAMMER'S REFERENCE MANUAL MOTOROLA

MOTOROLA

MC68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

A-13

Processor Instruction Summary

	Table A-4. MC68010 Instruction Set
Mnemonic	Description
ABCD	Add Decimal with Extend
ADD	Add
ADDA	Add Address
ADDI	Add Immediate
ADDQ	Add Quick
ADDX	Add with Extend
AND	Logical AND
ANDI	Logical AND Immediate
ANDI to CCR	AND Immediate to Condition Code Register
ANDI to SR	AND Immediate to Status Register
ASL, ASR	Arithmetic Shift Left and Right
Bcc	Branch Conditionally
BCHG	Test Bit and Change
BCLR	Test Bit and Clear
BKPT	Breakpoint
BRA	Branch
BSET	Test Bit and Set
BSR	Branch to Subroutine
BTST	Test Bit
СНК	Check Register Against Bound
CLR	Clear
CMP	Compare
CMPA	Compare Address
CMPI	Compare Immediate
CMPM	Compare Memory to Memory
DBcc	Test Condition, Decrement and Branch
DIVS	Signed Divide
DIVU	Unsigned Divide
EOR	Logical Exclusive-OR
EORI	Logical Exclusive-OR Immediate
EORI to CCR	Exclusive-OR Immediate to Condition Code Register
EORI to SR	Exclusive-OR Immediate to Status Register
EXG	Exchange Registers
EXT	Sign Extend
ILLEGAL	Take Illegal Instruction Trap
JMP	Jump
JSR	Jump to Subroutine
L	

Processor Instruction Summary

Table A-4. MC68010 Instruction Set (Continued)

Mnemonic	Description
LEA	Load Effective Address
LINK	Link and Allocate
LSL, LSR	Logical Shift Left and Right
MOVE	Move
MOVEA	Move Address
MOVE from CCR	Move from Condition Code Register
MOVE from SR	Move from Status Register
MOVE to CCR	Move to Condition Code Register
MOVE to SR	Move to Status Register
MOVE USP	Move User Stack Pointer
MOVEC	Move Control Register
MOVEM	Move Multiple Registers
MOVEP	Move Peripheral
MOVEQ	Move Quick
MOVES	Move Address Space
MULS	Signed Multiply
MULU	Unsigned Multiply
NBCD	Negate Decimal with Extend
NEG	Negate
NEGX	Negate with Extend
NOP	No Operation
NOT	Logical Complement
OR	Logical Inclusive-OR
ORI	Logical Inclusive-OR Immediate
ORI to CCR	Inclusive-OR Immediate to Condition Code Register
ORI to SR	Inclusive-OR Immediate to Status Register
PFA	Push Effective Address
RESET	Reset External Devices
ROL. ROR	Rotate Left and Right
ROXL, ROXR	Rotate with Extend Left and Right
RTD	Return and Deallocate
RTE	Return from Exception
RTR	Return and Restore
RTS	Return from Subroutine
SBCD	Subtract Decimal with Extend
Scc	Set Conditionally
STOP	Stop
SUB	Subtract
SUBA	Subtract Address
SUBI	Subtract Immediate
SUBQ	Subtract Millediate
SUBX	Subtract with Extend
SUBA	Swap Register Words
TAS	Test Operand and Set
TRAP	Trap
TRAPV	Trap on Overflow
	Test Operand
UNLK	Unlink

A.1.2 MC68000, MC68008, and MC68010 Addressing Modes

The MC68000, MC68008, and MC68010 support 14 addressing modes as shown in Table A-5.

Table A-5. MC68000, MC68008, and MC68010 Data Addressing Modes

Mode	Generation
Register Direct Addressing Data Register Direct Address Register Direct	<ea> = Dn <ea> = An</ea></ea>
Absolute Data Addressing Absolute Short Absolute Long	<ea> = (Next Word) <ea> = (Next Two Words)</ea></ea>
Program Counter Relative Addressing Relative with Offset Relative with Index and Offset	<ea> = (PC) + d₁₆ <ea> = (PC) + d₈</ea></ea>
Register Indirect Addressing Register Indirect Postincerment Register Indirect Predecrement Register Indirect Register Indirect with Offset Indexed Register Indirect with Offset	$\begin{array}{l} <\!$
Immediate Data Addressing Immediate Quick Immediate	DATA = Next Word(s) Inherent Data
Implied Addressing Implied Register	<ea> = SR, USP, SSP, PC, VBI SFC, DFC</ea>

N = 1 for byte, 2 for word, and 4 for long word. If An is the stack pointer and the operand size is byte, N = 2 to keep the stack pointer on a word boundary.

A.2 MC68020 PROCESSORS

The following paragraphs provide information on the MC68020 instruction set and addressing modes.

A.2.1 MC68020 Instruction Set

Table A-6 lists the instructions used with the MC68020 processors.

Mnemonic	Description	
ABCD	Add Decimal with Extend	
ADD	Add	
ADDA	Add Address	
ADDI	Add Immediate	
ADDQ	Add Quick	
ADDX	Add with Extend	
AND	Logical AND	
ANDI	Logical AND Immediate	
ANDI to CCR	AND Immediate to Condition Code Register	
ANDI to SR	AND Immediate to Status Register	
ASL, ASR	Arithmetic Shift Left and Right	
Bcc	Branch Conditionally	
BCHG	Test Bit and Change	
BCLR	Test Bit and Clear	
BFCHG	Test Bit Field and Change	
BFCLR	Test Bit Field and Clear	
BFEXTS	Signed Bit Field Extract	
BFEXTU	Unsigned Bit Field Extract	
BFFFO	Bit Field Find First One	
BFINS	Bit Field Insert	
BFSET	Test Bit Field and Set	
BFTST	Test Bit Field	
ВКРТ	Breakpoint	
BRA	Branch	
BSET	Test Bit and Set	
BSR	Branch to Subroutine	
BTST	Test Bit	
CALLM	CALL Module	
CAS	Compare and Swap Operands	
CAS2	Compare and Swap Dual Operands	
СНК	Check Register Against Bound	
CHK2	Check Register Against Upper and Lower Bounds	
CLR	Clear	
CMP	Compare	
CMP2	Compare Register Against Upper and Lower Bounds	
CMPA	Compare Address	
CMPI	Compare Immediate	

A-16

MC68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

MC68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

A-17

Processor Instruction Summary

Table A-6. MC68020 Instruction Set Summary

(Continued)	
Mnemonic	Description
CMPM	Compare Memory to Memory
cpBcc	Branch to Coprocessor Condition
cpDBcc	Test Coprocessor Condition, Decrement and Branch
cpGEN	Coprocessor General Function
CPRESTORE	Coprocessor Restore Function
cpSAVE	Coprocessor Save Function
cpScc	Set on Coprocessor Condition
cpTRACPcc	Trap on Coprocessor Condition
DBcc	Test Condition, Decrement, and Branch
DIVS, DIVSL	Signed Divide
DIVU, DIVUL	Unsigned Divide
EOR	Logical Exclusive-OR
EORI	Logical Exclusive-OR Immediate
EORI to CCR	Exclusive-OR Immediate to Condition Code Register
EORI to SR	Exclusive-OR Immediate to Status Register
EXG	Exchange Registers
EXT, EXTB	Sign Extend
ILLEGAL	Take Illegal Instruction Trap
JMP	Jump
JSR	Jump to Subroutine
LEA	Load Effective Address
LINK	Link and Allocate
LSL, LSR	Logical Shift Left and Right
MOVE	Move
MOVEA	Move Address
MOVE from CCR	Move from Condition Code Register
MOVE from SR	Move from Status Register
MOVE to CCR	Move to Condition Code Register
MOVE to SR	Move to Status Register
MOVE USP	Move User Stack Pointer
MOVEC	Move Control Register
MOVEM	Move Multiple Registers
MOVEP	Move Peripheral
MOVEQ	Move Quick
MOVES	Move Alternate Address Space
MULS	Signed Multiply
MULU	Unsigned Multiply
NBCD	Negate Decimal with Extend
NEG	Negate
NEGX	Negate with Extend
NOP	No Operation
NOT	Logical Complement

Processor Instruction Summary

Table A-6. MC68020 Instruction Set Summary (Concluded)

Mnemonic	Description
OR	Logical Inclusive-OR
ORI	Logical Inclusive-OR Immediate
ORI to CCR	Inclusive-OR Immediate to Condition Code Register
ORI to SR	Inclusive-OR Immediate to Status Register
PACK	Pack BCD
PEA	Push Effective Address
RESET	Reset External Devices
ROL, ROR	Rotate Left and Right
ROXL, ROXR	Rotate with Extend Left and Right
RTD	Return and Deallocate
RTE	Return from Exception
RTM	Return from Module
RTR	Return and Restore
RTS	Return from Subroutine
SBCD	Subtract Decimal with Extend
Scc	Set Conditionally
STOP	Stop
SUB	Subtract
SUBA	Subtract Address
SUBI	Subtract Immediate
SUBQ	Subtract Quick
SUBX	Subtract with Extend
SWAP	Swap Register Words
TAS	Test Operand and Set
TRAP	Trap
TRAPcc	Trap Conditionally
TRAPV	Trap on Overflow
TST	Test Operand
UNLK	Unlink
UNPK	Unpack BCD

A.2.2 MC68020 Addressing Modes

The MC68020 supports 18 addressing modes as shown in Table A-7.

Table A-7. MC68020 Data Addressing Modes

Addressing Modes	Syntax
Register Direct Address Register Direct Address Register Direct	Dn An
Register Indirect Address Register Indirect Address Register Indirect with Postincrement Address Register Indirect with Displacement Address Register Indirect with Displacement	(An) (An)+ -(An) (d ₁₆ ,An)
Register Indirect with Index Address Register Indirect with Index (8-Bit Displacement) Address Register Indirect with Index (Base Displacement)	(d ₈ ,An,Xn) (bd,An,Xn)
Memory Indirect Memory Indirect Postindexed Memory Indirect Preindexed	([bd,An],Xn,od) ([bd,An,Xn],od)
Program Counter Indirect with Displacement	(d ₁₆ ,PC)
Program Counter Indirect with Index PC Indirect with Index (8-Bit Displacement) PC Indirect with Index (Base Displacement)	(d ₈ ,PC,Xn) (bd,PC,Xn)
Program Counter Memory Indirect PC Memory Indirect Postindexed PC Memory Indirect Preindexed	([bd,PC],Xn,od) ([bd,PC,Xn],od)
Absolute Absolute Short Absolute Long	(xxx).W (xxx).L
Immediate	# <data></data>

A.3 MC68030 PROCESSORS

The following paragraphs provide information on the MC68030 instruction set and addressing modes.

A.3.1 MC68030 Instruction Set

Table A-8 lists the instructions used with the MC68030 processors.

Mnemonic	Description
ABCD	Add Decimal with Extend
ADD	Add
ADDA	Add Address
ADDI	Add Immediate
ADDQ	Add Quick
ADDX	Add with Extend
AND	Logical AND
ANDI	Logical AND Immediate
ANDI to CCR	AND Immediate to Condition Code Register
ANDI to SR	AND Immediate to Status Register
ASL, ASR	Arithmetic Shift Left and Right
Bcc	Branch Conditionally
BCHG	Test Bit and Change
BCLR	Test Bit and Clear
BFCHG	Test Bit Field and Change
BFCLR	Test Bit Field and Clear
BFEXTS	Signed Bit Field Extract
BFEXTU	Unsigned Bit Field Extract
BFFFO	Bit Field Find First One
BFINS	Bit Field Insert
BFSET	Test Bit Field and Set
BFTST	Test Bit Field
BKPT	Breakpoint
BRA	Branch
BSET	Test Bit and Set
BSR	Branch to Subroutine
BTST	Test Bit
CAS	Compare and Swap Operands
CAS2	Compare and Swap Dual Operands
СНК	Check Register Against Bound
CHK2	Check Register Against Upper and Lower Bounds
CLR	Clear
CMP	Compare
CMPA	Compare Address
CMPI	Compare Immediate
CMPM	Compare Memory to Memory

A-20

MC68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

MC68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

A-21

Processor Instruction Summary

Table A-8. MC68030 Instruction Set Summary

(Continued)	
Mnemonic	Description
CMP2	Compare Register Against Upper and Lower Bounds
cpBcc	Branch on Coprocessor Condition
cpDBcc	Test Coprocessor Condition, Decrement and Branch
cpGEN	Coprocessor General Function
CPRESTORE	Coprocessor Restore Function
cpSAVE	Coprocessor Save Function
cpScc	Set on Coprocessor Condition
cpTRAPcc	Trap on Coprocessor Condition
DBcc	Test Condition, Decrement and Branch
DIVS, DIVSL	Signed Divide
DIVU, DIVUL	Unsigned Divide
EOR	Logical Exclusive-OR
EORI	Logical Exclusive-OR Immediate
EORI to CCR	Exclusive-OR Immediate to Condition Code Register
EORI to SR	Exclusive-OR Immediate to Status Register
EXG	Exchange Registers
EXT, EXTB	Sign Extend
ILLEGAL	Take Illegal Instruction Trap
JMP	Jump
JSR	Jump to Subroutine
LEA	Load Effective Address
LINK	Link and Allocate
LSL, LSR	Logical Shift Left and Right
MOVE	Move
MOVEA	Move Address
MOVE from CCR	Move from Condition Code Register
MOVE to CCR	Move to Condition Code Register
MOVE from SR	Move from Status Register
MOVE to SR	Move to Status Register
MOVE USP	Move User Stack Pointer
MOVEC	Move Control Register
MOVEM	Move Multiple Registers
MOVEP	Move Peripheral
MOVEQ	Move Quick
MOVES	Move Alternate Address Space
MULS	Signed Multiply
MULU	Unsigned Multiply
NBCD	Negate Decimal with Extend
NEG	Negate
NEGX	Negate with Extend
NOP	No Operation
NOT	Logical Complement

Processor Instruction Summary

Table A-8. MC68030 Instruction Set Summary (Concluded)

Mnemonic	Description
NBCD	Negate Decimal with Extend
NEG	Negate
NEGX	Negate with Extend
NOP	No Operation
NOT	Logical Complement
OR	Logical Inclusive-OR
ORI	Logical Inclusive-OR Immediate
ORI to CCR	Inclusive-OR Immediate to Condition Code Register
ORI to SR	Inclusive-OR Immediate to Status Register
PACK	Pack BCD
PEA	Push Effective Address
PFLUSH*	Invalidate Entries in the ATC
PFLUSHA*	Invalidate all Entries in the ATC
PLOAD*	Load an Entry into the ATC
PMOVE	Move PMMU Register
PTEST	Get Information about Logical Address
RESET	Reset External Devices
ROL, ROR	Rotate Left and Right
ROXL, ROXR	Rotate with Extend Left and Right
RTD	Return and Deallocate
RTE	Return from Exception
RTR	Return and Restore
RTS	Return from Subroutine
SBCD	Subtract Decimal with Extend
Scc	Set Conditionally
STOP	Stop
SUB	Subtract
SUBA	Subtract Address
SUBI	Subtract Immediate
SUBQ	Subtract Quick
SUBX	Subtract with Extend
SWAP	Swap Register Words
TAS	Test Operand and Set
TRAP	Trap
TRAPcc	Trap Conditionally
TRAPV	Trap on Overflow
TST	Test Operand
UNLK	Unlink
UNPK	Unpack BCD

*Not applicable to the MC68EC030

A-22

A.3.2 MC68030 Addressing Modes

The MC68030 supports 18 addressing modes as shown in Table A-9.

Table A-9. MC68030 Data Addressing Modes

Addressing Modes	Syntax
Register Direct Data Register Direct Address Register Direct	Dn An
Register Indirect Address Register Indirect Address Register Indirect with Postincrement Address Register Indirect with Predecrement Address Register Indirect with Displacement	(An) (An)+ -(An) (d ₁₆ ,An)
Register Indirect with Index Address Register Indirect with Index (8-Bit Displacement) Address Register Indirect with Index (Base Displacement)	(d ₈ ,An,Xn) (bd,An,Xn)
Memory Indirect Memory Indirect Postindexed Memory Indirect Preindexed	([bd,An],Xn,od) ([bd,An,Xn],od)
Program Counter Indirect with Displacement	(d ₁₆ ,PC)
Program Counter Indirect with Index PC Indirect with Index (8-Bit Displacement) PC Indirect with Index (Base Displacement)	(d ₈ ,PC,Xn) (bd,PC,Xn)
Program Counter Memory Indirect PC Memory Indirect Postindexed PC Memory Indirect Preindexed	([bd,PC],Xn,od) ([bd,PC,Xn],od)
Absolute Absolute Short Absolute Long	(xxx).W (xxx).L
Immediate	# <data></data>

A.4 MC68040 PROCESSORS

The following paragraphs provide information on the MC68040 instruction set and addressing modes.

A.4.1 MC68040 Instruction Set

Table A-10 lists the instructions used with the MC68040 processor.

Mnemonic	Description
ABCD	Add Decimal with Extend
ADD	Add
ADDA	Add Address
ADDI	Add Immediate
ADDQ	Add Quick
ADDX	Add with Extend
AND	Logical AND
ANDI	Logical AND Immediate
ANDI to CCR	AND Immediate to Condition Code Register
ANDI to SR	AND Immediate to Status Register
ASL, ASR	Arithmetic Shift Left and Right
Bcc	Branch Conditionally
BCHG	Test Bit and Change
BCLR	Test Bit and Clear
BFCHG	Test Bit Field and Change
BFCLR	Test Bit Field and Clear
BFEXTS	Signed Bit Field Extract
BFEXTU	Unsigned Bit Field Extract
BFFFO	Bit Field Find First One
BFINS	Bit Field Insert
BFSET	Test Bit Field and Set
BFTST	Test Bit Field
BKPT	Breakpoint
BRA	Branch
BSET	Test Bit and Set
BSR	Branch to Subroutine
BTST	Test Bit
CAS	Compare and Swap Operands
CAS2	Compare and Swap Dual Operands
CHK	Check Register Against Bound
CHK2	Check Register Against Upper and Lower Bounds
CINV	Invalidate Cache Entries
CLR	Clear
CMP	Compare
CMPA	Compare Address

A-24

MC68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

MC68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

A-25

Processor Instruction Summary

Table A-10. MC68040 Instruction Set (Continued)

Mnemonic	Description			
CMPI	Compare Immediate			
CMPM	Compare Memory to Memory			
CMP2	Compare Register Against Upper and Lower Bounds			
CPUSH	Push then Invalidate Cache Entries			
DBcc	Test Condition, Decrement and Branch			
DIVS, DIVSL	Signed Divide			
DIVU, DIVUL	Unsigned Divide			
EOR	Logical Exclusive-OR			
EORI EORI to CCR	Logical Exclusive-OR Immediate			
EORI to SR	Exclusive-OR Immediate to Condition Code Register Exclusive-OR Immediate to Status Register			
EXG	Exchange Registers			
EXT, EXTB	Sign Extend			
FABS ¹	Floating-Point Absolute Value			
FSABS, FDABS ¹	Floating-Point Absolute Value (Single/Double Precision)			
FACOS ^{1,2}	Floating-Point Arc Cosine			
FADD ¹	Floating-Point Add			
	Floating-Point Add (Single/Double Precision)			
FSADD, FDADD ¹	Floating-Point Act (Single/Double Flectsion)			
FASIN ^{1,2}				
FATAN ^{1,2}	Floating-Point Arc Tangent			
FATANH ^{1,2}	Floating-Point Hyperbolic Arc Tangent			
FBcc ¹	Floating-Point Branch			
FCMP ¹	Floating-Point Compare			
FCOS ^{1,2}	Floating-Point Cosine			
FCOSH ^{1,2}	Floating-Point Hyperbolic Cosine			
FDBcc ¹	Floating-Point Decrement and Branch			
FDIV ¹	Floating-Point Divide			
FSDIV, FDDIV ¹	Floating-Point Divide (Single/Double Precision)			
FETOX ^{1,2}	Floating-Point ex			
FETOXM1 ^{1,2}	Floating-Point e ^x - 1			
FGETEXP ^{1,2}	Floating-Point Get Exponent			
FGETMAN ^{1,2}	Floating-Point Get Mantissa			
FINT ^{1,2}	Floating-Point Integer Part			
FINTRZ ^{1,2}	Floating-Point Integer Part, Round-to-Zero			
FLOG10 ^{1,2}	Floating-Point Log ₁₀			
	Floating-Point Log ₂			
FLOG2 ^{1,2}	0 02			
FLOGN ^{1,2}	Floating-Point Loge			
FLOGNP1 ^{1,2}	Floating-Point Log _e (x + 1)			
FMOD ^{1,2}	Floating-Point Modulo Remainder			
FMOVE ¹	Move Floating-Point Register			
FSMOVE, FDMOVE ¹	Move Floating-Point Register (Single/Double Precision)			
FMOVECR1	Move Constant ROM			
FMOVEM ¹	Move Multiple Floating-Point Registers			
EMUI ¹	Floating-Point Multiply			

Processor Instruction Summary

Table A-10. MC68040 Instruction Set (Continued)

Mnemonic	Description		
FNEG ¹	Floating-Point Negate		
FSNEG, FDNEG ¹	Floating-Point Negate (Single/Double Precision)		
FNOP ¹	Floating-Point No Operation		
FREM ^{1,2}	IEEE Remainder		
FRESTORE ¹	Restore Floating-Point Internal State		
FSAVE ¹	Save Floating-Point Internal State		
FSCALE ^{1,2}	Floating-Point Scale Exponent		
FScc ¹	Floating-Point Set According to Condition		
FSGLDIV ^{1,2}	Single-Precision Divide		
FSGLMUL ^{1,2}	Single-Precision Multiply		
FSIN ^{1,2}	Sine		
FSINCOS ^{1,2}	Simultaneous Sine and Cosine		
FSINH ^{1,2}	Hyperbolic Sine		
FSQRT ¹	Floating-Point Square Root		
FSSQRT, FDSQRT ¹	Floating-Point Square Root (Single/Double Precision)		
FSUB ¹	Floating-Point Subtract		
FSSUB, FDSUB ¹	Floating-Point Subtract (Single/Double Precision)		
FTAN ^{1,2}	Tangent		
	Hyperbolic Tangent		
FTANH ^{1,2}			
FTENTOX ^{1,2}	Floating-Point 10 ^x		
FTRAPcc ^{1,2}	Floating-Point Trap On Condition		
FTST ¹	Floating-Point Test		
FTWOTOX ^{1,2}	Floating-Point 2 ^x		
ILLEGAL JMP	Take Illegal Instruction Trap		
JSR	Jump Jump to Subroutine		
LEA	Load Effective Address		
LINK	Link and Allocate		
LSL, LSR	Logical Shift Left and Right		
MOVE	Move		
MOVEA	Move Address		
MOVE from CCR	Move from Condition Code Register		
MOVE to CCR	Move to Condition Code Register		
MOVE from SR	Move from Status Register		
MOVE to SR	Move to Status Register		
MOVE USP	Move User Stack Pointer		
MOVEC	Move Control Register		
MOVEM	Move Multiple Registers		
MOVEP	Move Peripheral		
MOVEQ	Move Quick		
MOVES	Move Alternate Address Space		
MOVE16	16-Byte Block Move		
MULS	Signed Multiply		
MULU	Unsigned Multiply		

MOTOROLA

MOTOROLA

Table A-10. MC68040 Instruction Set (Concluded)

Mnemonic	Description			
NBCD	Negate Decimal with Extend			
NEG	Negate			
NEGX	Negate with Extend			
NOP	No Operation			
NOT	Logical Complement			
OR	Logical Inclusive-OR			
ORI	Logical Inclusive-OR Immediate			
ORI to CCR	Inclusive-OR Immediate to Condition Code Register			
ORI to SR	Inclusive-OR Immediate to Status Register			
PACK	Pack BCD			
PEA	Push Effective Address			
PFLUSH	Flush Entry(ies) in the ATCs			
PFLUSHA	Flush all Entry(ies) in the ATCs			
PTEST	Test a Logical Address			
RESET	Reset External Devices			
ROL, ROR	Rotate Left and Right			
ROXL, ROXR	Rotate with Extend Left and Right			
RTD	Return and Deallocate			
RTE	Return from Exception			
RTR	Return and Restore			
RTS	Return from Subroutine			
SBCD	Subtract Decimal with Extend			
Scc	Set Conditionally			
STOP	Stop			
SUB	Subtract			
SUBA	Subtract Address			
SUBI	Subtract Immediate			
SUBQ	Subtract Quick			
SUBX	Subtract with Extend			
SWAP	Swap Register Words			
TAS	Test Operand and Set			
TRAP	Trap			
TRAPcc	Trap Conditionally			
TRAPV	Trap on Overflow			
TST	Test Operand			
UNLK	Unlink			
UNPK	Unpack BCD			
NOTES	•			

A.4.2 MC68040 Addressing Modes

The MC68040 supports 18 addressing modes as shown in Table A-11.

Table A-11. MC68040 Data Addressing Modes

Addressing Modes	Syntax
Register Direct Data Register Direct Address Register Direct	Dn
Register Indirect Address Register Indirect Address Register Indirect with Postincrement Address Register Indirect with Predecrement Address Register Indirect with Displacement	(An) (An) + -(An) (d ₁₆ ,An)
Register Indirect with Index Address Register Indirect with Index (8-Bit Displacement) Address Register Indirect with Index (Base Displacement)	(d ₈ ,An,Xn) (bd,An,Xn)
Memory Indirect Memory Indirect Postindexed Memory Indirect Preindexed	([bd,An],Xn,od) ([bd,An,Xn],od)
Program Counter Indirect with Displacement	(d ₁₆ ,PC)
Program Counter Indirect with Index PC Indirect with Index (8-Bit Displacement) PC Indirect with Index (Base Displacement)	(d ₈ ,PC,Xn) (bd,PC,Xn)
Program Counter Memory Indirect PC Memory Indirect Postindexed PC Memory Indirect Preindexed	([bd,PC],Xn,od) ([bd,PC,Xn],od)
Absolute Absolute Short Absolute Long	xxx.W xxx.L
Immediate	# < data >

NOTES: 1. Not applicable to the MC68EC040 and MC68LC040. 2. These instructions are software supported.

A-28

MC68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

MC68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

A-29

Processor Instruction Summary

A.5 MC68881/MC68882 COPROCESSORS

The following paragraphs provide information on the MC68881/MC68882 instruction set and addressing modes

A.5.1 MC68881/MC68882 Instruction Set

Table A-12 lists the instructions used with the MC68881/MC68882 coprocessors.

Table A-12, MC68881/MC68882 Instruction Set

Table A-12. MC68881/MC68882 Instruction Set				
Mnemonic	Description			
FABS	Floating-Point Absolute Value			
FACOS	Floating-Point Arc Cosine			
FADD	Floating-Point Add			
FASIN	Floating-Point Arc Sine			
FATAN	Floating-Point Arc Tangent			
FATANH	Floating-Point Hyperbolic Arc Tangent			
FBcc	Floating-Point Branch			
FCMP	Floating-Point Compare			
FCOS	Floating-Point Cosine			
FCOSH	Floating-Point Hyperbolic Cosine			
FDBcc	Floating-Point Decrement and Branch			
FDIV	Floating-Point Divide			
FETOX	Floating-Point ex			
FETOXM1	Floating-Point ex - 1			
FGETEXP	Floating-Point Get Exponent			
FGETMAN	Floating-Point Get Mantissa			
FINT	Floating-Point Integer Part			
FINTRZ	Floating-Point Integer Part, Round-to-Zero			
FLOG10	Floating-Point Log10			
FLOG2	Floating-Point Log2			
FLOGN	Floating-Point Loge			
FLOGNP1	Floating-Point Loge (x + 1)			
FMOD	Floating-Point Modulo Remainder			
FMOVE	Move Floating-Point Register			
FMOVECR	Move Constant ROM			
FMOVEM	Move Multiple Floating-Point Registers			
FMUL	Floating-Point Multiply			
FNEG	Floating-Point Negate			
FNOP	Floating-Point No Operation			
FREM	IEEE Remainder			
FRESTORE	Restore Floating-Point Internal State			
FSAVE	Save Floating-Point Internal State			
FSCALE	Floating-Point Scale Exponent			
FScc	Floating-Point Set According to Condition			
FSGLDIV	Single-Precision Divide			
FSGLMUL	Single-Precision Multiply			
FSIN	Sine			
FSINCOS	Simultaneous Sine and Cosine			
FSINH	Hyperbolic Sine			

Processor Instruction Summary

Table A-12. MC68881/MC68882 Instruction Set

Mnemonic	Description				
FSQRT	Floating-Point Square Root				
FSUB	Floating-Point Subtract	loating-Point Subtract			
FTAN	Tangent				
FTANH	Hyperbolic Tangent				
FTENTOX	Floating-Point 10x				
FTRAPcc	Floating-Point Trap On Condition				
FTST	Floating-Point Test				
FTWOTOX	Floating-Point 2x				

A.5.2 MC68881/MC68882 Addressing Modes

The MC68881/MC68882 does not perform address calculations. When the floating-point coprocessor instructs the processor to transfer an operand via the coprocessor interface, the processor performs the addressing mode calculation requested in the instruction.

A.6 MC68851 COPROCESSORS

The following paragraphs provide information on the MC68851 instruction set and address-ing modes.

A.6.1 MC68851 Instruction Set

Table A-13 lists the instructions used with the MC68851 coprocessor.

Table A-13. MC68851 Instruction Set

Mnemonic	Description	
PBcc	Branch on PMMU Condition	
PDBcc	Test, Decrement, and Branch on PMMU Condition	
PFLUSH	Flush Entry(ies) in the ATCs	
PFLUSHA	Flush Entry(ies) in the ATCs	
PFLUSHR	Flush Entry(ies) in the ATCs and RPT Entries	
PFLUSHS	Flush Entry(ies) in the ATCs	
PLOAD	Load an Entry into the ATC	
PMOVE	Move PMMU Register	
PRESTORE	PMMU Restore Function	
PSAVE	PMMU Save Function	
PScc	Set on PMMU Condition	
PTEST	Test a Logical Address	
PTRAPcc	Trap on PMMU Condition	
PVALID	Validate a Pointer	

A.6.2 MC68851 Addressing Modes

The MC68851 supports the same addressing modes as the MC68020 (see Table A-7).

MOTOROLA

APPENDIX B EXCEPTION PROCESSING REFERENCE

This appendix provides a quick reference for system programmers who are already familiar with the stack frames. For more detail, please refer to the appropriate userOs manual.

B.1 EXCEPTION VECTOR ASSIGNMENTS FOR THE M68000 FAMILY

Table B-1 lists all vector assignments up to and including the MC68040 and its derivatives. Many of these vector assignments are processor specific. For instance, vector 13, the coprocessor protocol violation vector, only applies to the MC68020, MC68EC020, MC68030, and MC68EC030. Refer to the appropriate user's manual to determine which exception type is applicable to a specific processor.

MC68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

MC68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

Exception Processing Reference

Table B-1. Exception Vector Assignments for the M68000 Family

Vector	Vector				
Number(s)	Offset (Hex)	Assignment			
0	000	Reset Initial Interrupt Stack Pointer			
1	004	Reset Initial Program Counter			
2	008	Access Fault			
3	00C	Address Error			
4	010	Illegal Instruction			
5	014	Integer Divide by Zero			
6	018	CHK, CHK2 Instruction			
7	01C	FTRAPcc, TRAPcc, TRAPV Instructions			
8	020	Privilege Violation			
9	024	Trace			
10	028	Line 1010 Emulator (Unimplemented A- Line Opcode)			
11	02C	Line 1111 Emulator (Unimplemented F-Line Opcode)			
12	030	(Unassigned, Reserved)			
13	034	Coprocessor Protocol Violation			
14	038	Format Error			
15	03C	Uninitialized Interrupt			
16-23	040-05C	(Unassigned, Reserved)			
24	060	Spurious Interrupt			
25	064	Level 1 Interrupt Autovector			
26	068	Level 2 Interrupt Autovector			
27	06C	Level 3 Interrupt Autovector			
28	070	Level 4 Interrupt Autovector			
29	074	Level 5 Interrupt Autovector			
30	078	Level 6 Interrupt Autovector			
31	07C	Level 7 Interrupt Autovector			
32-47	080-0BC	TRAP #0 D 15 Instruction Vectors			
48	0C0	FP Branch or Set on Unordered Condition			
49	0C4	FP Inexact Result			
50	0C8	FP Divide by Zero			
51	0CC	FP Underflow			
52	0D0	FP Operand Error			
53	0D4	FP Overflow			
54	0D8	FP Signaling NAN			
55	0DC	FP Unimplemented Data Type (Defined for MC68040)			
56	0E0	MMU Configuration Error			
57	0E4	MMU Illegal Operation Error			
58	0E8	MMU Access Level Violation Error			
59-63	0ECD0FC	(Unassigned, Reserved)			
64-255	100D3FC	User Defined Vectors (192)			

B.2 EXCEPTION STACK FRAMES

Figures B-1 through B-15 illustrate all exception stack frames for the M68000 family.



Figure B-1. MC68000 Group 1 and 2 Exception Stack Frame

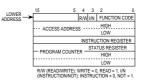


Figure B-2. MC68000 Bus or Address Error Exception Stack Frame



Figure B-3. Four-Word Stack Frame, Format \$0

	15	0
SP->		STATUS REGISTER
+\$02		PROGRAM COUNTER
+\$06	0001	VECTOR OFFSET

Figure B-4. Throwaway Four-Word Stack Frame, Format \$1

B-1

Exception Processing Reference

1	5		0
SP 🔶		STATUS REGISTER	
+\$02		PROGRAM COUNTER	_
+\$06	0010	VECTOR OFFSET	
+\$08		- ADDRESS	_
_			

Figure B-5. Six-Word Stack Frame, Format \$2

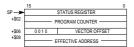


Figure B-6. MC68040 Floating-Point Post-Instruction Stack Frame, Format \$3

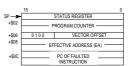


Figure B-7. MC68EC040 and MC68LC040 Floating-Point Unimplemented Stack Frame, Format \$4



Figure B-8. MC68040 Access Error Stack Frame, Format \$7

B-4

MC68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

MOTOROLA

MC68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

B-5

Exception Processing Reference



Figure B-9. MC68010 Bus and Address Error Stack Frame, Format \$8

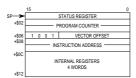


Figure B-10. MC68020 Bus and MC68030 Coprocessor Mid-Instruction Stack Frame, Format \$9 Exception Processing Reference

	15					0
SP 🔶					STATUS REGISTER	
+\$02	_			_	PROGRAM COUNTER	
+\$06	1	0	1	0	VECTOR OFFSET	
+\$08					INTERNAL REGISTER	
+\$0A				SPI	ECIAL STATUS REGISTER	
+\$0C				INS'	TRUCTION PIPE STAGE C	
+\$0E				INS	TRUCTION PIPE STATE B	
+\$10				DAT	A CYCLE FAULT ADDRESS	
+\$12				DAI	A CTOLE FAULT ADDRESS	
+\$14					INTERNAL REGISTER	
+\$16					INTERNAL REGISTER	
+\$18						
+\$1A					ATA OUTFUT BUFFER	
+\$1C					INTERNAL REGISTER	
+\$1E					INTERNAL REGISTER	

Figure B-11. MC68020 and MC68030 Short Bus Cycle Stack Frame, Format \$A

B-9

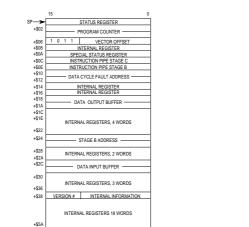


Figure B-12. MC68020 and MC68030 Long Bus Cycle Stack Frame, Format \$B

	15 0			
SP 🔶	STATUS REGISTER			
+\$02	RETURN PROGRAM COUNTER HIGH			
	RETURN PROGRAM COUNTER LOW			
+\$06	1 1 0 0 VECTOR OFFSET			
+\$08	FAULTED ADDRESS HIGH			
	FAULTED ADDRESS LOW			
+\$0C	DBUF HIGH			
	DBUF LOW			
+\$10	CURRENT INSTRUCTION PROG. COUNTER HIGH			
	CURRENT INSTRUCTION PROG. COUNTER LOW			
+\$14	INTERNAL TRANSFER COUNT REGISTER			
+\$16	0 0 SPECIAL STATUS WORD			

Figure B-13. CPU32 Bus Error for Prefetches and Operands Stack Frame, Format \$C

MOTOROLA

B-8	MC68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

Exception Processing Reference

B.3 FLOATING-POINT STACK FRAMES

Figures B-16 through B-23 illustrate floating-point stack frames for the MC68881/MC68882 and the MC68040.

31 23 15 (UNDEFINED) 7 (RESERVED) \$00

Figure B-16. MC68881/MC68882 and MC68040 Null Stack Frame

	31	23	15	7	0
+\$00	VERSION NUMBER	+\$18		(RESERVED)	
+\$04	COMMAND/CONDI	TION REGISTER		(RESERVED)	
+\$08					
+\$0C			AL OPERAND YTES)		
+\$10		(125	1120)		
+\$14		OPERAND	REGISTER		
+\$18		BIU	LAGS		

Figure B-17. MC68881 Idle Stack Frame

	15		0								
SP 🔶			STATUS REGISTER								
+\$02	1	RETURN	PROGRAM COUNTER HIGH								
	RETURN PROGRAM COUNTER LOW										
+\$06	1 1	0 0	VECTOR OFFSET								
+\$08		FA	ULTED ADDRESS HIGH								
	FAULTED ADDRESS LOW										
+\$0C			DBUF HIGH								
	DBUF LOW										
+\$10	CURRENT INSTRUCTION PROG. COUNTER HIGH										
	CURRENT INSTRUCTION PROG. COUNTER LOW										
+\$14	IN	TERNAL	TRANSFER COUNT REGISTER								
+\$16	0 1	SF	PECIAL STATUS WORD								

Figure B-14. CPU32 Bus Error on MOVEM Operand Stack Frame, Format \$C



Figure B-15. CPU32 Four- and Six-Word Bus Error Stack Frame, Format \$C

MOTOROLA

MC68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

Exception Processing Reference

	31	23	15	7	Ō
+\$00	VERSION NUMBER	+\$B4		(RESERVED)	
+\$04					
+\$08					
+\$08 +\$0C _ +\$AC	7	INTERNAL	REGISTERS		
+\$AC			YTES)		
+\$B0					
+\$B4					


Figure B-18. MC68881 Busy Stack Frame


	31	23	15	7	0
+\$00	VERSION NUMBER	+\$38		(RESERVED)	
+\$04	COMMAND/CONDI	TION REGISTER		(RESERVED)	
+\$08					
	Ļ		REGISTERS		
4	1	(32 B	YTES)		4
+\$24					
+\$28					
+\$2C			AL OPERAND YTES)		
+\$30		(12.0	1120)		
+\$34		OPERAND	REGISTER		
+\$38		BIU	FLAGS		

Figure B-19. MC68882 Idle Stack Frame



Figure B-20. MC68882 Busy Stack Frame

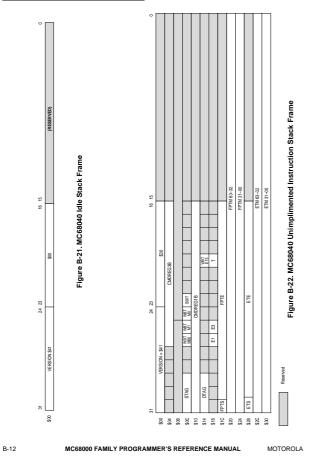

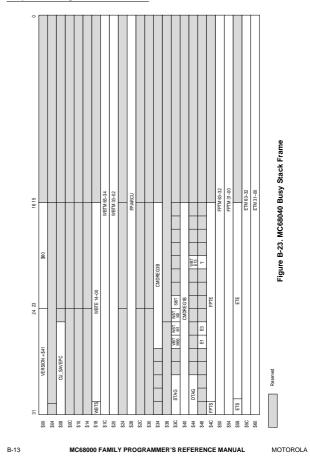

Exception Processing Reference

APPENDIX C S-RECORD OUTPUT FORMAT

The S-record format for output modules is for encoding programs or data files in a printable format for transportation between computer systems. The transportation process can be visually monitored, and the S-records can be easily edited.

C.1 S-RECORD CONTENT

Visually, S-records are essentially character strings made of several fields that identify the record type, record length, memory address, code/data, and checksum. Each byte of binary data encodes as a two- character hexadecimal number: the first character represents the high-order four bits, and the second character represents the low-order four bits of the byte. Figure C-1 illustrates the five fields that comprise an S-record. Table C-1 lists the composition of each S- record field.

TYPE RECORD LENGTH ADDRESS CODE/DATA CHECKSUM

Figure C-1. Five Fields of an S-Record

Table C-1. Field Composition of an S-Record

Field	Printable Characters	Contents
Туре	2	S-record type—S0, S1, etc.
Record Length	2	The count of the character pairs in the record, excluding the type and record length.
Address	4, 6, or 8	The 2-, 3-, or 4-byte address at which the data field is to be loaded into memory.
Code/Data	0–2n	From 0 to n bytes of executable code, memory loadable data, or descriptive information. For compatibility with teletypewriters, some programs may limit the number of bytes to as few as 28 (56 printable characters in the S-record).
Checksum	2	The least significant byte of the one's complement of the sum of the values represented by the pairs of characters making up the record length, address, and the code/data fields.

MOTOROLA

S-Record Output Format

When downloading S-records, each must be terminated with a CR. Additionally, an S-record may have an initial field that fits other data such as line numbers generated by some time sharing systems. The record length (byte count) and checksum fields ensure transmission accuracy

C.2 S-RECORD TYPES

There are eight types of S-records to accommodate the encoding, transportation, and decoding functions. The various Motorola record transportation control programs (e.g. upload, download, etc.), cross assemblers, linkers, and other file creating or debugging pro-grams, only utilize S-records serving the programOs purpose. For more information on support of specific S-records, refer to the userOs manual for that program.

An S-record format module may contain S-records of the following types

- S0 The header record for each block of S-records. The code/data field may contain any descriptive information identifying the following block of S-records. Under VERSAdos, the resident linkerOs IDENT command can be used to designate module name, version number, revision number, and description information that will make up the header record. The address field is normally zeros. A record containing code/data and the 2-byte address at which the code/data S1 —
- is to reside. S2 - A record containing code/data and the 3-byte address at which the code/data
- is to reside. S3 — A record containing code/data and the 4-byte address at which the code/data
- is to reside A record containing the number of S1, S2, and S3 records transmitted in a par-S5 ticular block. This count appears in the address field. There is no code/data field
- S7 A termination record for a block of S3 records. The address field may optionally contain the 4-byte address of the instruction to which control is to be passed.
- There is no code/data field. A termination record for a block of S2 records. The address field may optionally S8 contain the 3-byte address of the instruction to which control is to be passed. There is no code/data field.
- A termination record for a block of S1 records. The address field may optionally S9 contain the 2-byte address of the instruction to which control is to be passed. Under VERSAdos, the resident linkerOs ENTRY command can be used to specify this address. If this address is not specified, the first entry point specification encountered in the object module input will be used. There is no code/ data field.

Each block of S-records uses only one termination record. S7 and S8 records are only active when control is to be passed to a 3- or 4- byte address; otherwise, an S9 is used for termi-nation. Normally, there is only one header record, although it is possible for multiple header records to occur.

C-2

MC68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

C.3 S-RECORD CREATION

S-Record Output Format

Dump utilities, debuggers, a VERSAdos resident linkage editor, or cross assemblers and linkers produce S-record format programs. On VERSAdos systems, the build load module (MBLM) utility allows an executable load module to be built from S-records. It has a counterpart utility in BUILDS that allows an S-record file to be created from a load module

Programs are available for downloading or uploading a file in S- record format from a host system to an 8- or 16-bit microprocessor- based system. A typical S-record-format module is printed or displayed as follows:

S00600004844521B S1130000285F245F2212226A000424290008237C2A S1130010002000800082629001853812341001813 S113002041E900084E42234300182342000824A952 S107003000144ED492 S9030000FC

The module has an S0 record, four S1 records, and an S9 record. The following character pairs comprise the S-record-format module.

S0 Record:

- S0 S-record type S0, indicating that it is a header record.
- 06 Hexadecimal 06 (decimal 6), indicating that six character pairs (or ASCII bytes) follow.
- 0000-A 4-character, 2-byte address field; zeros in this example.
- 48 ASCII H 44 ASCII D
- 52 ASCII R
- 1B The checksum

First S1 Record

- S1 S-record type S1, indicating that it is a code/data record to be loaded/verified at a 2-byte address. 13 — Hexadecimal 13 (decimal 19), indicating that 19 character pairs, representing
- 19 bytes of binary data, follow. 0000—A 4-character, 2-byte address field (hexadecimal address 0000) indicating where the data that follows is to be loaded.

MC68000 FAMILY PROGRAMMER'S REFERENCE MANUAL

MOTOROLA

C-3

S-Record Output Format

S-Record Output Format

The next 16 character pairs of the first S1 record are the ASCII bytes of the actual program code/data. In this assembly language example, the programOs hexadecimal opcodes are sequentially written in the code/data fields of the S1 records.

Opcode		Instruction
285F	MOVE.L	(A7) +, A4
245F	MOVE.L	(A7) +, A2
2212	MOVE.L	(A2), D1
226A0004	MOVE.L	4(A2), A1
24290008	MOVE.L	FUNCTION(A1), D2
237C	MOVE.L	#FORCEFUNC, FUNCTION(A1)

The rest of this code continues in the remaining S1 recordOs code/data fields and stores in memory location 0010, etc

2A — The checksum of the first S1 record.

The second and third S1 records also contain hexadecimal 13 (decimal 19) character pairs and end with checksums 13 and 52, respectively. The fourth S1 record contains 07 character ter pairs and has a checksum of 92.

S9 Record:

- S9 S-record type S9, indicating that it is a termination record.
 O3 Hexadecimal O3, indicating that three character pairs (3 bytes) follow.
- 0000—The address field, zeros. FC The checksum of the S9 record.

Each printable character in an S-record encodes in hexadecimal (ASCII in this example) representation of the binary bits that transmit. Figure C-2 illustrates the sending of the first S1 record. Table C-2 lists the ASCII code for S-records.

Γ		TY	PE		REC	CORD	LEN	GTH	ADDRESS					CODE/DATA									CHECKSUM						
Γ	S			1		1		3	()		0		0		0		2	1	3		5	F		****		2		A
Г	5	3	3	1	3	1	3	3	3	0	3	0	3	0	3	0	3	2	3	8	3	5	4	6	****	3	2	4	1
0	101	0011	001	10001	0011	0001	0011	0011	0011	0000	001	0000	001	10000	001	0000	0011	0010	0011	1000	0011	0101	0100	0110	****	0011	0010	0100	0001

Figure C-2, Transmission of an S1 Record

Table C-2. ASCII Code Most Significant Digit

Significant													
Digit	0	1	2	3	4	5	6	7					
0	NUL	DLE	SP	0	@	Р		р					
1	SOH	DC1	!	1	A	Q	а	q					
2	STX	DC2		2	В	R	b	r					
3	ETX	DC3	#	3	С	S	с	S					
4	EOT	DC4	\$	4	D	Т	d	t					
5	ENQ	NAK	%	5	E	U	е	u					
6	ACK	SYN	&	6	F	V	f	v					
7	BEL	ETB	,	7	G	W	g	w					
8	BS	CAN	(8	н	х	h	х					
9	HT	EM)	9	I	Y	i	У					
A	LF	SUB	•	:	J	Z	j	z					
В	VT	ESC	+	;	к]	k	{					
С	FF	FS	,	<	L	/	I						
D	CR	GS	-	=	м]	m	}					
E	SO	RS		>	N	^	n	~					
F	SI	US	/	?	0	-	0	DEL					

MOTOROLA

Least

Significant

S-Record Output Format

C-6 MC68000 FAMILY PROGRAMMER'S REFERENCE MANUAL MOTOROLA