
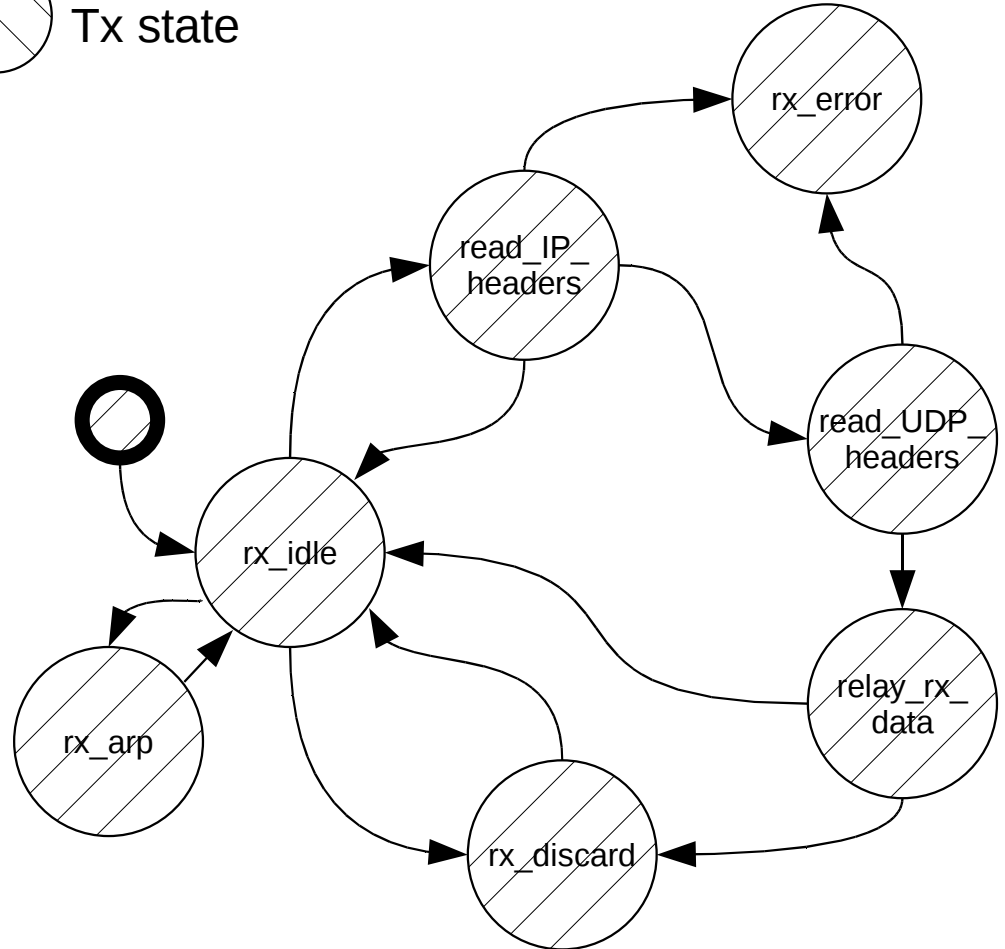


State rx_error is entered when there is something seriously wrong with the headers, and it's probably not going to get any better.

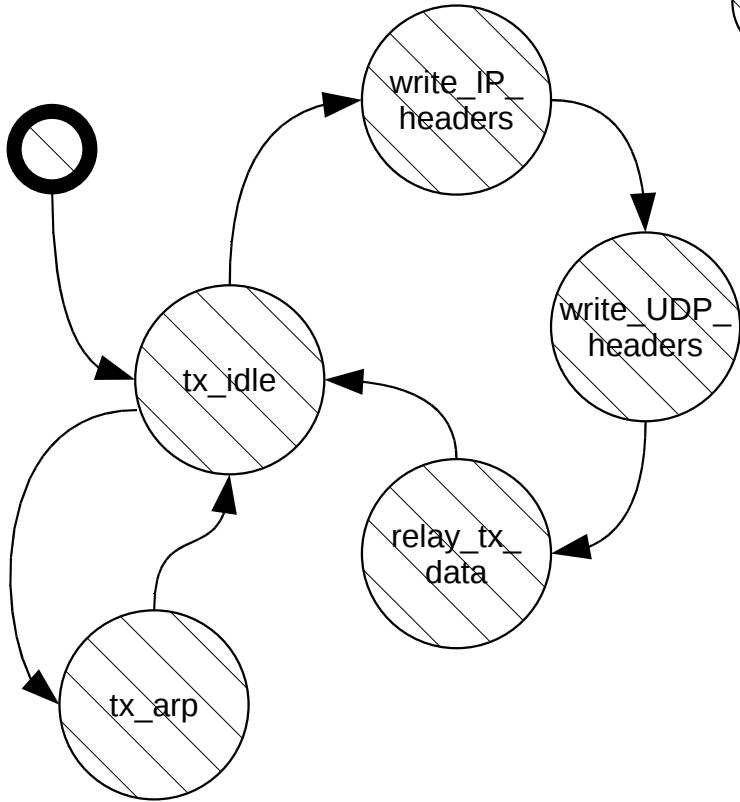

State rx_discard is entered in case of an invalid transmission (e.g. not supported protocol), but it's also used when the UDP packet is smaller than min. ethernet packet length and there are extra fillings to be removed.